

Samsung Galaxy Ace Touch screen Glass, LCD Display, Earpiece, Loudspeaker, Main Camera Replacement

Samsung Galaxy Ace Touch screen Glass, LCD Display Replacement

Written By: ZFix



INTRODUCTION

S5830, S5830i - how to disassemble and change / replace the loudspeaker, earpiece, main camera, LCD Display, Touch screen Digitizer Glass, etc.

[video: https://www.youtube.com/watch?v=pMEx34gMtLI]



TOOLS:

- Spudger (1)
- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)
- Tweezers (1)

Step 1 — Touch screen Glass, LCD Display, Earpiece, Loudspeaker, Main Camera





- Switch off the phone.
- Remove the battery and any installed SIM and memory card.


Step 2








- Remove the 7 Phillips screws.
- Use a plastic tool to remove the back cover.
- vibrating motor

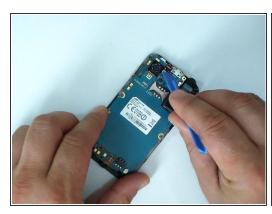

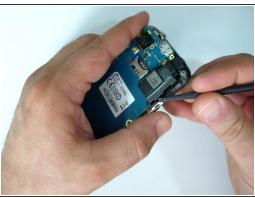




- Disconnect the earpiece & light sensor flex cable.
- Take off the Volume Up/Down buttons flex cable.
- Do the same with the Power button flex cable.

Be careful don't brake the flex cables.

Step 4

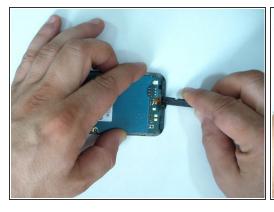






- Lift the microphone.
- Lift the board from the right side and disconnect the LCD display flex cable.
- Remove the board from the middle frame.






This is the main camera.


Step 6

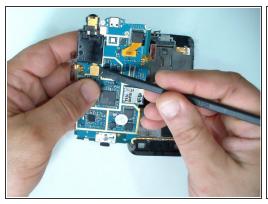



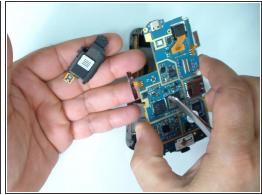


This is the loudspeaker & audio jack connector module.

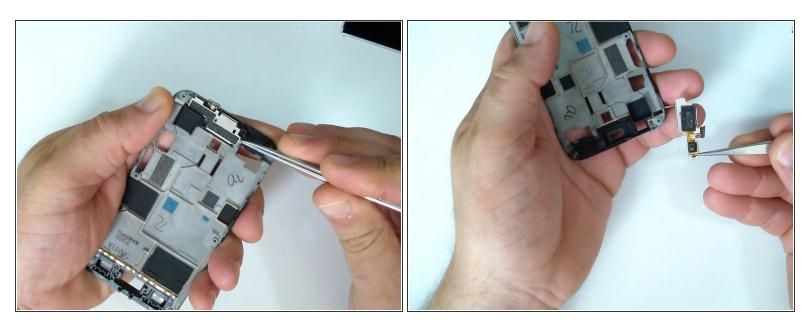

Loudspeaker and light sensor module,

Step 8

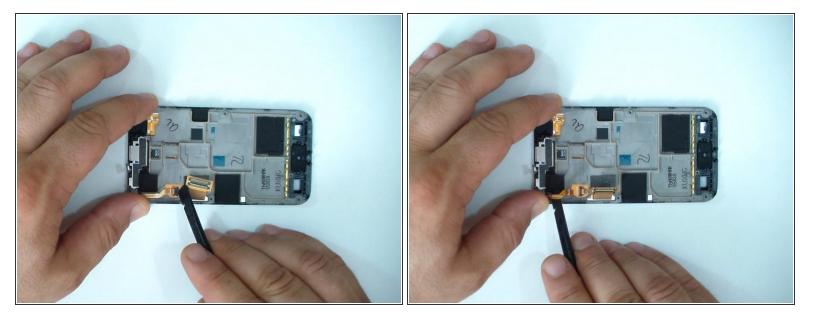

Disconnect the touch screen flex cable.







- Use a hair dryer and warm the touch screen glass to make adhesive soften.
- Use a plastic tool for separating the glass from the middle frame.


Step 10








Again by using a plastic tool, separate the LCD display from the middle frame.

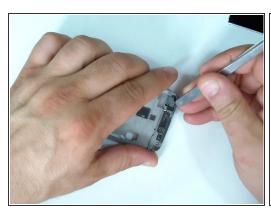

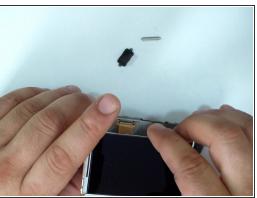



Clean the middle frame and install the LCD display.

Step 12





Install the touch screen and start with reassembling.



- That is all.
- .
- .
- .
- .
- Did you do it successfully?

To reassemble your device, follow these instructions in reverse order.