




Casio Exilim EX-Z850 LCD Screen Replacement

This guide will show you how to remove the LCD...

Written By: Christian

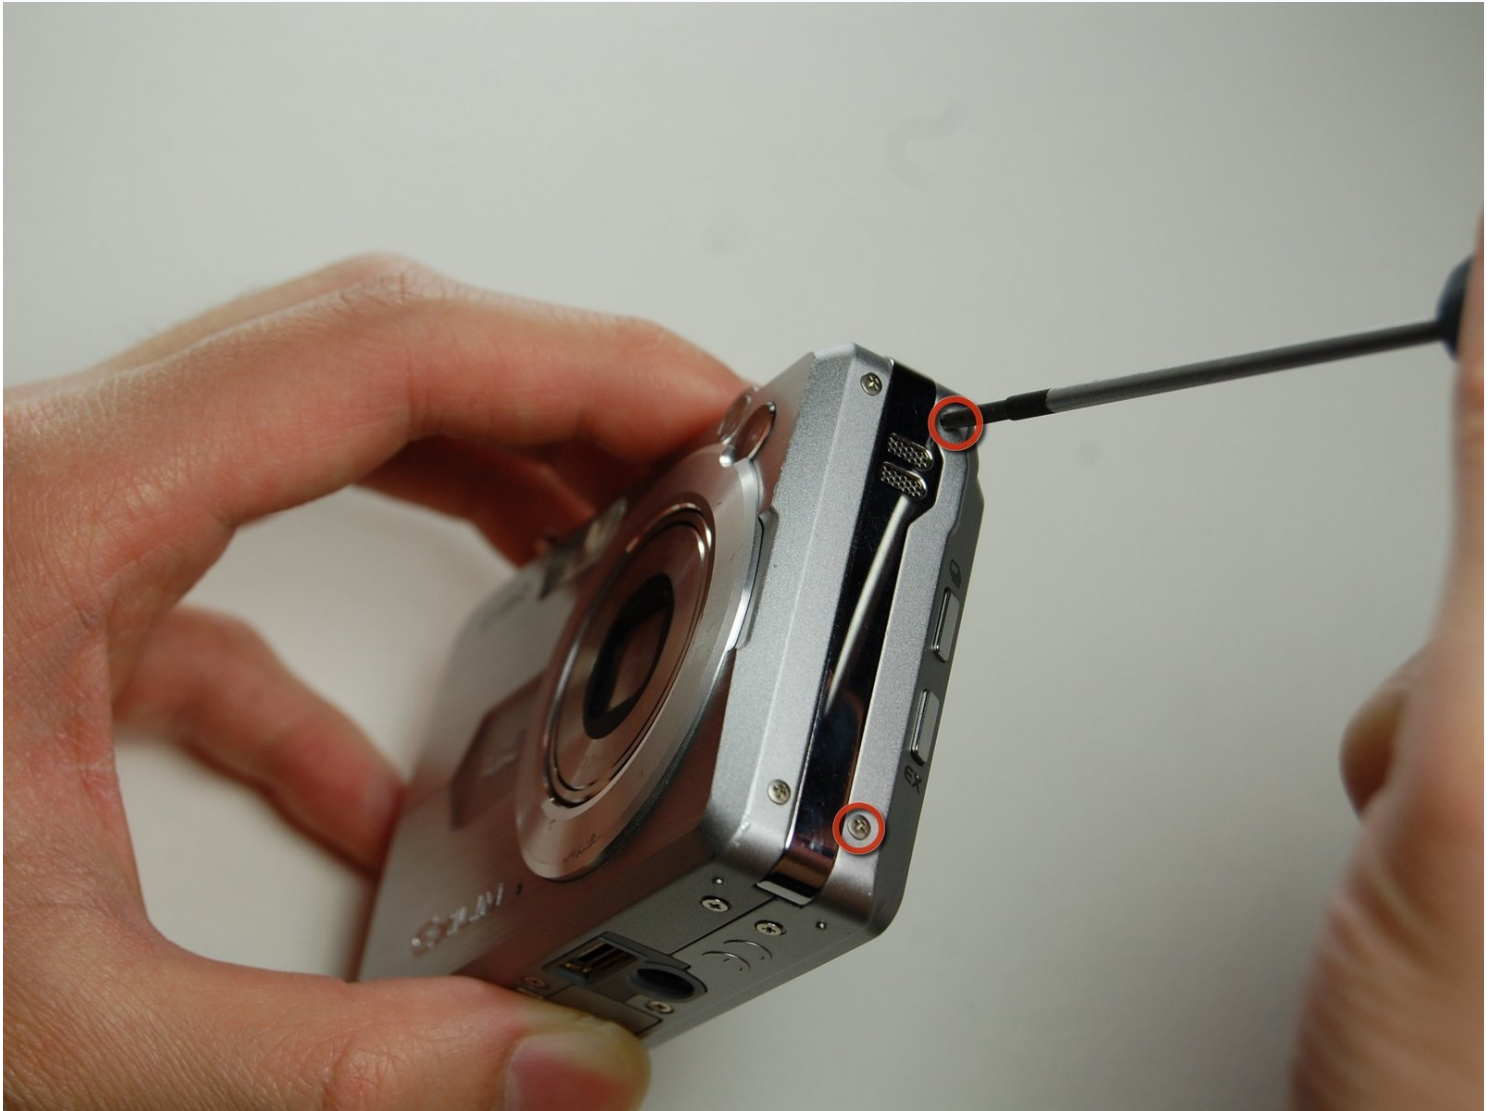

INTRODUCTION

This guide will show you how to remove the LCD screen off the Casio Camera.

TOOLS:

Phillips #00 Screwdriver (1)
Anti-Static Project Tray (1)
Tweezers (1)

PARTS:

replacement LCD screen (1)

Step 1 — LCD Screen



- Remove the two screws on the side of the speakers with the Phillips 00 Screwdriver, on the portion of the camera that is a part of the back casing.
- ① Label screws (where they came from and what step) and set aside in the sorting tray.


Step 2



- Remove the two back screws on the bottom of the camera on the same side as the LCD screen.


⚠ Note: The bottom screws are longer than the top ones, so label the screws accordingly for ease in reassembly. (See attached picture.)

Step 3

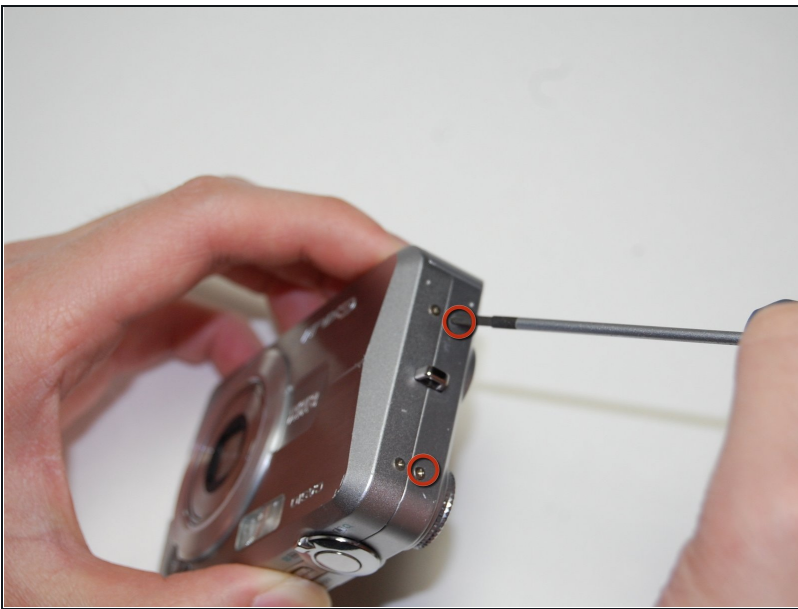

- Remove the screws on the opposite of the speakers.
- ⓘ Label the screws accordingly and add to the sorting tray.


Step 4

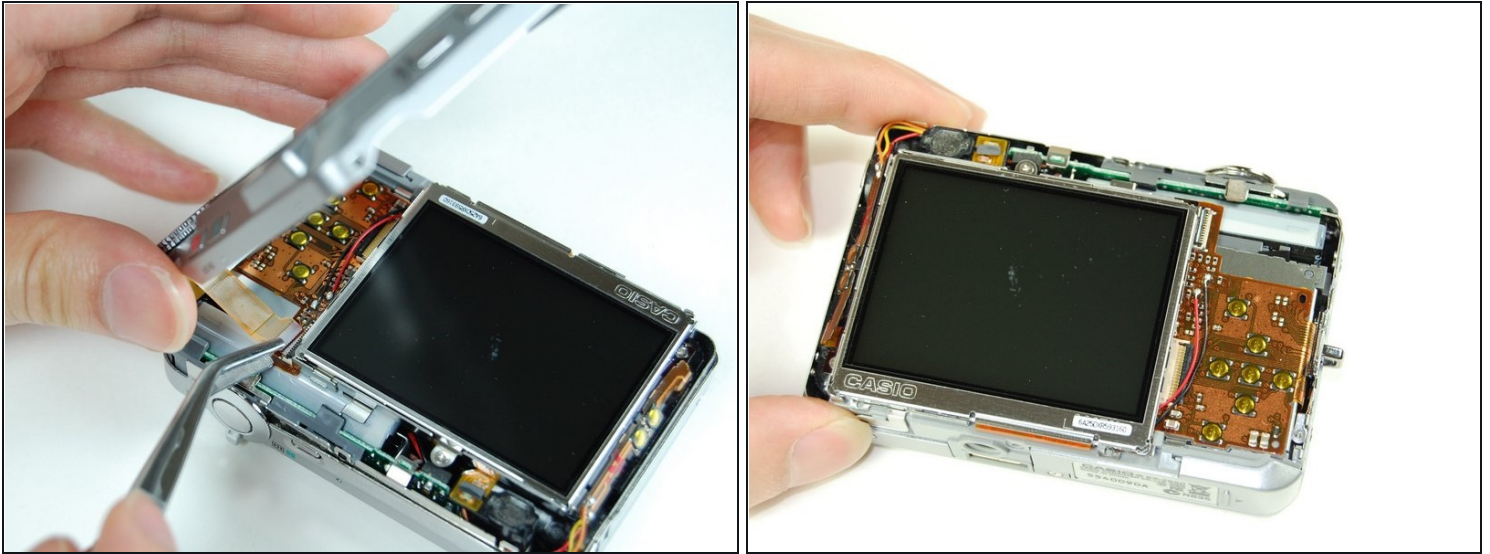

- Once all screws have been removed, gently pry open the bottom casing.
- Use the [tweezers](#) to carefully remove the ribbon from the LCD screen- NOT from the back casing itself.
- Set the bottom casing aside.

⚠ Navigation button may fall out so be cautious of this and set aside if needed.


Step 5

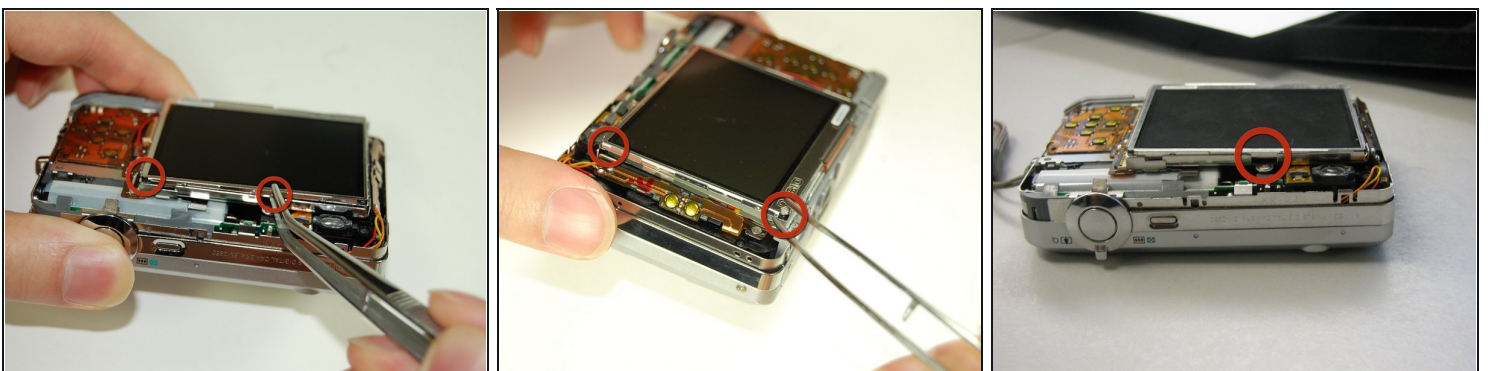

- Use the tweezers to pry the LCD screen off from the openings. There are 5 spots that the tweezers can go in to pry the LCD screen off (see attached pictures).




⚠ There is a ribbon attached to the screen. Be sure not to pull this ribbon off the screen.

Step 6

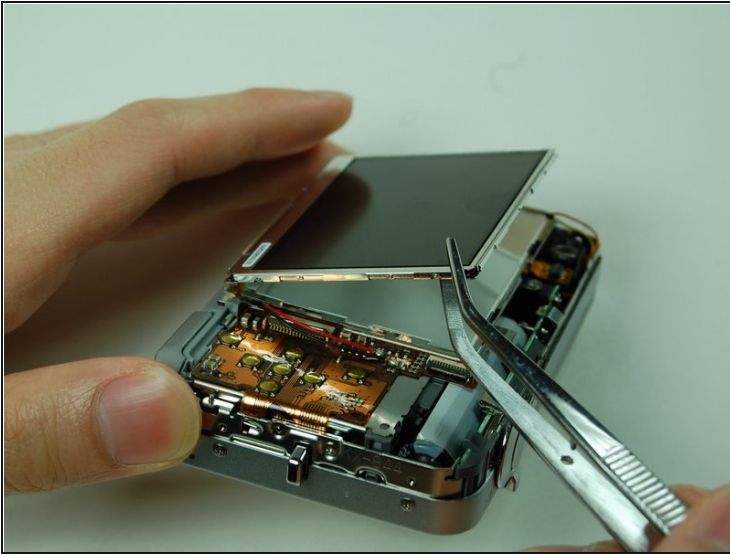


- Use the tweezers to lift up the LCD screen.
 - Grab the LCD screen with the index finger and thumb, leave the ribbon attached to the screen and leave it on the side.
- ⓘ Be sure to be very gentle with the LCD screen.

Step 7

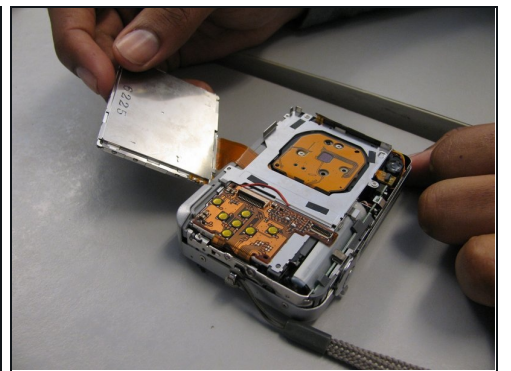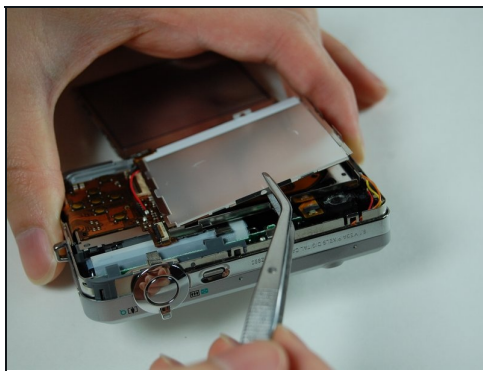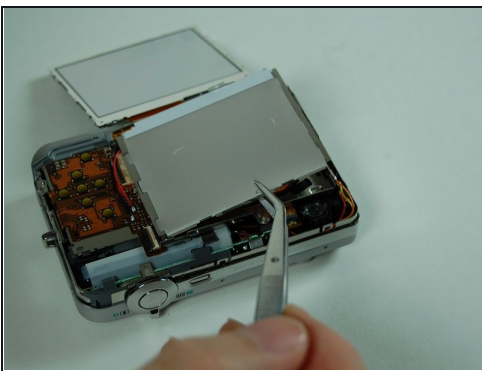

- Under the LCD screen you will see an LCD casing. You will want to GENTLY pry this off using the tweezers.
- ⓘ The casing may possibly be attached to the LCD screen. If so, leave it attached to the screen.


Step 8

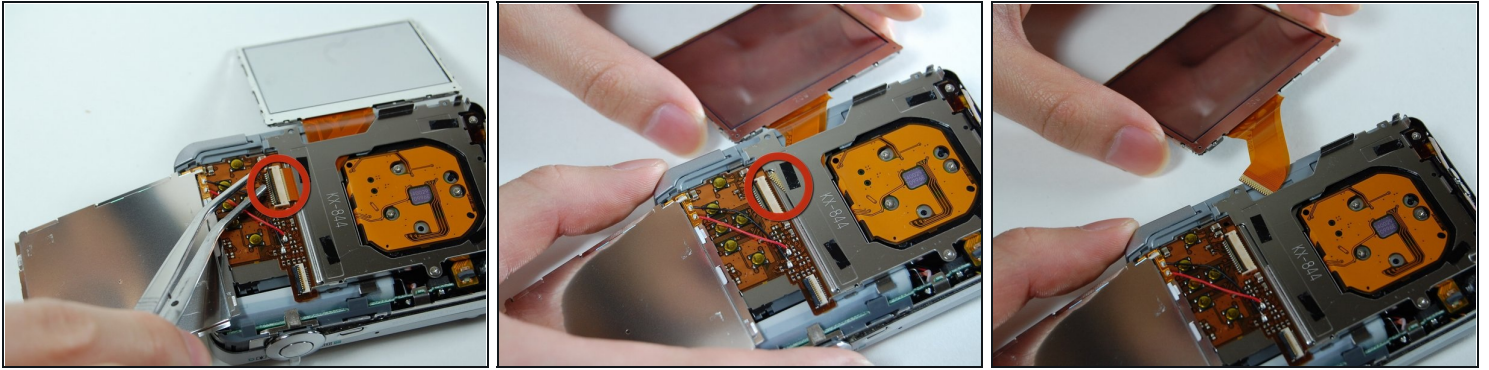

- Use the tweezers to flip open the connectors holding the ribbon.
- Pull out the LCD screen with the ribbon from the camera.


⚠ THIS STEP IS WHEN WHERE YOU SHOULD USE CAUTION AND BE VERY GENTLE!

Step 9

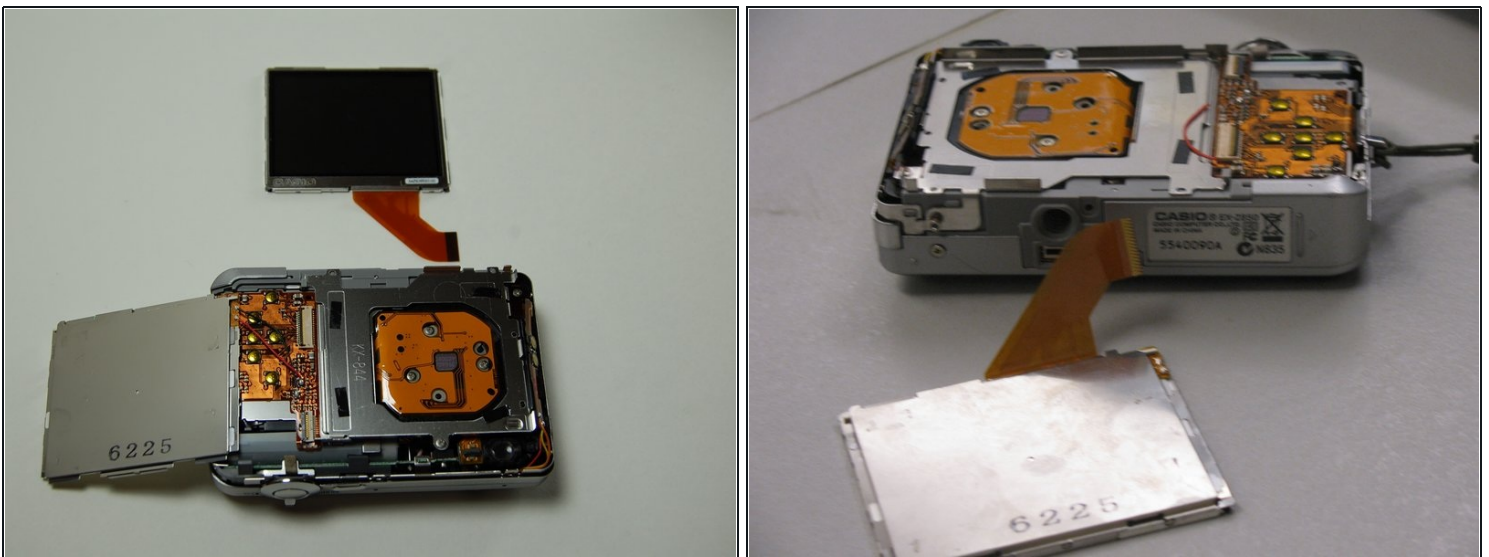

- Your LCD screen is now detached.
- Locate the replacement screen that you will now attach.

Step 10

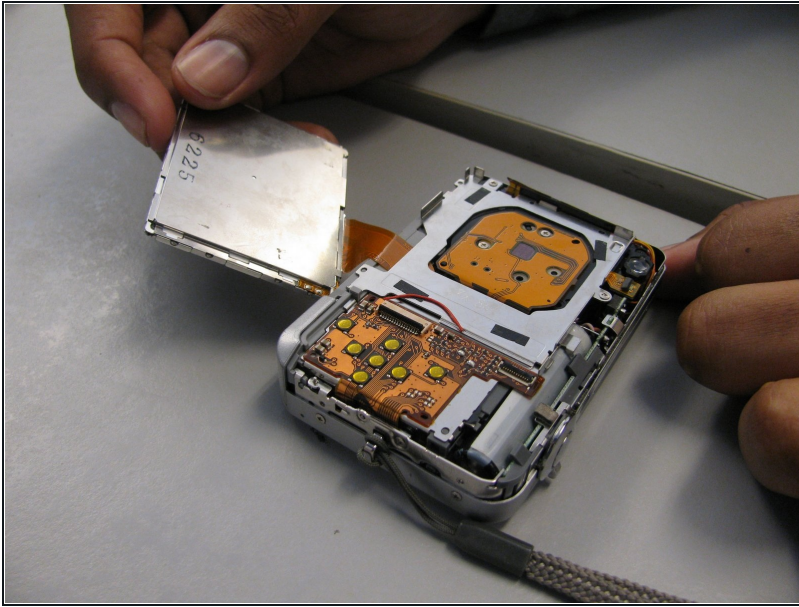

- Reconnect the LCD ribbon to the connectors and flip back down.
- Ribbon should be inserted straight in and to the right side.

Step 11




- Reattach the LCD casing.
- Flip it back into place.

Step 12



- Make sure the LCD screen is firmly connected to the camera.
- ① Slightly push the LCD screen down with one finger until you hear a click.

Step 13

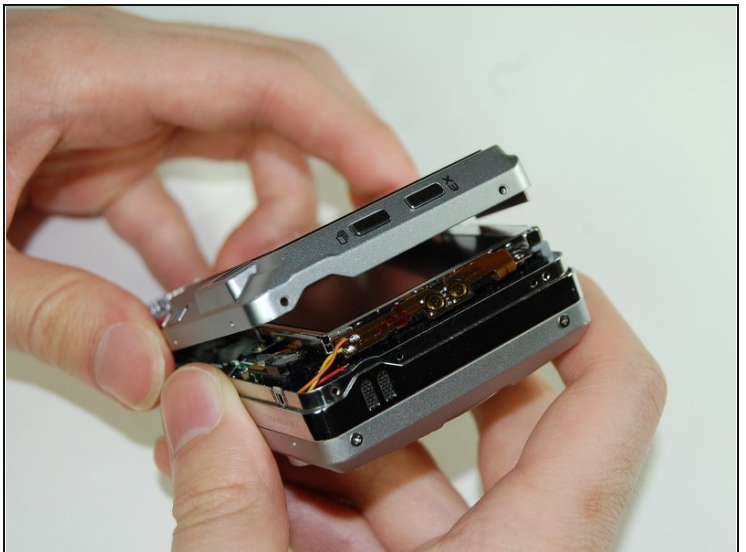


- Reattach the back casing as well as the small ribbon with it to the camera body.
- Be carefully reattaching the case. Using both hands might help.

Step 14



- Locate the labeled screws from Step 2-on the bottom of the camera.
- These are the longer screws. Screw them back in.
- ① The picture shown does not show the right screw removed and ready to be replaced due to an issue with this specific camera.

Step 15

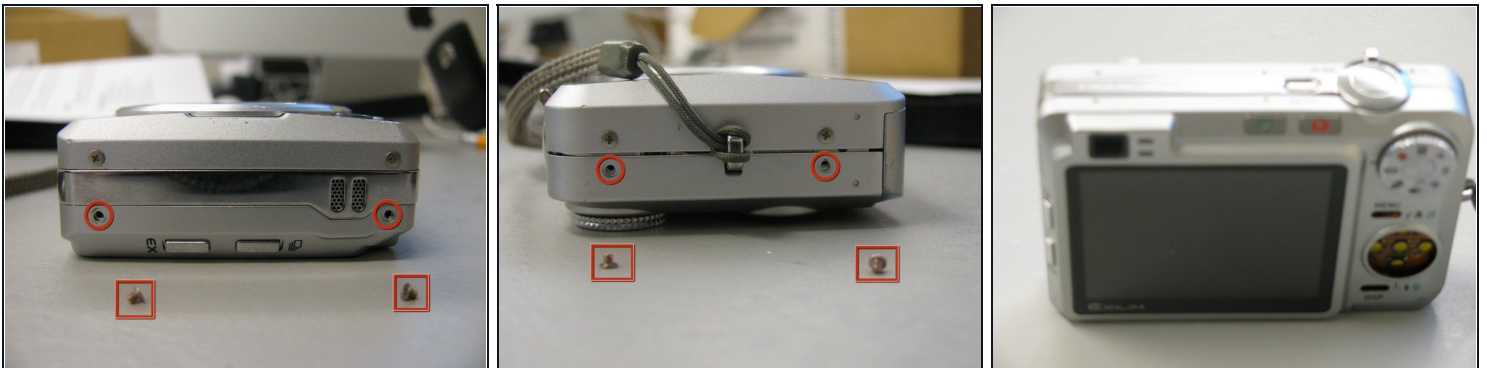

- Locate the labeled screws from Step 1 and Step 3-on the side of the camera.
- These are the shorter screws. Screw them back in.
- Congratulations! Your camera has been reassembled.

By now you should have been able to get your Casio Exilim EX-Z850 camera's LCD screen functioning.