



# Disassembling Canon EOS Rebel XS Back Cover

This guide will help you remove the back panel of the camera where all the buttons and LCD screen are attached.

Written By: Daniel Bussone



---

## INTRODUCTION

Use this guide to replace a dysfunctional back cover.



### TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

## Step 2

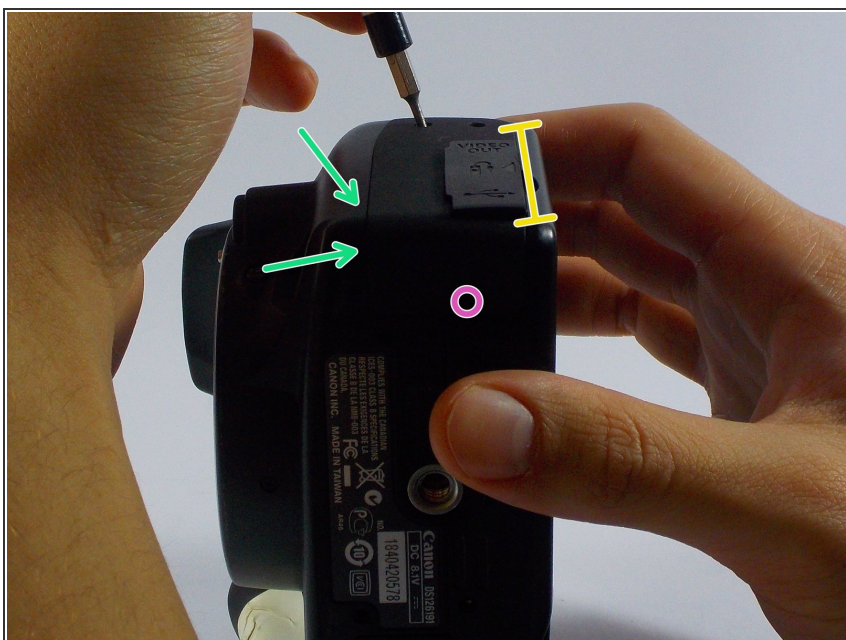

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.




### Step 3 — Back Cover



 - Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use tweezers to lift the panel.

### Step 4

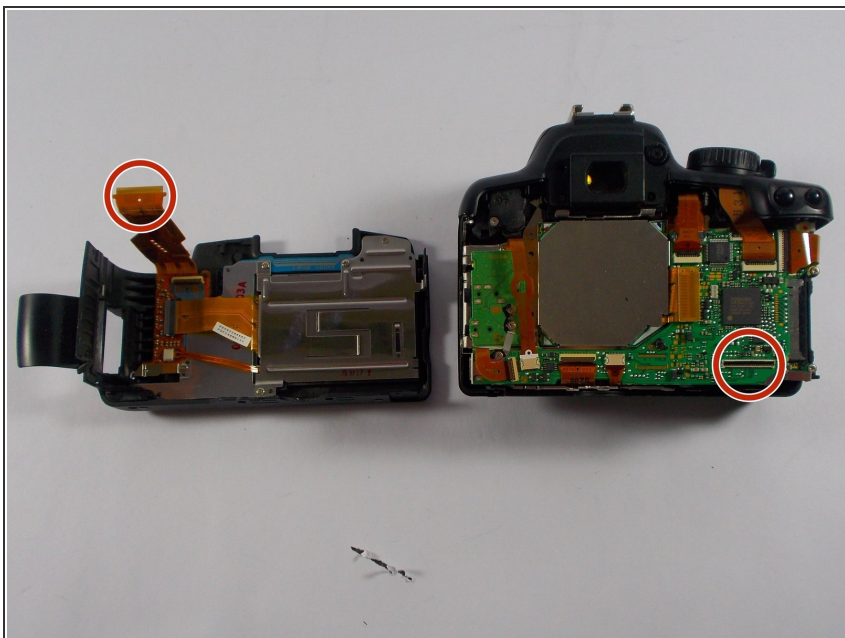

- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

To reassemble your device, follow these instructions in reverse order.