


Canon EOS Rebel XS Interior Eyepiece Replacement

Use this guide to replace the interior eyepiece...

Written By: Daniel Bussone

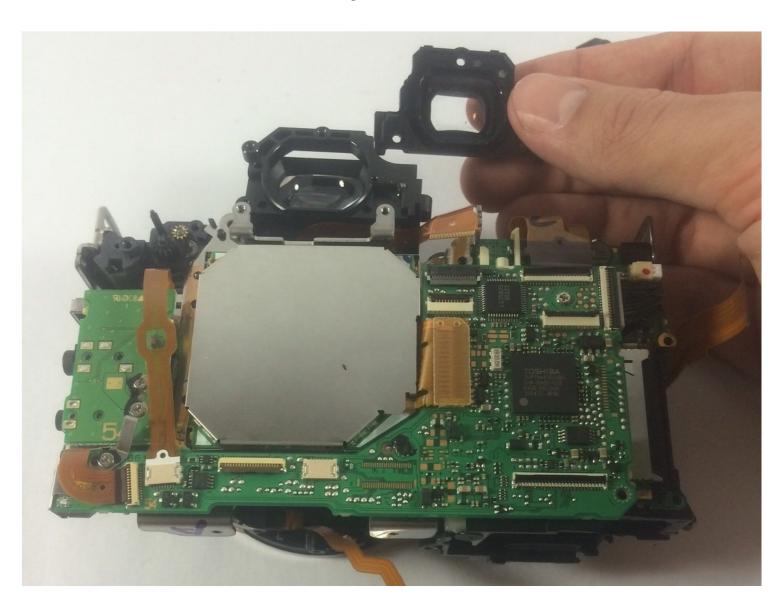

INTRODUCTION

Use this guide to replace the interior eyepiece of the camera.

TOOLS:

Phillips #00 Screwdriver (1)


Spudger (1)

Tweezers (1)

Step 1 — Latch Side Cover



 Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.

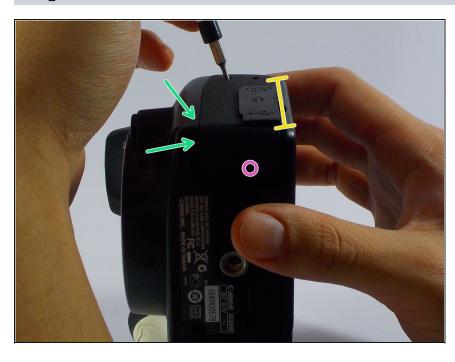

- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
 - There's a concealed lip, under the opposite edge.

Step 3 — Disassembling Canon EOS Rebel XS Front Cover



 Remove three medium length screws from the bottom of the camera




- Remove the two medium length screws on the front panel of the camera above the lens mount.
- Once you done, you may use the Spudger to panel from nongrip side.
- i If you start on the grip side, it will be more challenging to loosen the panel.

Step 5 — Back Cover



- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use <u>tweezers</u> to lift the panel.

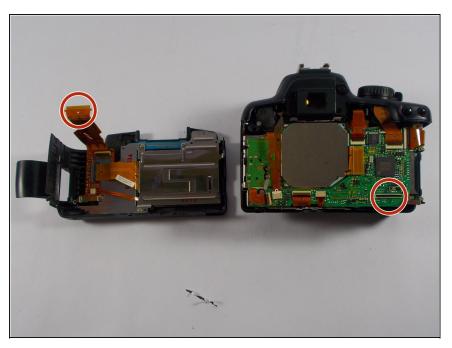

 Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

Step 7 — Top Panel




- Remove the following ribbons with the <u>tweezers</u> by gently pulling on them.
- Remove the three black screws, near the eye piece, using the Phillips Screwdriver.




- Remove the cable heads attached on the front side of the camera next to the lens mount.
- ⚠ Be gentle when puling wires lose, use the tweezers to remove the wires.

Step 9

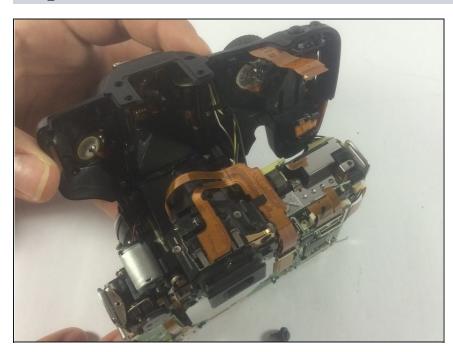

 You can use your fingers to pull the top panel of the camera.

Step 10 — Interior Eyepiece

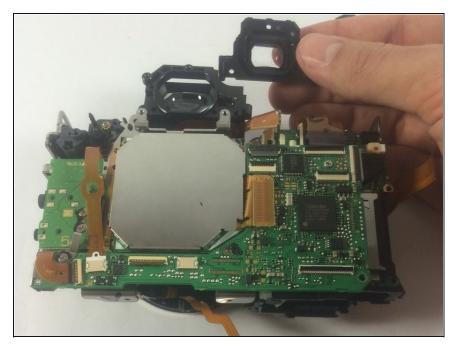

 After removing the top panel, you can use your fingers to remove the eye piece from the camera.

To reassemble your device, follow these instructions in reverse order.