



Canon Powershot A610 Batteries Replacement

In this tutorial, you will learn how to replace...


Written By: Matthew Ramirez



INTRODUCTION

In this tutorial, you will learn how to replace the batteries in a Canon Powershot A610. These batteries are essential for the camera to operate because they provide power to the device. After time, the batteries die, and need to be replaced. You can tell when the batteries need to be replaced when either the low battery icon appears or the camera does not turn on anymore because it is out of battery. Be sure to dispose of the batteries properly and carefully.

Step 1 — Batteries

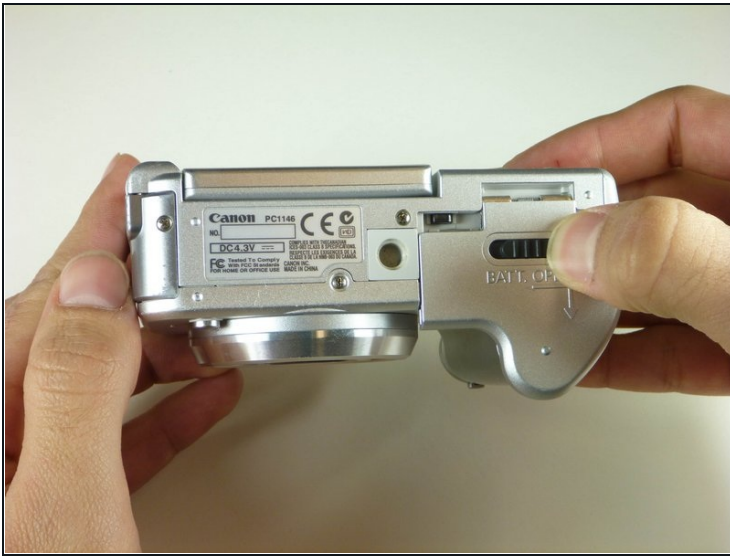

- Unlock the battery cover, while swinging the cover outward to open it.

Step 2



- Turn the camera over and allow the batteries to fall out.
- Close the battery cover.

To reassemble your device, follow these instructions in reverse order.