




HTC One X Plus Battery Replacement

Use this guide to replace the battery in your HTC One X+.

Written By: Vitterio Crisp

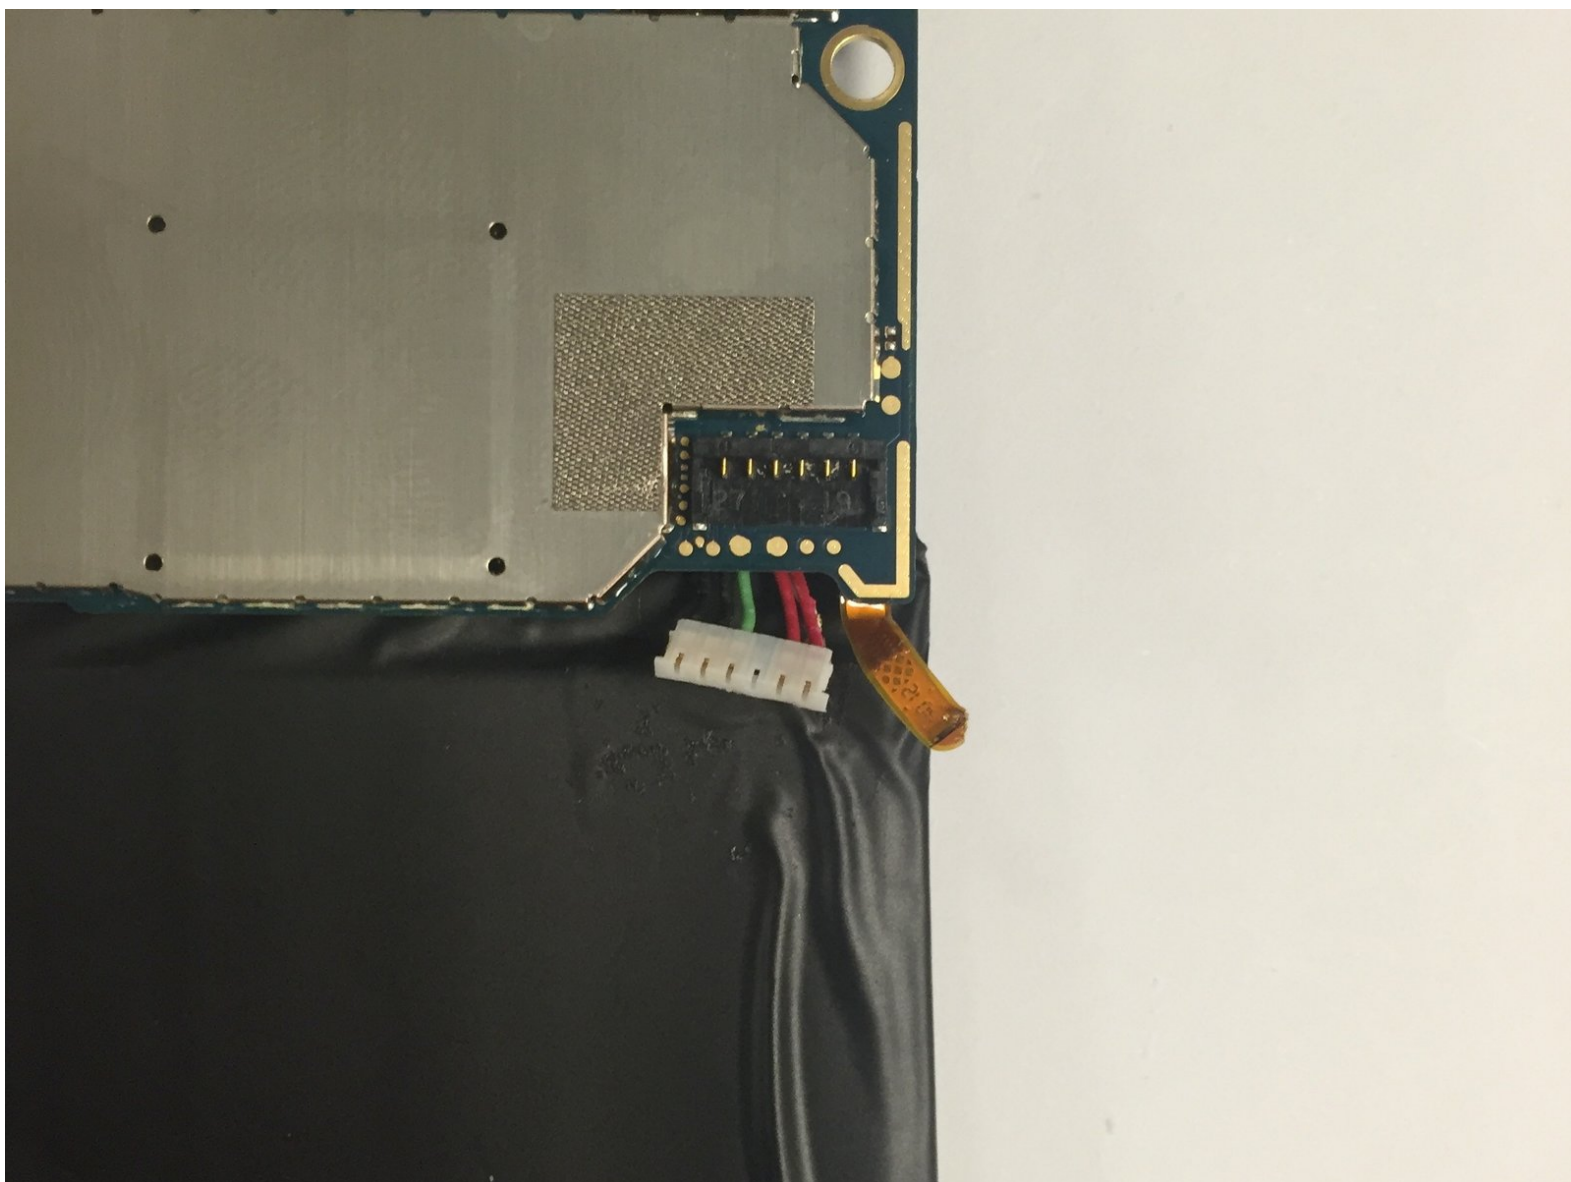

INTRODUCTION

In this guide, you will learn how to replace your old, broken, or malfunctioning battery in your HTC One X+.



TOOLS:

- [Tweezers](#) (1)
- [Suction Handle](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [HTC One X+ Replacement Battery](#) (1)

Step 1 — Battery




- Power off your device.
 - Insert a pin, paper clip, or very small piece of metal into the hole next to the micro SIM card holder to remove it.
- i** The SIM card slot is located on the top edge of the device.

Step 2




- Using plastic opening tools, pry open the bottom of the device first.
- You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached use the suction cup tool to remove the screen completely from the black casing.

Step 3

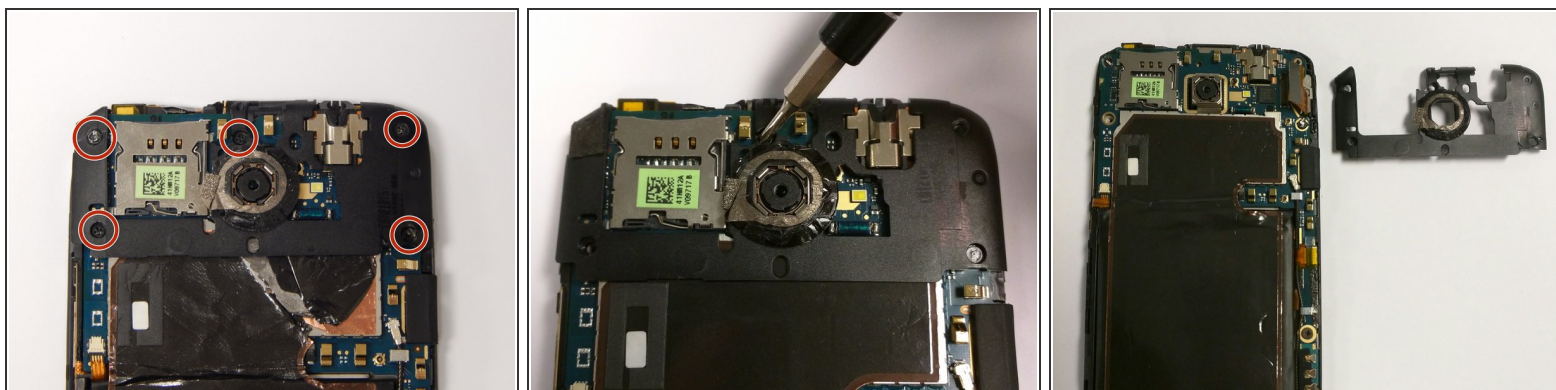



- Remove the five 2.4mm screws using a Phillips head screw driver and then remove the plastic cover.

Step 4

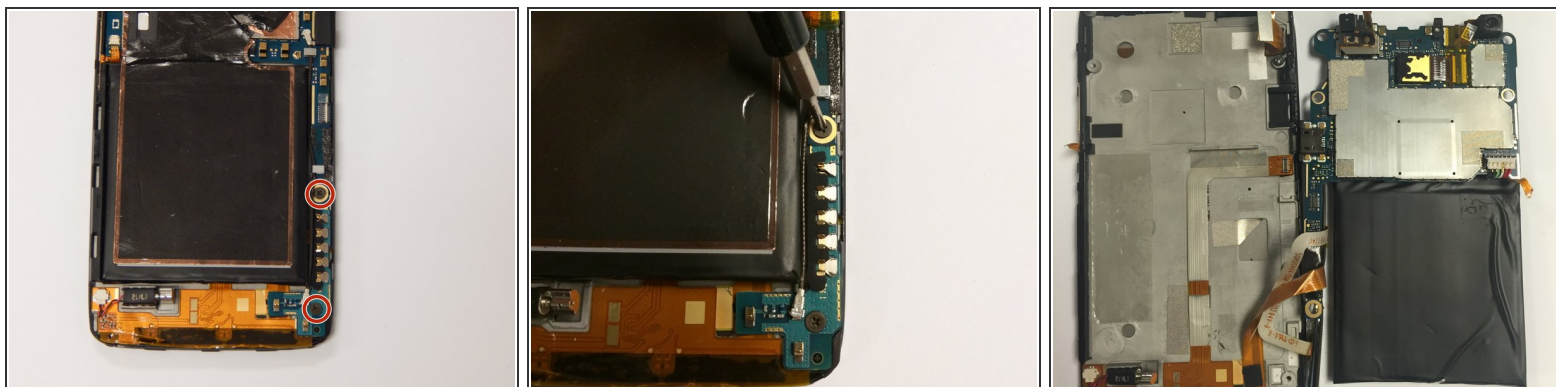



- Remove the two 3.4 mm JIS #000 screws from the PCB board.
- Remove the PCB board and antenna.

Step 5

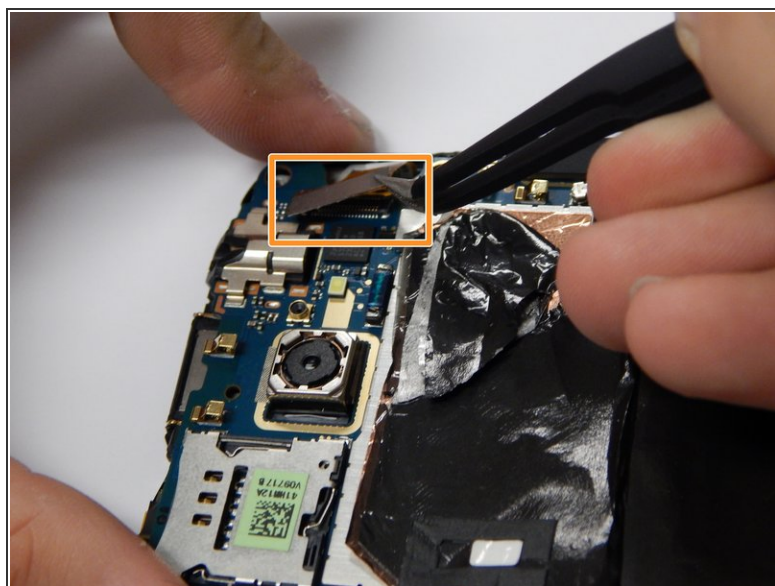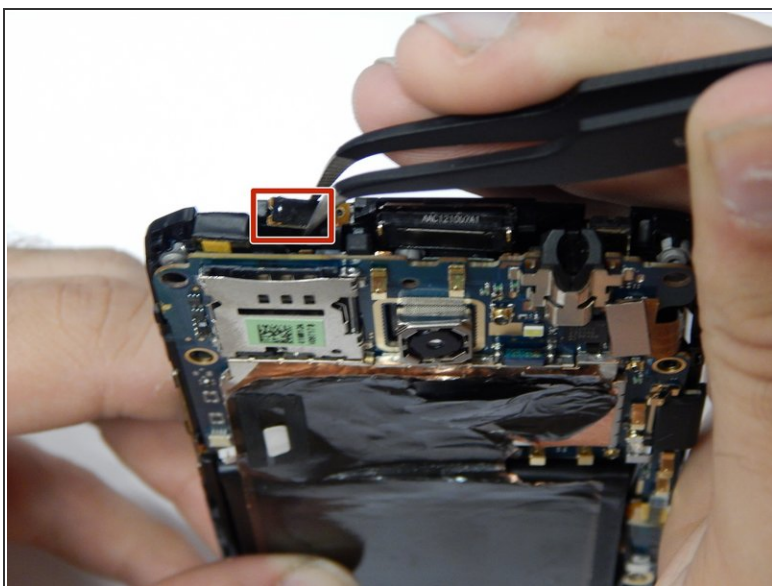

- Use tweezers to disconnect the power button flex cable.
- Disconnect the touch screen flex cable

Step 6

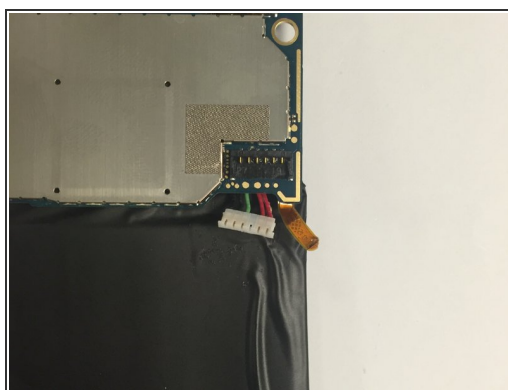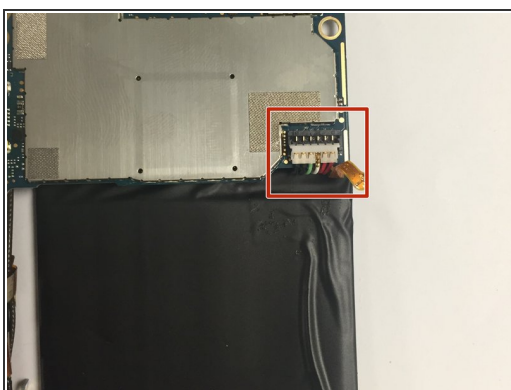

- Disconnect the battery from the logic board by detaching the six pin connector.
- Remove the battery by pulling upwards.

To reassemble your device, follow these instructions in reverse order.