



Black and Decker JE2200B Stainless Steel Cutter Replacement

This guide will help users replace an old or broken stainless steel cutter.

Written By: AvaAnne Hogue



INTRODUCTION

The cutter is located inside the machine so some disassembly is required. The cutter is sharp, use caution when handling it.

Step 1 — Stainless Steel Cutter



- To access the cutter, follow steps 1-3 in the [Disassembly Guide](#).

Step 2



- Place a hand on each side of the cutter and firmly pull vertically up.
- ⚠ The teeth in the cutter are sharp and will cut you. Do not put your hand on or near the teeth.

To reassemble your device, follow these instructions in reverse order.