



# Acer Iconia One 7 Speaker Replacement

This guide will instruct users how to replace the speaker area of the Acer Iconia One 7.

Written By: Michael



## INTRODUCTION

The speaker is an essential part of the Acer Iconia One 7 enabling it to give auditory notifications and playback to the users. The speaker appears sturdy but it is in fact a delicate part requiring careful attention to detail and a light touch during replacement.




### TOOLS:


- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [JIS #00 Screwdriver](#) (1)
-

## Step 1 — Speaker




- Begin at any side of the tablet.
- With a plastic opening tool, begin taking apart the back cover from the tablet by working along the edges.

 Prying the lid open can be difficult; use caution in order to safely remove.

 Turn off device before this step.


## Step 2

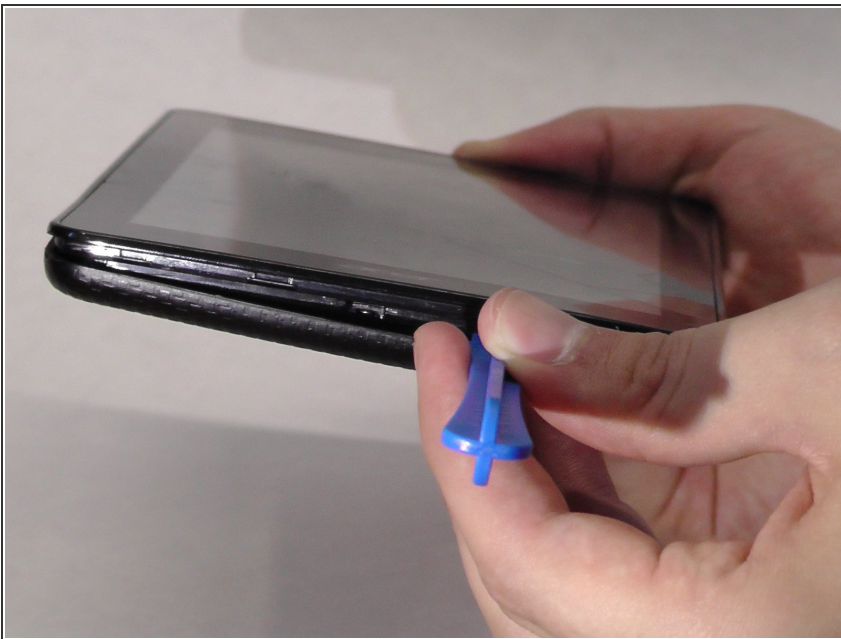

- Using a plastic opening tool, separate the back cover from the main device.
- Open each side continuously to ensure all sides have been separated.




## Step 3

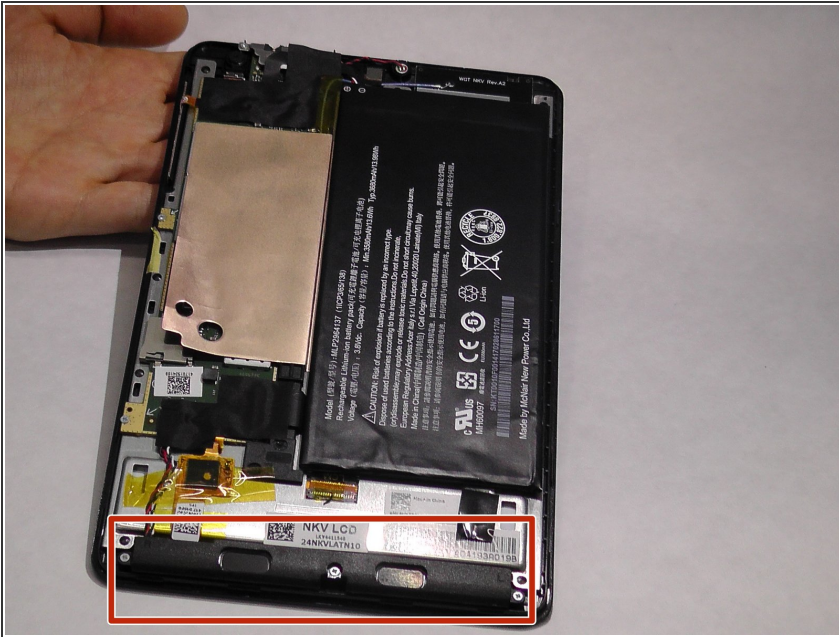



- Turn the tablet over to locate the speaker.
- ⚠ Besides the parts that are mentioned in the instruction, try not to agitate other fragile components inside the device.
- The speaker is on the bottom of the inside.

## Step 4

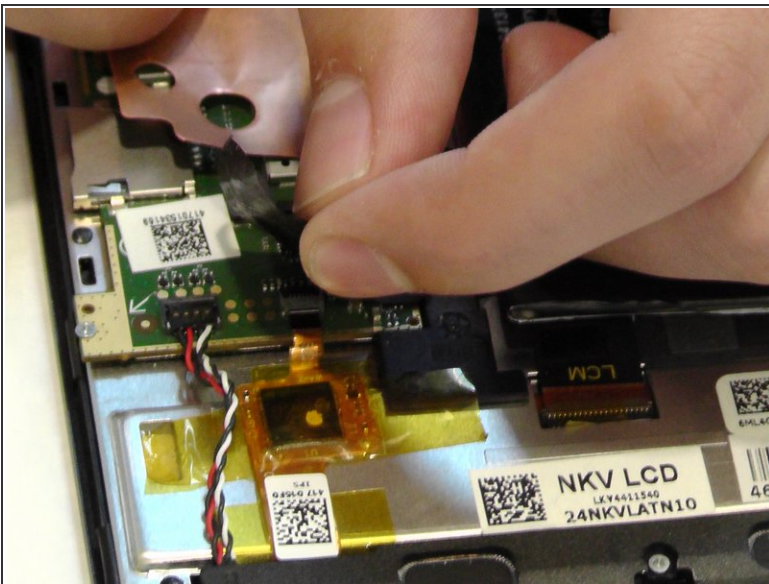

- Peel back tape.
- Using tweezers, detach connection from motherboard.

## Step 5

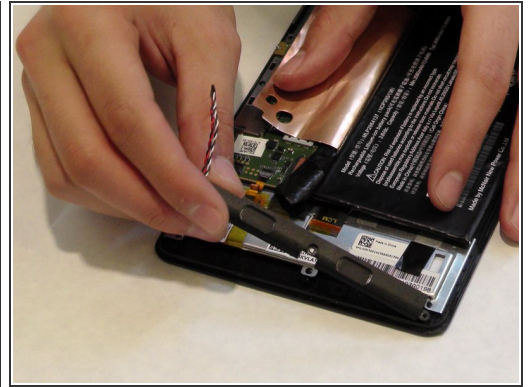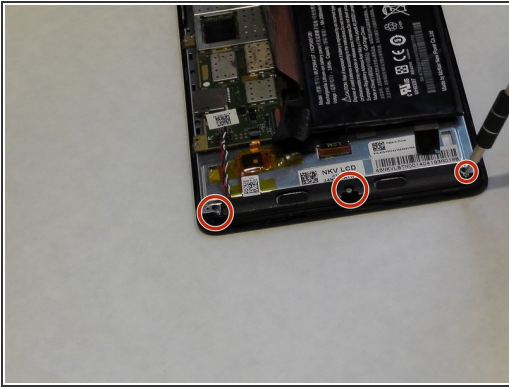

- Unscrew screws with a JIS screwdriver with a #00 screw bit.
- Dislodge the speaker unit.
- ⚠ Take care not to displace any other bits in the device.

To reassemble your device, follow these instructions in reverse order.