

Repairing Slipping Scroll Wheel from Remote Control

How to repair a slipping remote control scrollwheel with super glue.

Written By: Bert Meijer





Step 1 — Repairing Slipping Scroll Wheel from Remote Control




• Suck a little bit of Superglue in an injection needle.

Step 2




 Press the injection needle into the rubber wheel until you feel the ridged axle

Step 3

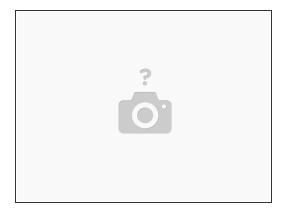

• Inject a small amount of glue onto the axle.

Step 4

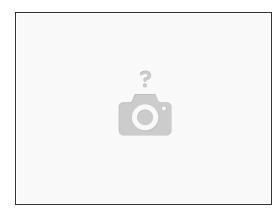

• Repeat injection at three different places in the wheel.

Leave the glue to cure for about ten minutes.