



Hamilton Beach 70740 Bowl Replacement

This guide instructs the user how to replace a cracked or broken mixing bowl.

Written By: David Gedeon



INTRODUCTION

This guide should be considered if you are have issues locking your bowl to the food processor, or containing food within the bowl to mix various food products.



PARTS:

- [Bowl - 70740 \(Part # 990122600\)](#) (1)
-

Step 1 — Bowl



- ⚠ Be sure your device is powered off before beginning this replacement guide.
- Turn the lid counterclockwise to unlock, then lift it straight up from the bowl.

Step 2



- Reach into the bowl and grasp the plastic component housing the blades. Lift straight up to remove the blades from the device.

Step 3



- Twist the bowl counterclockwise to unlock, and remove.

Once the bowl is removed reverse steps from 3 to 1 to reassemble the Food Processor.