




# HP LaserJet 1160 or 1320 Duplexer Solenoid Replacement

Written By: jdp23

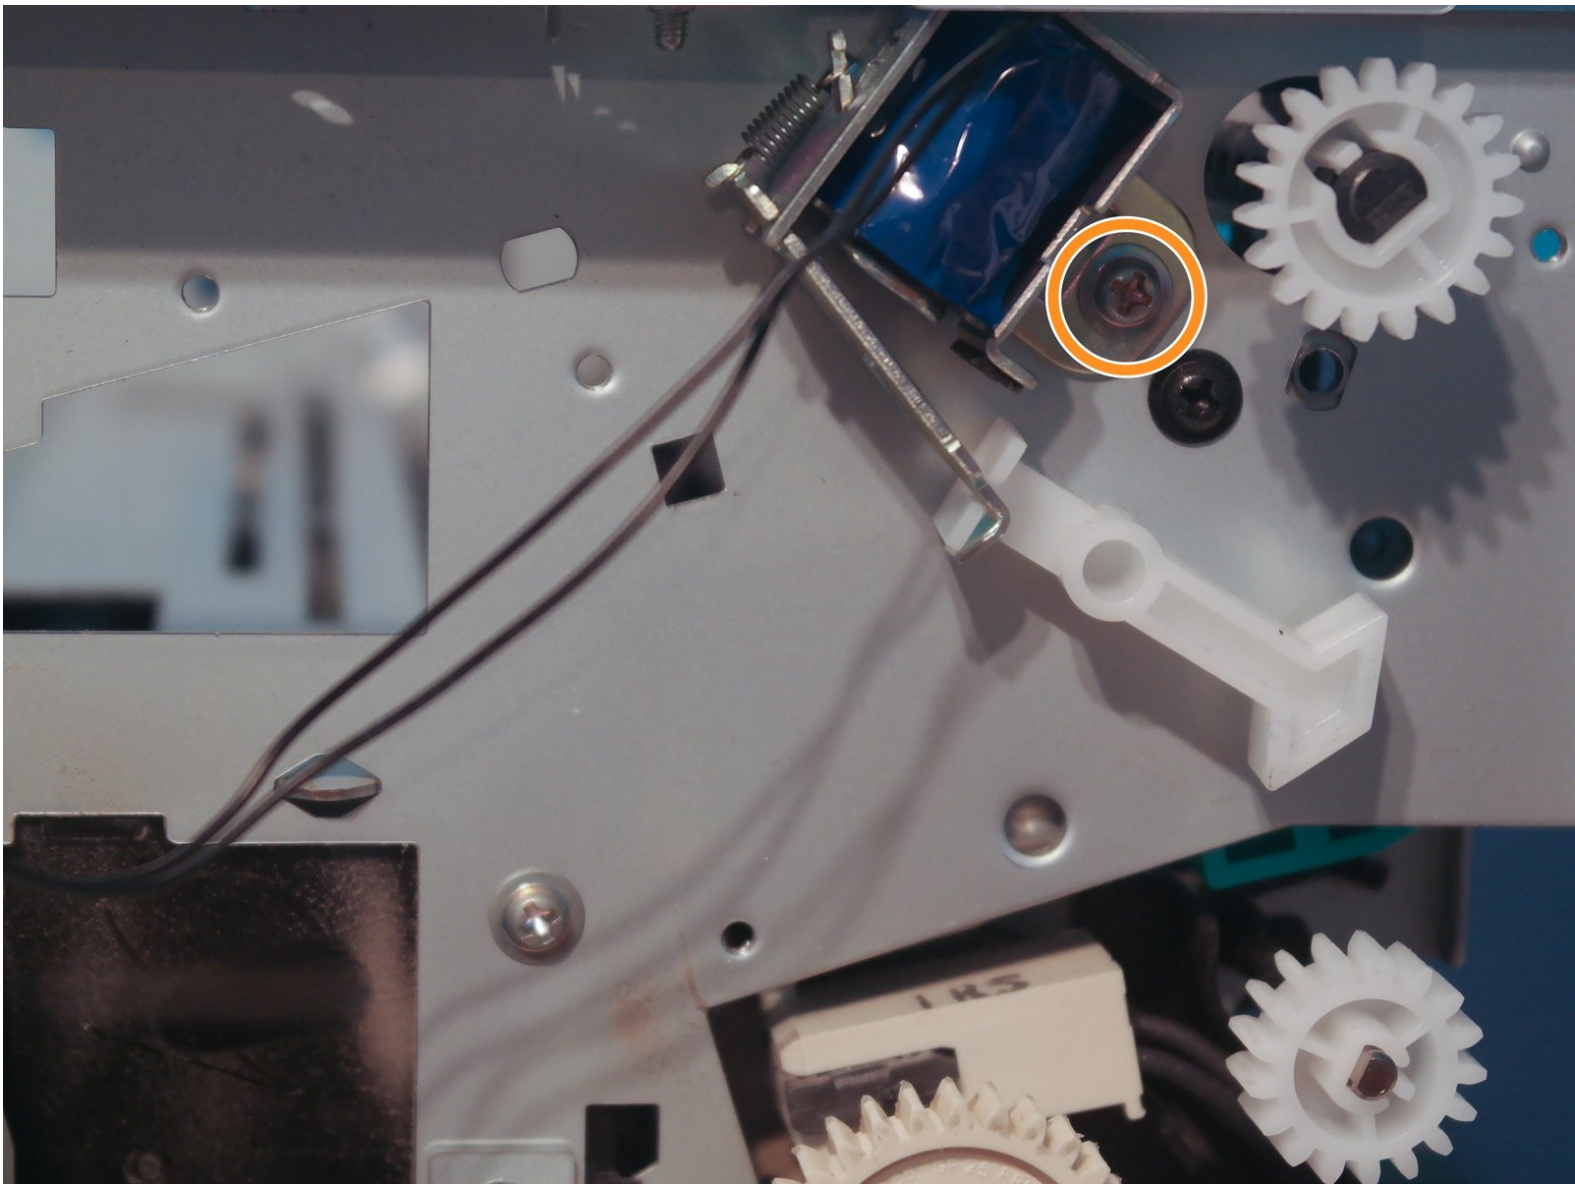



## TOOLS:

- [Metal Spudger Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)



## PARTS:

- [HP LaserJet 1160 or 1320 Duplexer Solenoid](#) (1)

## Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

## Step 2 — Right Side Cover



- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.




### Step 3 — Back Cover




- Remove 4 screws on the back of the printer.
- Remove the back cover.

### Step 4 — Top Cover

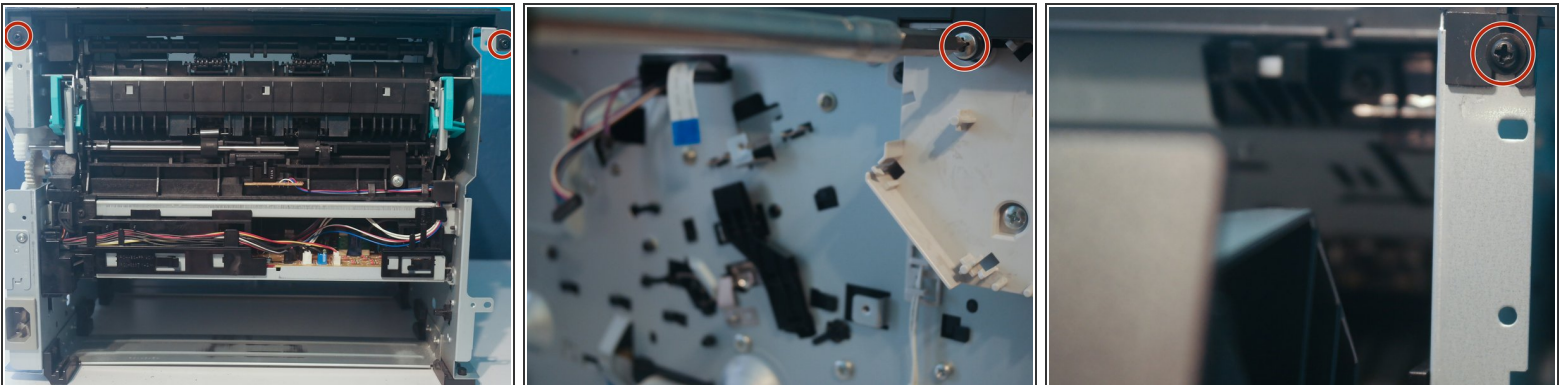



- Remove 2 screws on the back of the printer, one on the left, and one on the front.
- ⓘ The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

## Step 5 — Top Cover

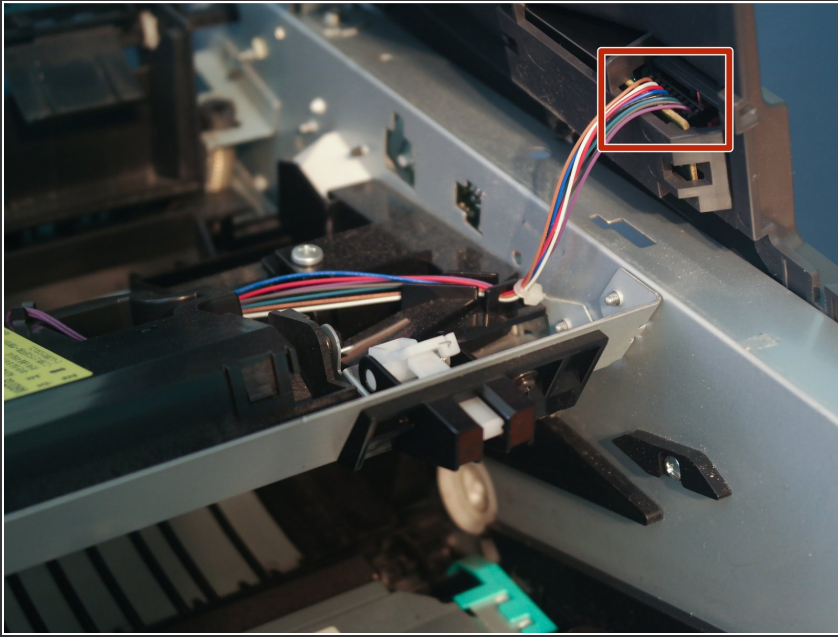

- Disconnect the control panel cable and remove the top cover.


## Step 6 — Fan

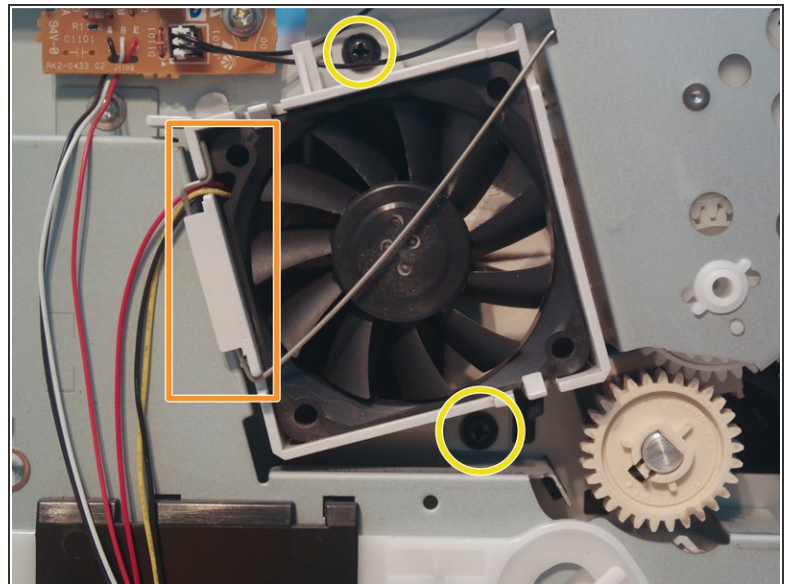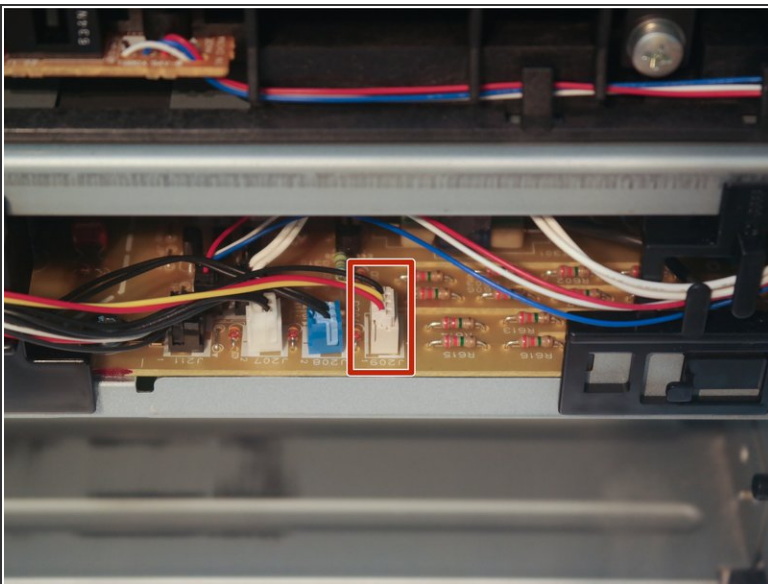

- Disconnect the fan cable from the main board of the printer.
- Remove the retaining clip holding the fan in.
- Remove the 2 screws holding the fan in.




## Step 7 — Fan Cable

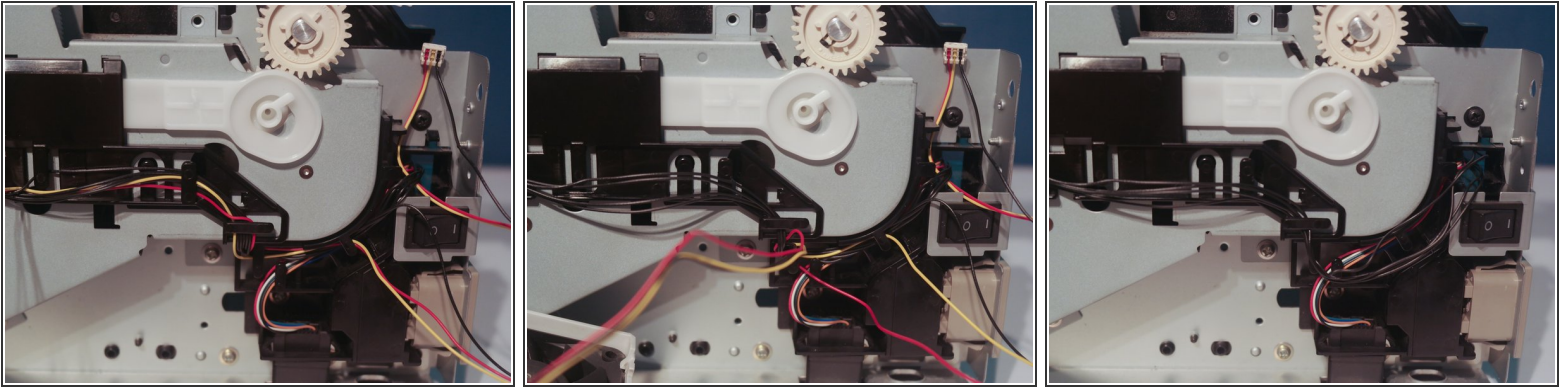



- Remove the fan cable from the cable guide.

## Step 8 — Duplexer PCB

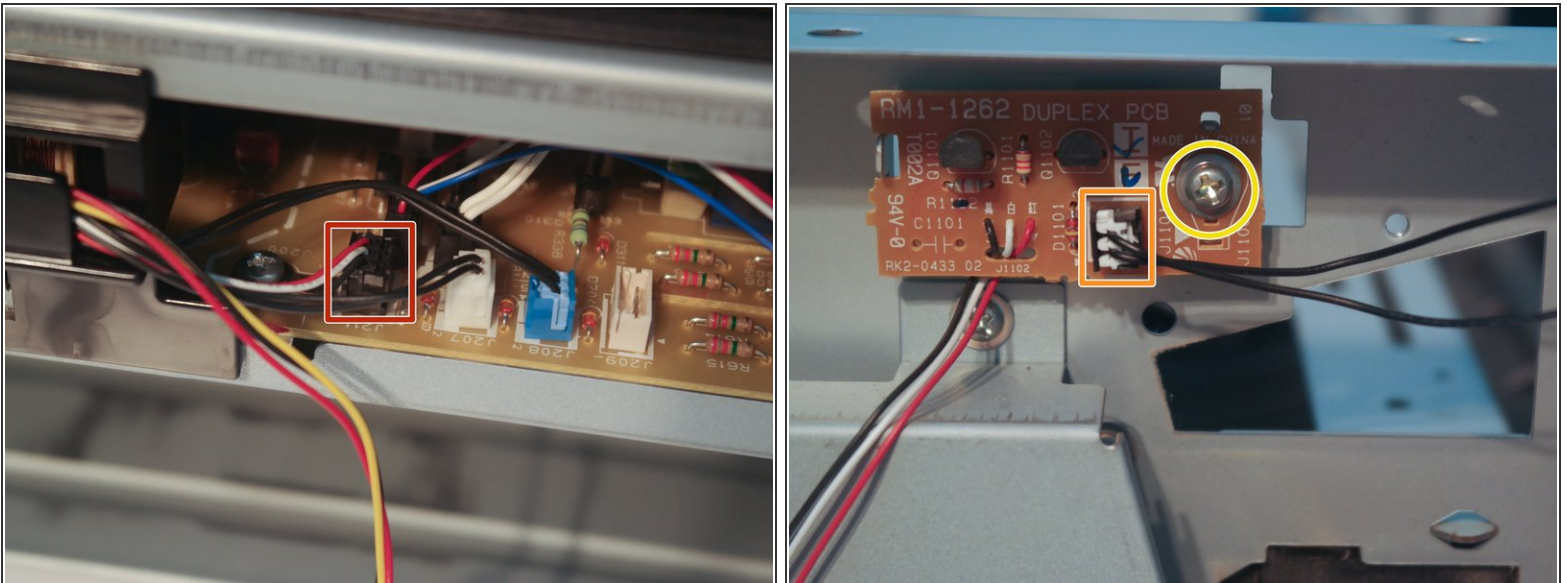


- Disconnect one cable from the main board of the printer.
- Disconnect the duplexer solenoid cable from the duplexer PCB.
- Remove one screw on the duplexer PCB and remove the PCB from the printer.

## Step 9 — Duplexer Gears

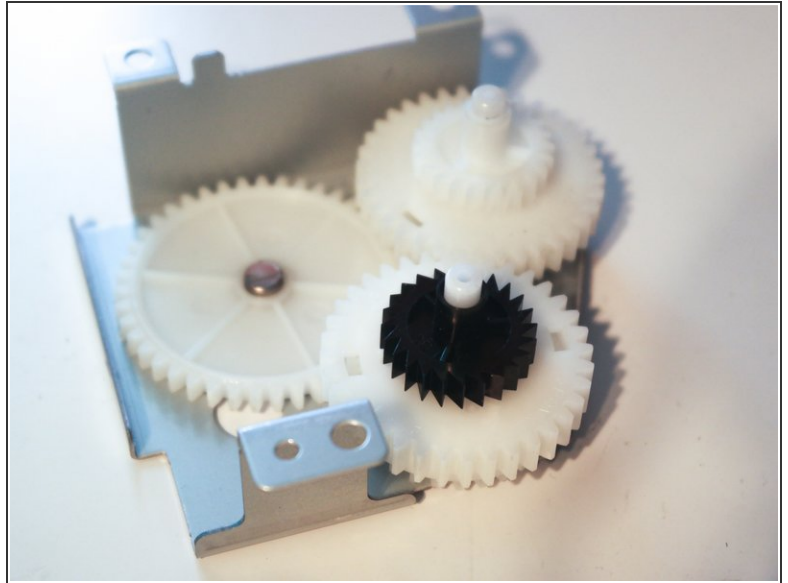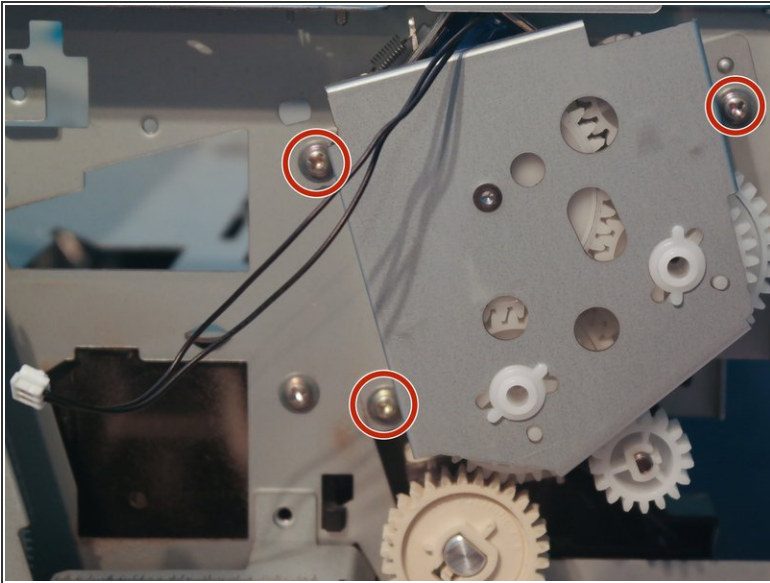

- Remove 3 screws holding the duplexer gears to the printer and remove the gears.

## Step 10 — Duplexer Solenoid

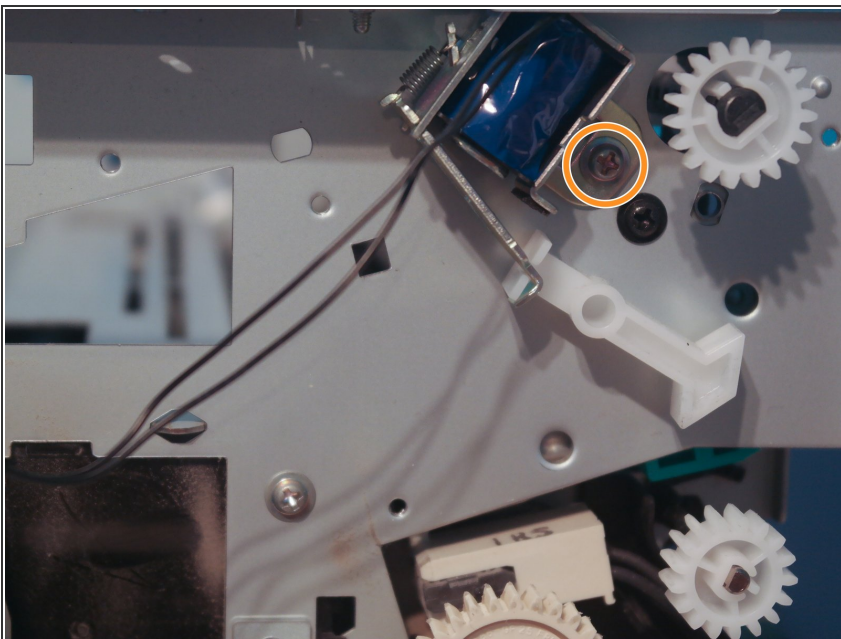

- Remove one screw to remove the solenoid from the printer.

To reassemble your device, follow these instructions in reverse order.