




# BIOS battery replacement

Written By: Felice Suglia

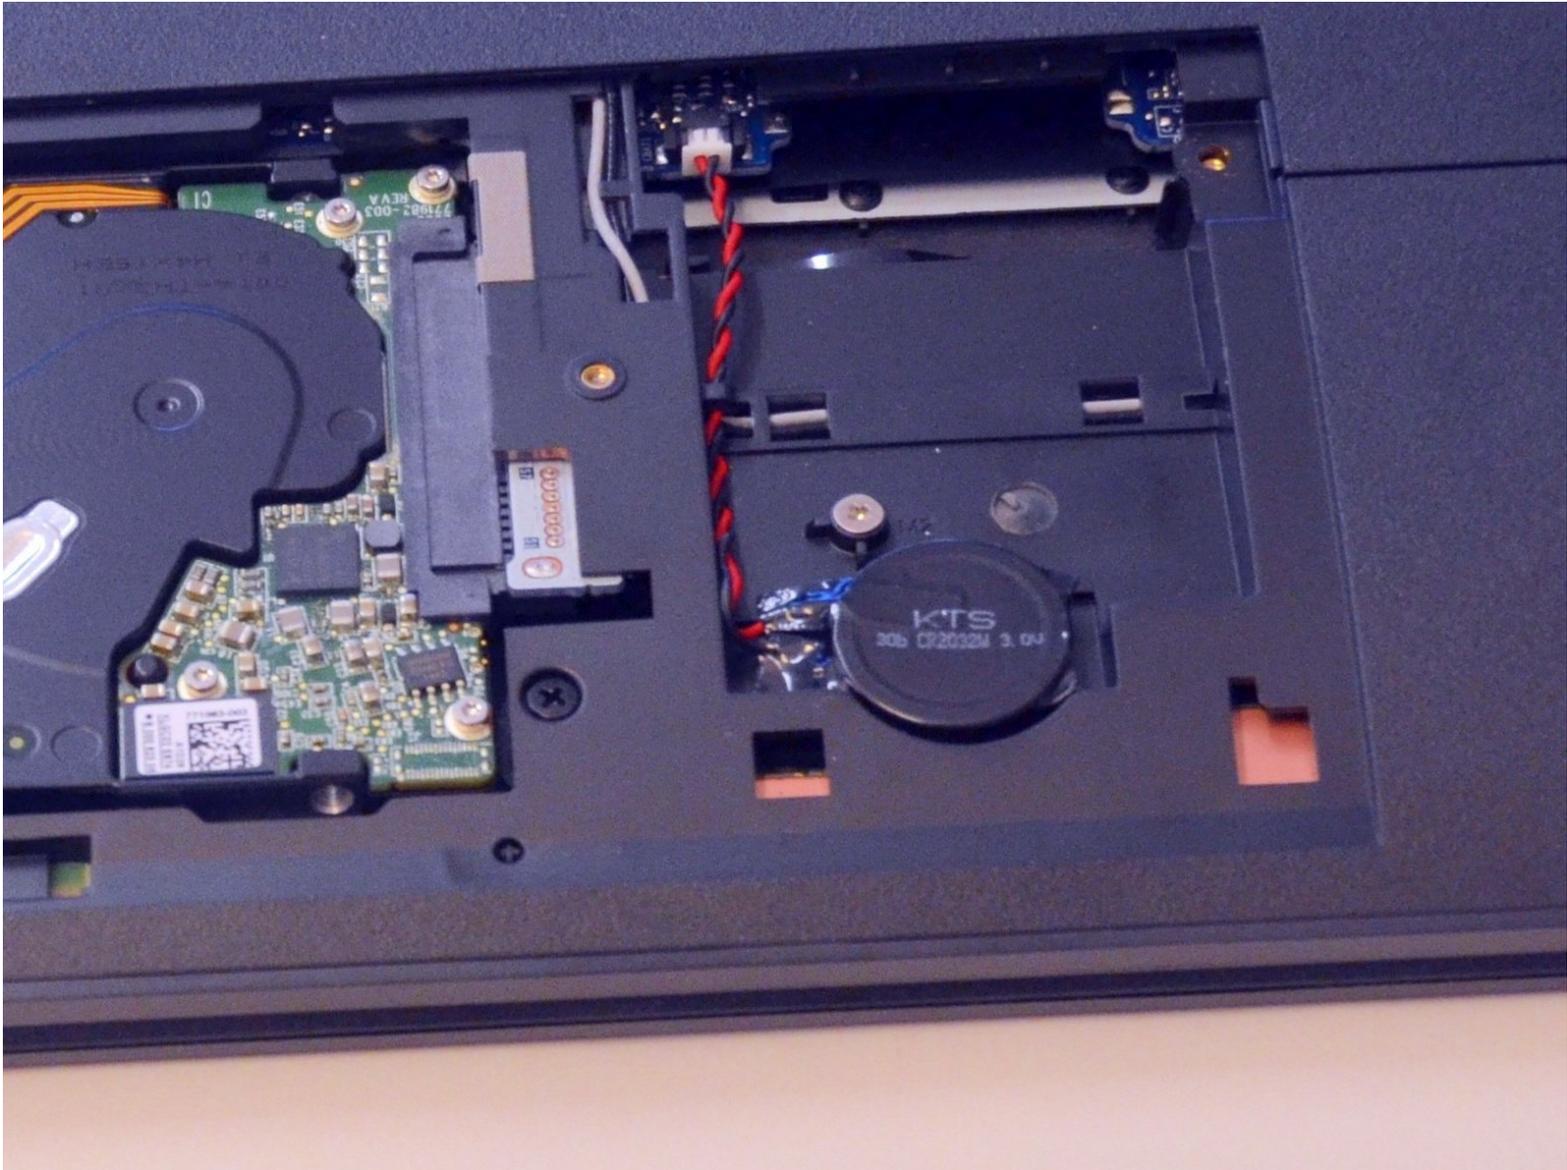

**TOOLS:**

- [Phillips #0 Screwdriver](#) (1)

**PARTS:**

- [New Item](#) (1)

## Step 1 — Battery



- Unlock the battery latch on the right.
- Unlock the battery lock on the left.
- Remove the battery pack from its slot.

## Step 2 — Access to Components 1





- Using the Philips # 0 screwdriver, unscrew the 2 screws from the bottom cover.
- Check the marks indicating the direction in which the cover must be removed.
- Remove the bottom cover by removing it in the direction of the markers.

### Step 3



- HDD hard disk and BIOS stack components appear.

### Step 4 — BIOS battery

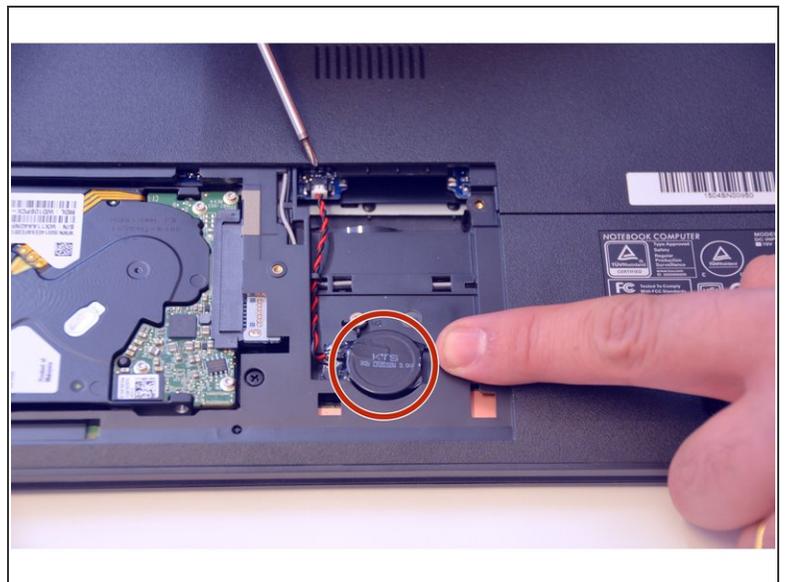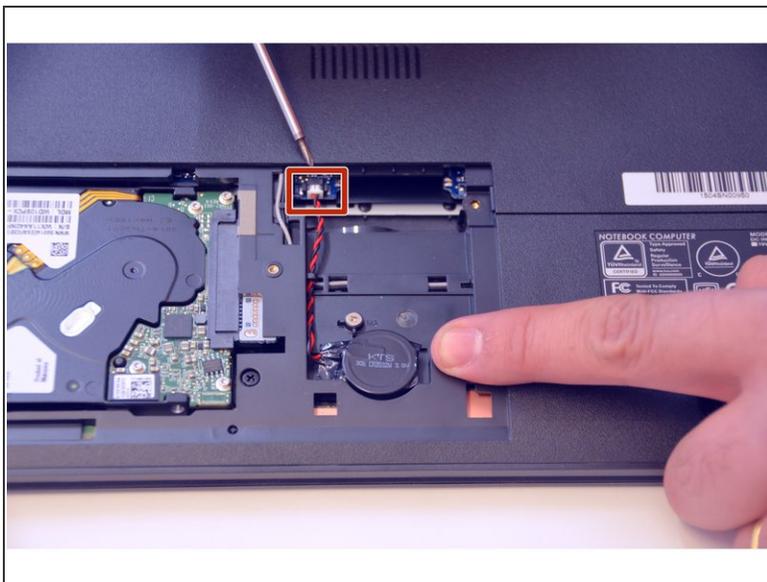

- Remove the battery connector first.
- Then gently peel off the BIOS stack itself.

For reassembly, follow the instructions in reverse order.