



Keyboard replacement

Written By: Felice Suglia





TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)

Step 1 — Battery




- Unlock the battery latch on the right.
- Unlock the battery lock on the left.
- Remove the battery pack from its slot.

Step 2 — Keyboard






- Gently detach the first clip from the bar with the ON / OFF button.
- Gently detach the second clip from the bar with the ON / OFF button.
- And so on.

Step 3

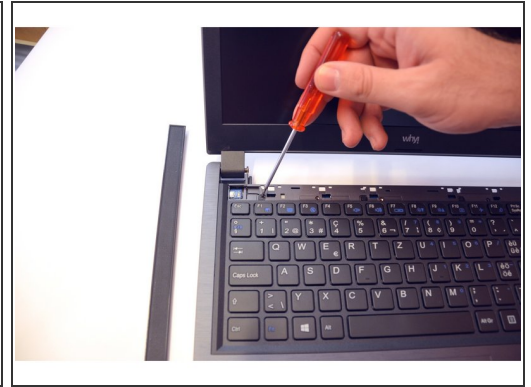

- Flip the laptop over and then untap this bar
- The four screws that moor the keyboard will appear.
- Now unscrew these four screws.

Step 4

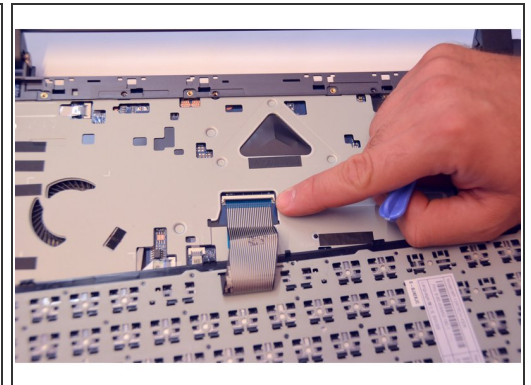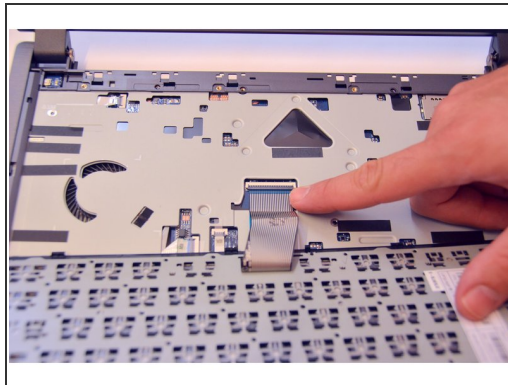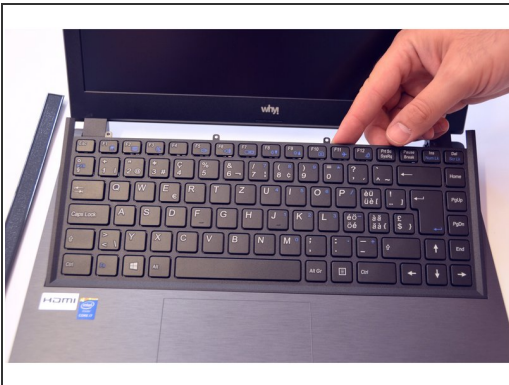

- Now gently release the keyboard.
- Then reverse it.
- Release now by helping you with a screwdriver the keyboard cable.

Step 5



- Once the cable is released, lift the keyboard out of its slot.

To reassemble your device follow the following instructions in reverse order