




Amazon Fire HD 10 Rear Facing Camera Replacement

Follow this guide to replace your rear facing camera.

Written By: Jaie Hillery

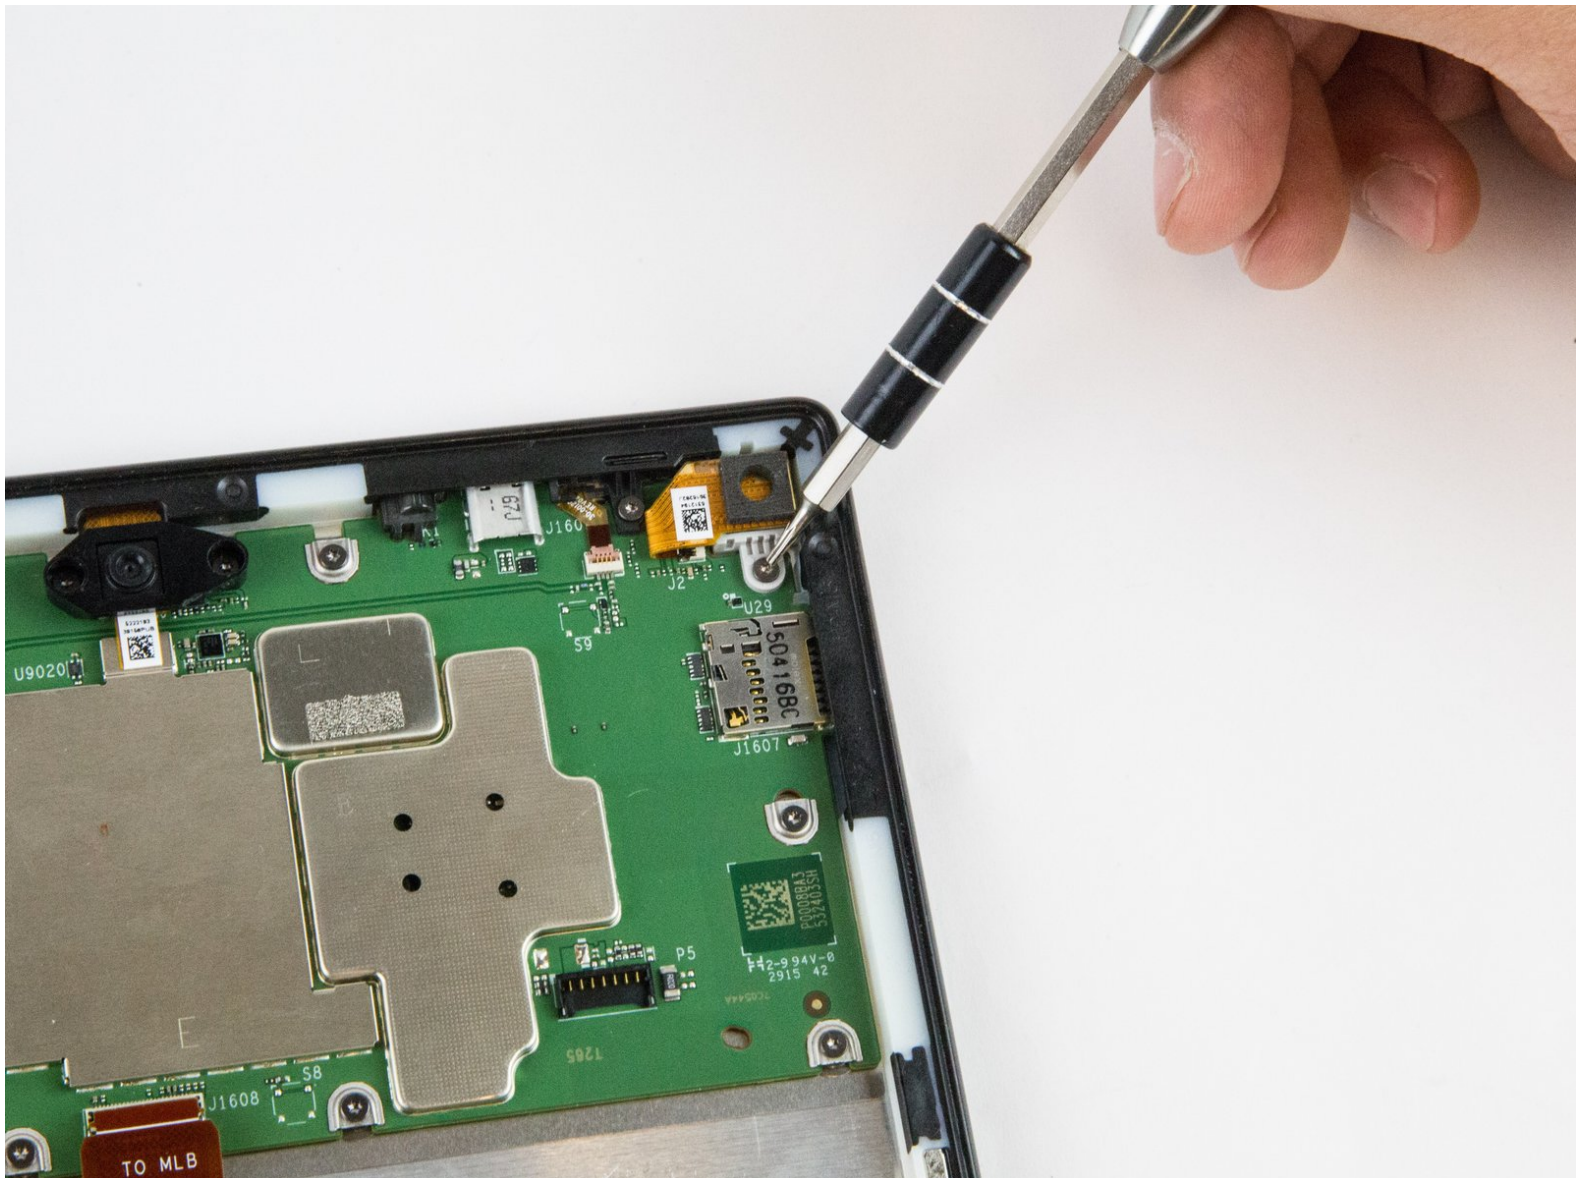

INTRODUCTION


You will need to use the screen replacement guide as a prerequisite.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-


Step 1 — Screen

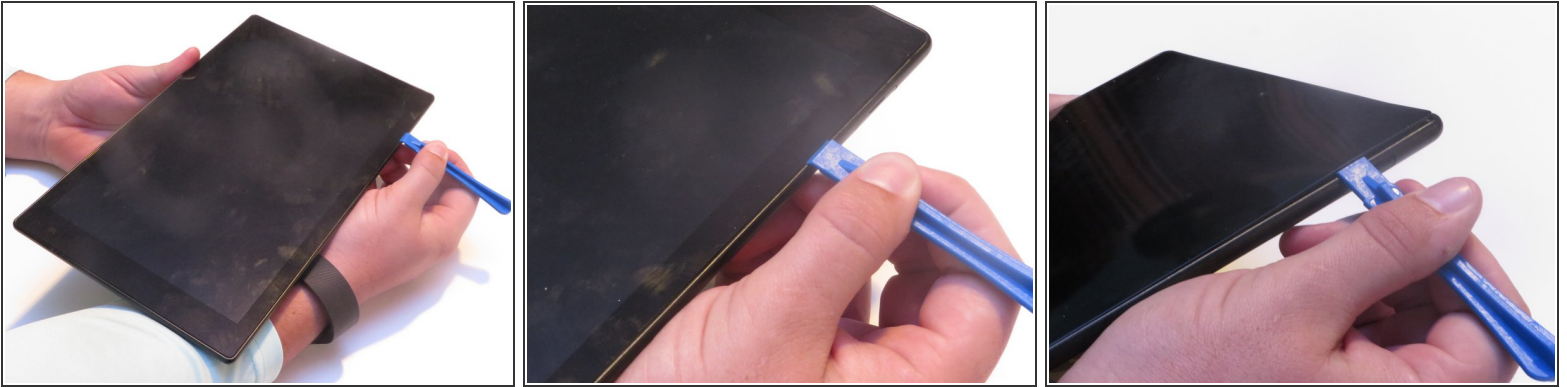



 Avoid prying near bottom right hand side due to LCD Connector

- Use a plastic opening tool to pry the screen up in the right hand corner.

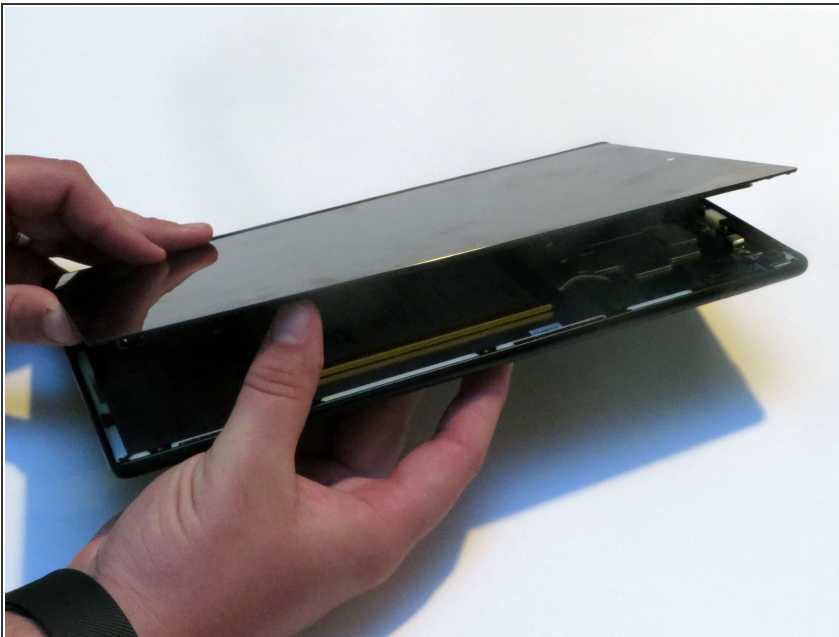
Step 2



 Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
-  You may need to use some force due to the glue.

Step 3

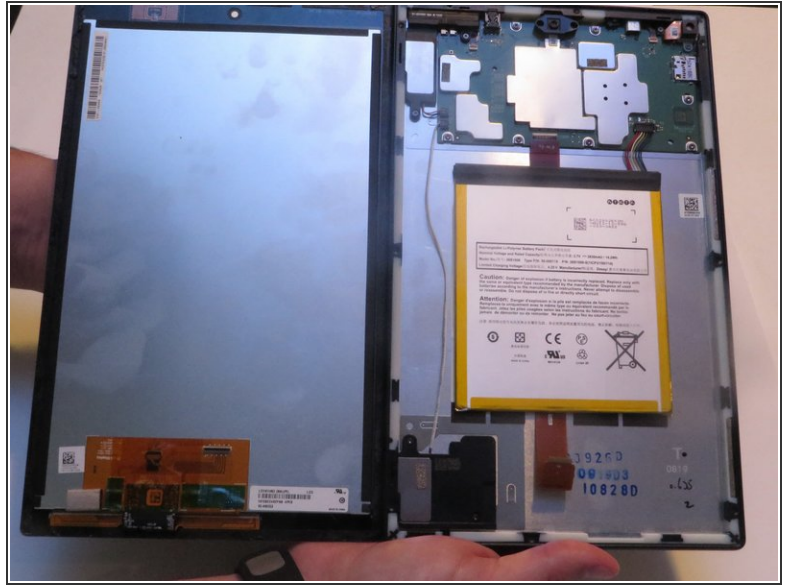



- ❗ Be mindful of the ZIF connector.
- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4



- Remove the screen and digitizer from the case completely.



Step 5 — Rear Facing Camera

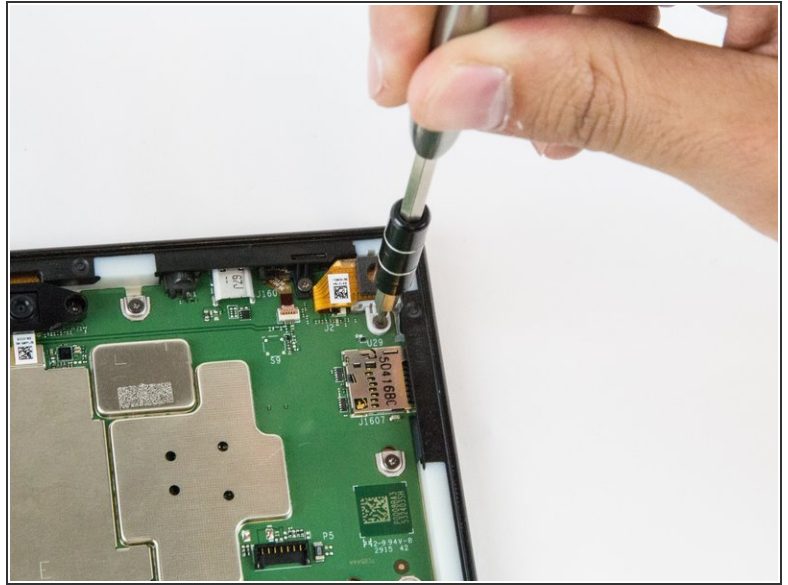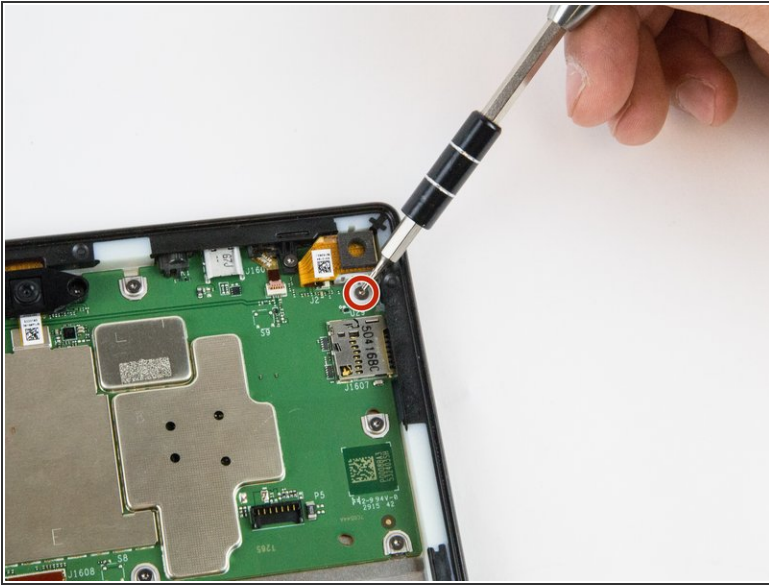

- Remove the single T5 Torx screw at the base of the camera.

☞ Once removed, place the screw aside in a safe location.



Step 6

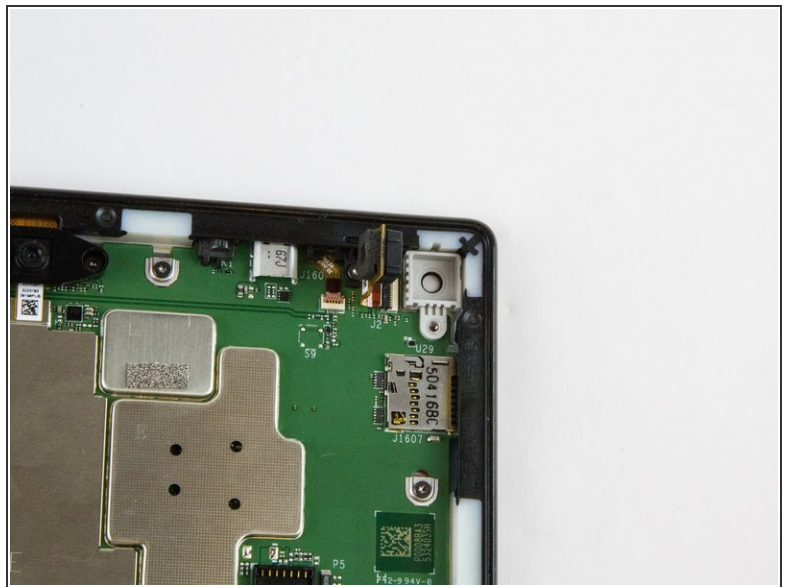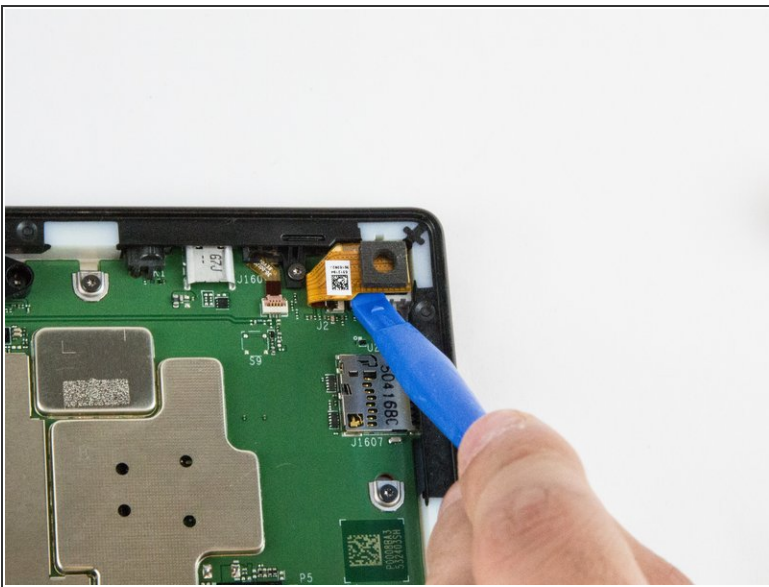

- Lift the camera from the case using the plastic opening tool.

i The camera is still connected to the motherboard via the ZIF connector.

Step 7

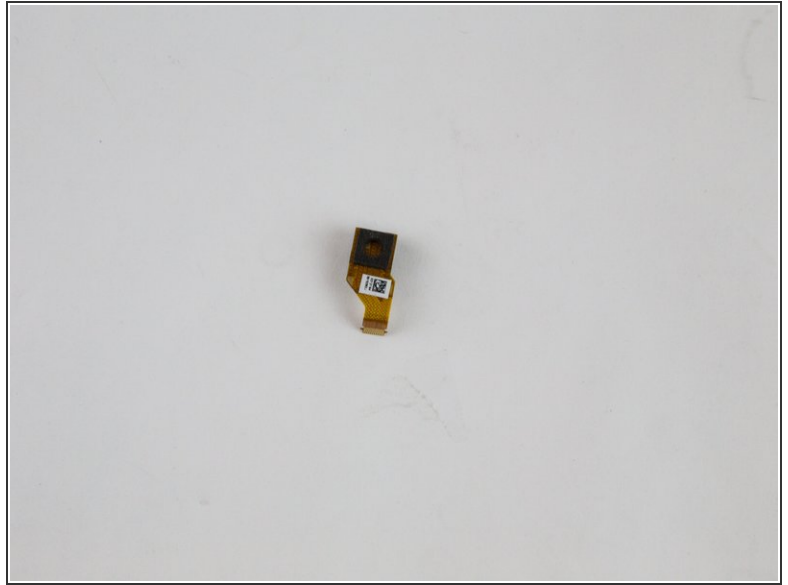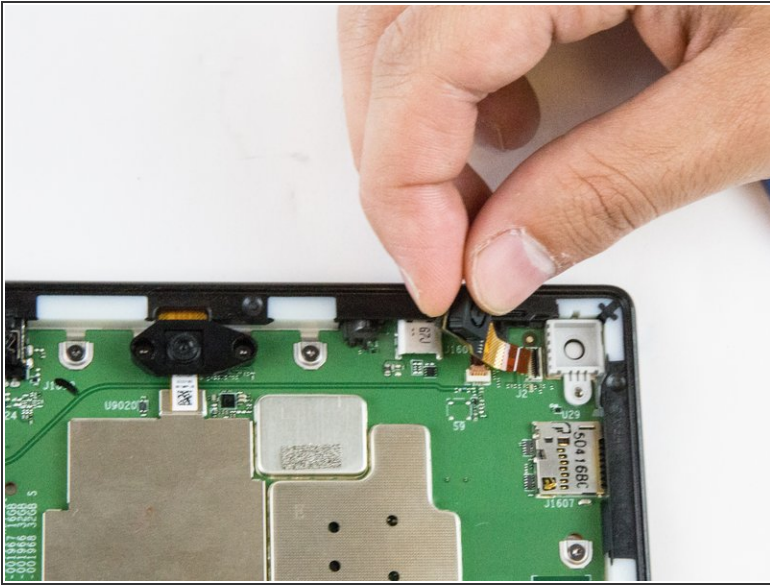

- Gently grab the camera and pull to remove.
- The camera is now free from the motherboard.

To reassemble your device, follow these instructions in reverse order.