


Amazon Fire HD 10 Motherboard Replacement

Replace the motherboard.

Written By: Jaie Hillery

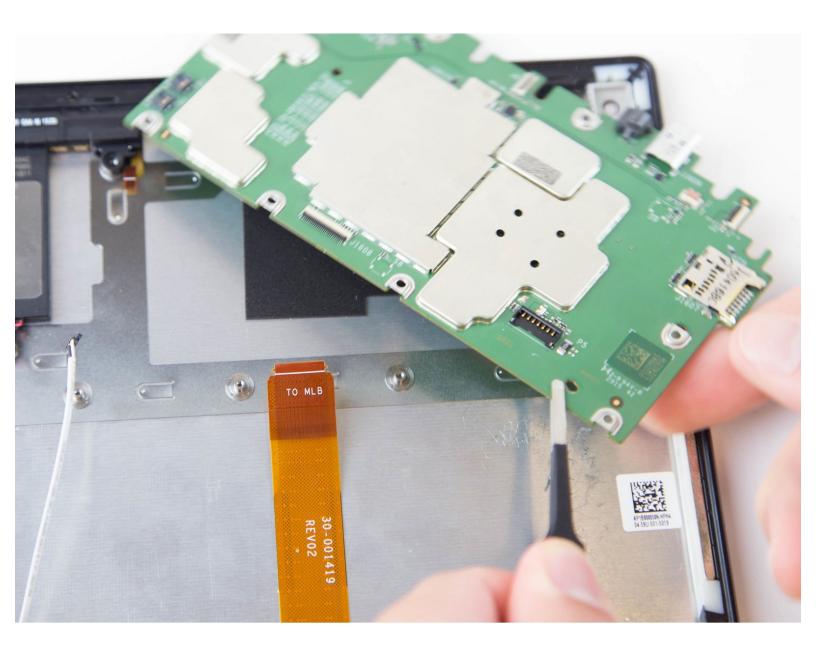

INTRODUCTION

Use this guide to replace the motherboard in your Amazon Fire HD 10.



TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- Tweezers (1)
- Spudger (1)

Step 1 — Screen









Avoid prying near bottom right hand side due to LCD Connector

Use a plastic opening tool to pry the screen up in the right hand corner.

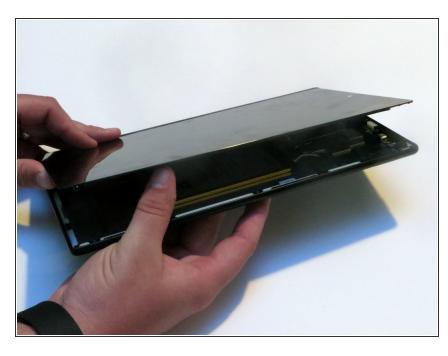


- ⚠ Do not completely remove the screen yet as there is a ZIF connector connected.
- Lift the screen and digitizer from the case.
- (i) You may need to use some force due to the glue.

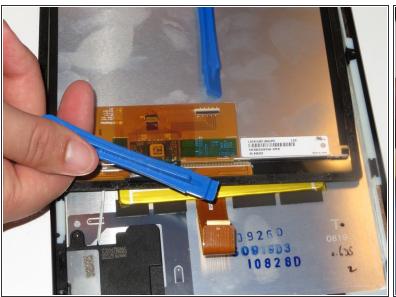



- (i) Be mindful of the ZIF connector.
- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4

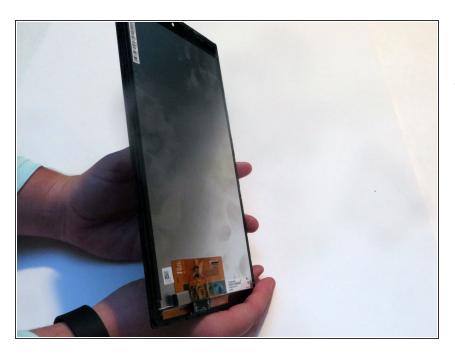


 Remove the screen and digitizer from the case completely.

Step 5 — Battery





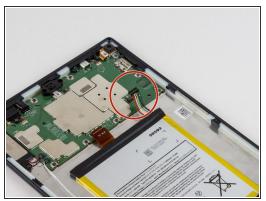

- Locate the power cable that links the battery to the motherboard.
- Carefully unplug the battery power cable to disconnect the battery from the motherboard.
- (i) The third image shows what it should look like with the battery power cable is disconnected.







- Begin by locating the double sided pull tape locations.
- ↑ Do not lift on the battery when doing the following step. You will bend it. It is very pliable.
- Pull the black soft tabs to release the tape's adhesion.
- (i) Make sure you pull the tabs slowly and continuously away from the case until the adhesive is completely out.
- Do this to all 4 tabs until the battery is completely free of adhesion to the device's backing.





- ↑ Make sure all the adhesive is removed before trying to lift the battery from the case.
- After the battery is totally free of any adhesion, simply lift the battery from the case.




- Inspect battery for any leakage.
- Please follow all U.S. regulations and laws when disposing or recycling the battery.

Step 9 — Rear Facing Camera

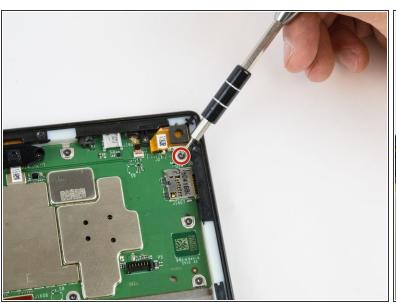

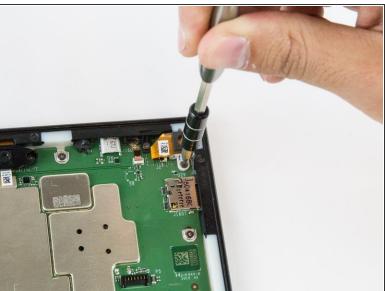


- Remove the single T5 Torx screw at the base of the camera.
- Once removed, place the screw aside in a safe location.

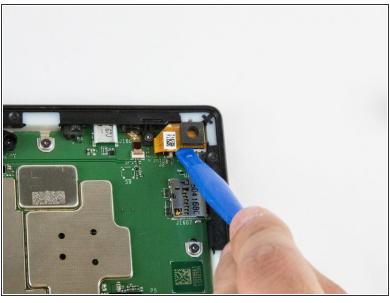




- Lift the camera from the case using the plastic opening tool.
- (i) The camera is still connected to the motherboard via the ZIF connector.

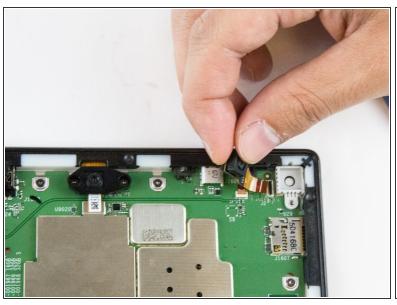





- Gently grab the camera and pull to remove.
- The camera is now free from the motherboard.


Step 12 — Front Facing Camera

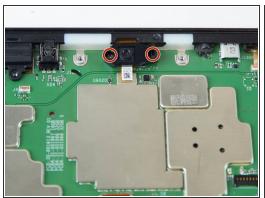


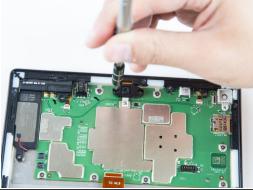

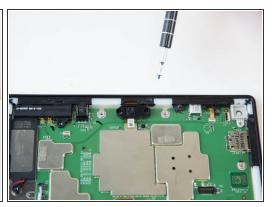



- Remove the two screws from front facing camera using the T5 Torx Screwdriver.
- (i) Make sure you place the screws in a safe location nearby.

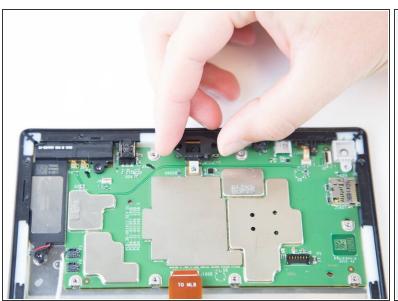

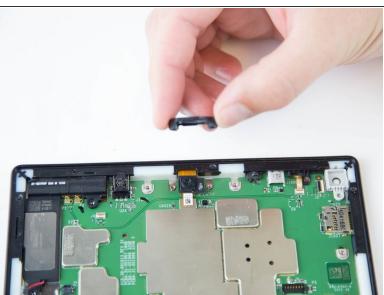


- Lift the black plastic cover once the screws are removed.
- Place aside for later reassembly.

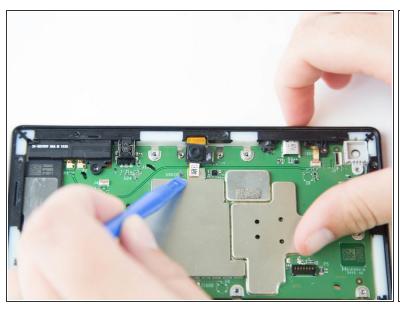

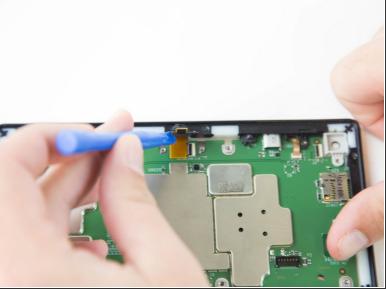


- Detach the connector using a plastic opening tool or spudger.

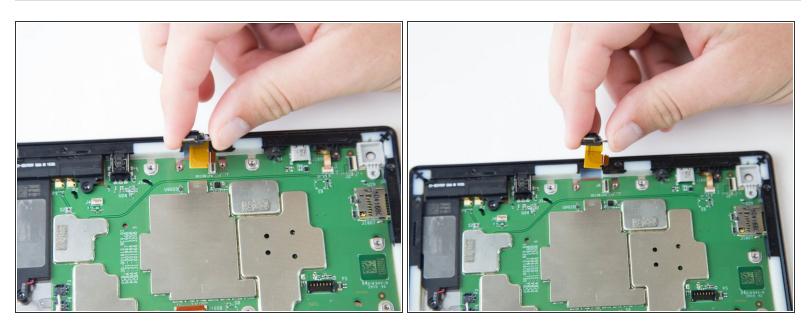


Grip the camera and lift up to detach the ZIF connector from the motherboard.

Step 16 — Motherboard

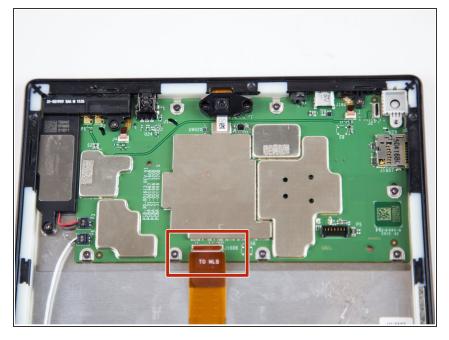


 Lift the ZIF connector up to disconnect from the motherboard.

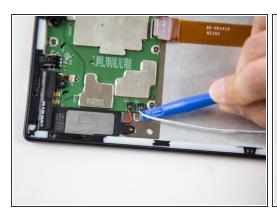








Disconnect the connectors using the plastic opening tool.

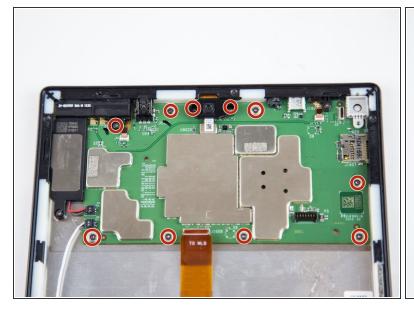


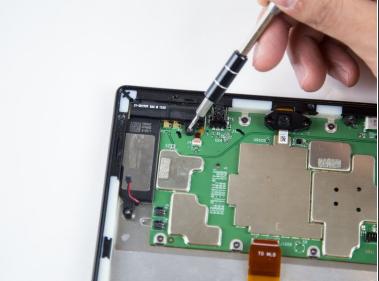

- Remove the ten T5 Torx screws securing the motherboard to the case.
- (i) Keep the screws together in a safe place for reassembly.

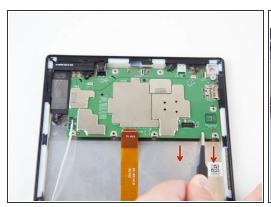

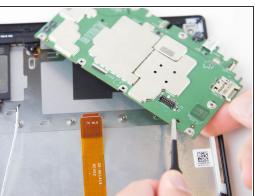

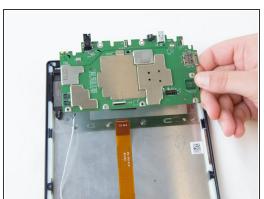

• Lift and pull the motherboard down, gently, towards the case using the tweezers.

To reassemble your device, follow these instructions in reverse order.