



# WowWee MiP Robot Wheel Replacement

Replace the wheels of your WowWee MiP robot.

Written By: Daniel Burkholder



---

# INTRODUCTION

Use this guide to replace the wheels of your WowWee MiP robot.



## TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Wheel



- Use a metal spudger to carefully pry off the hubcap without marring the plastic wheel or hubcap.

**i** This plastic material is not replaceable. Any damage will be noticeable.

## Step 2



- Remove the 12.0 mm Phillips #2 screw.

**i** Hold the wheel in place, or it will rotate as you attempt to remove the screw.

### Step 3



- Pull the wheel off of the square axle.

**⚠ Do not use excessive force while removing the wheel. Pulling too hard on the wheel can damage the axle.**

To reassemble your device, follow these instructions in reverse order.