




Pentax Optio WG-2 Menu Buttons Replacement

Replace the buttons of your Pentax Optio WG-2.

Written By: Matthew Bessette

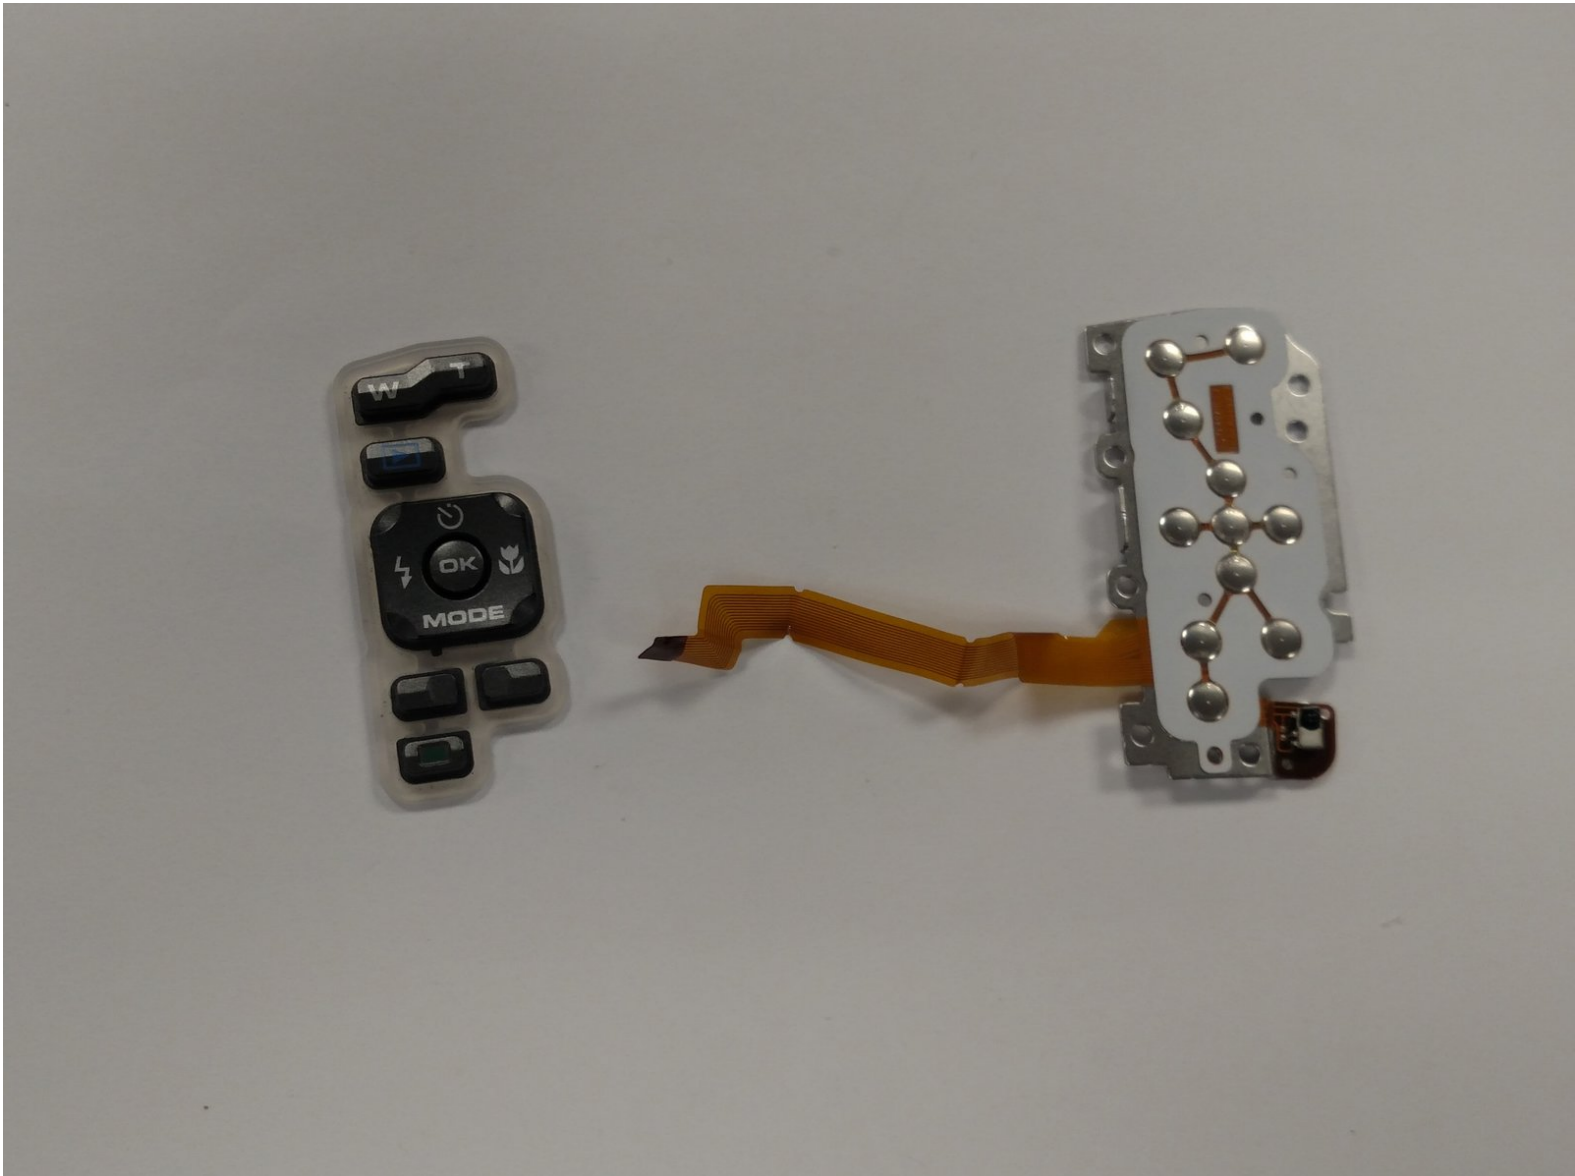

INTRODUCTION

Use this guide to replace the buttons on the back of the camera that control the various menu options.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [JIS Driver Set](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Case




- Remove all four 1 mm JIS #00 screws from the back of the camera.

Step 2




- Use your finger to peel the grip off the top of the camera.
 - For best results, start from the right side of the camera, opposite the buttons.
- ⚠ Once the grip is removed, you will most likely lose the water-tight seal.

Step 3

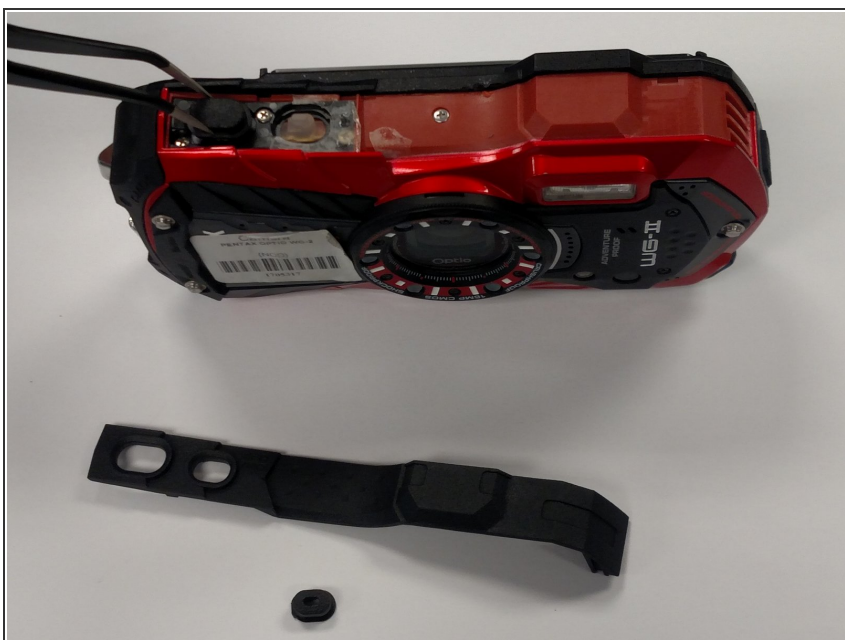

- Use the tweezers to remove the two buttons from the top of the camera.
- ⓘ The buttons may fall out while removing the grip.

Step 4

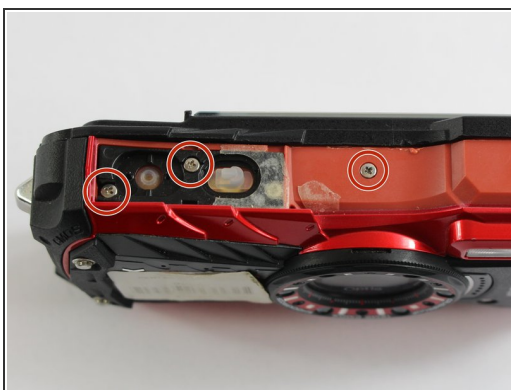

- Remove the three 1 mm JIS #000 screws from the top.
- Remove the 1 mm JIS #000 screw from the bottom.


Step 5



- Carefully separate the back and the front of the camera.



⚠ There are three ribbon cables connecting the two boards. Be careful not to tear them.

Step 6

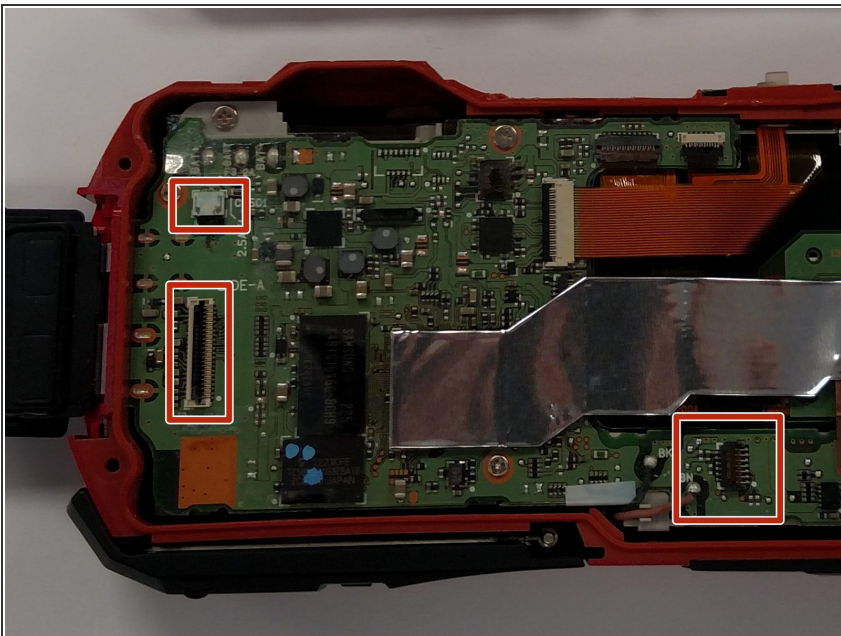

- Use the tip of a spudger to flip up the small retaining flaps on the ribbon cable ZIF connectors.
- Carefully pull the ribbon cables out of their sockets.

Step 7 — Menu Buttons

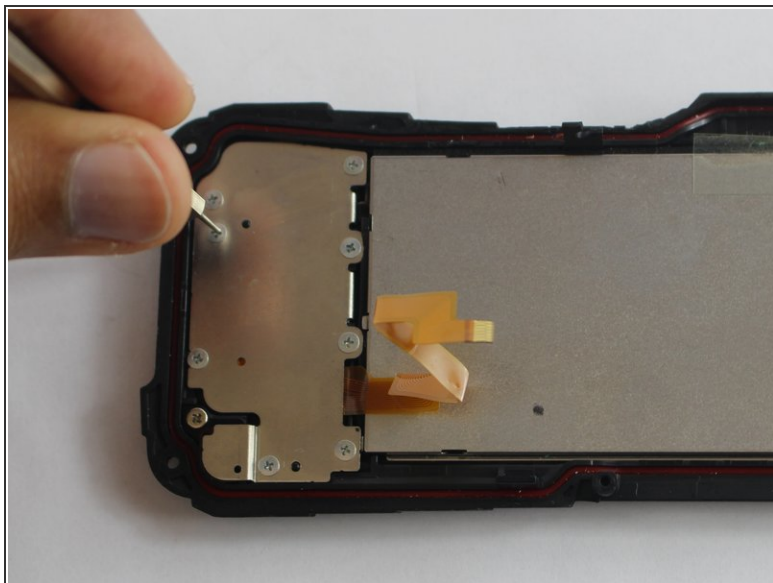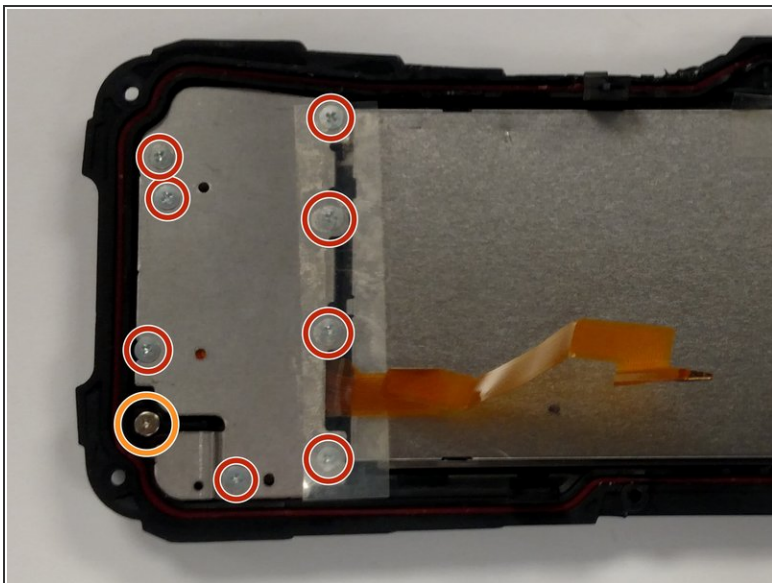

- Remove the eight JS#000 screws using a screwdriver and lift panel up.
- This screw does not need to be removed.

Step 8



- Once panel is removed the button 'sheet' can be removed.

To reassemble your device, follow these instructions in reverse order.