




Digital2 Platinum Pad 9 Volume Buttons Replacement

In this guide we will be showing you how to remove the volume buttons.

Written By: David DeMeritt

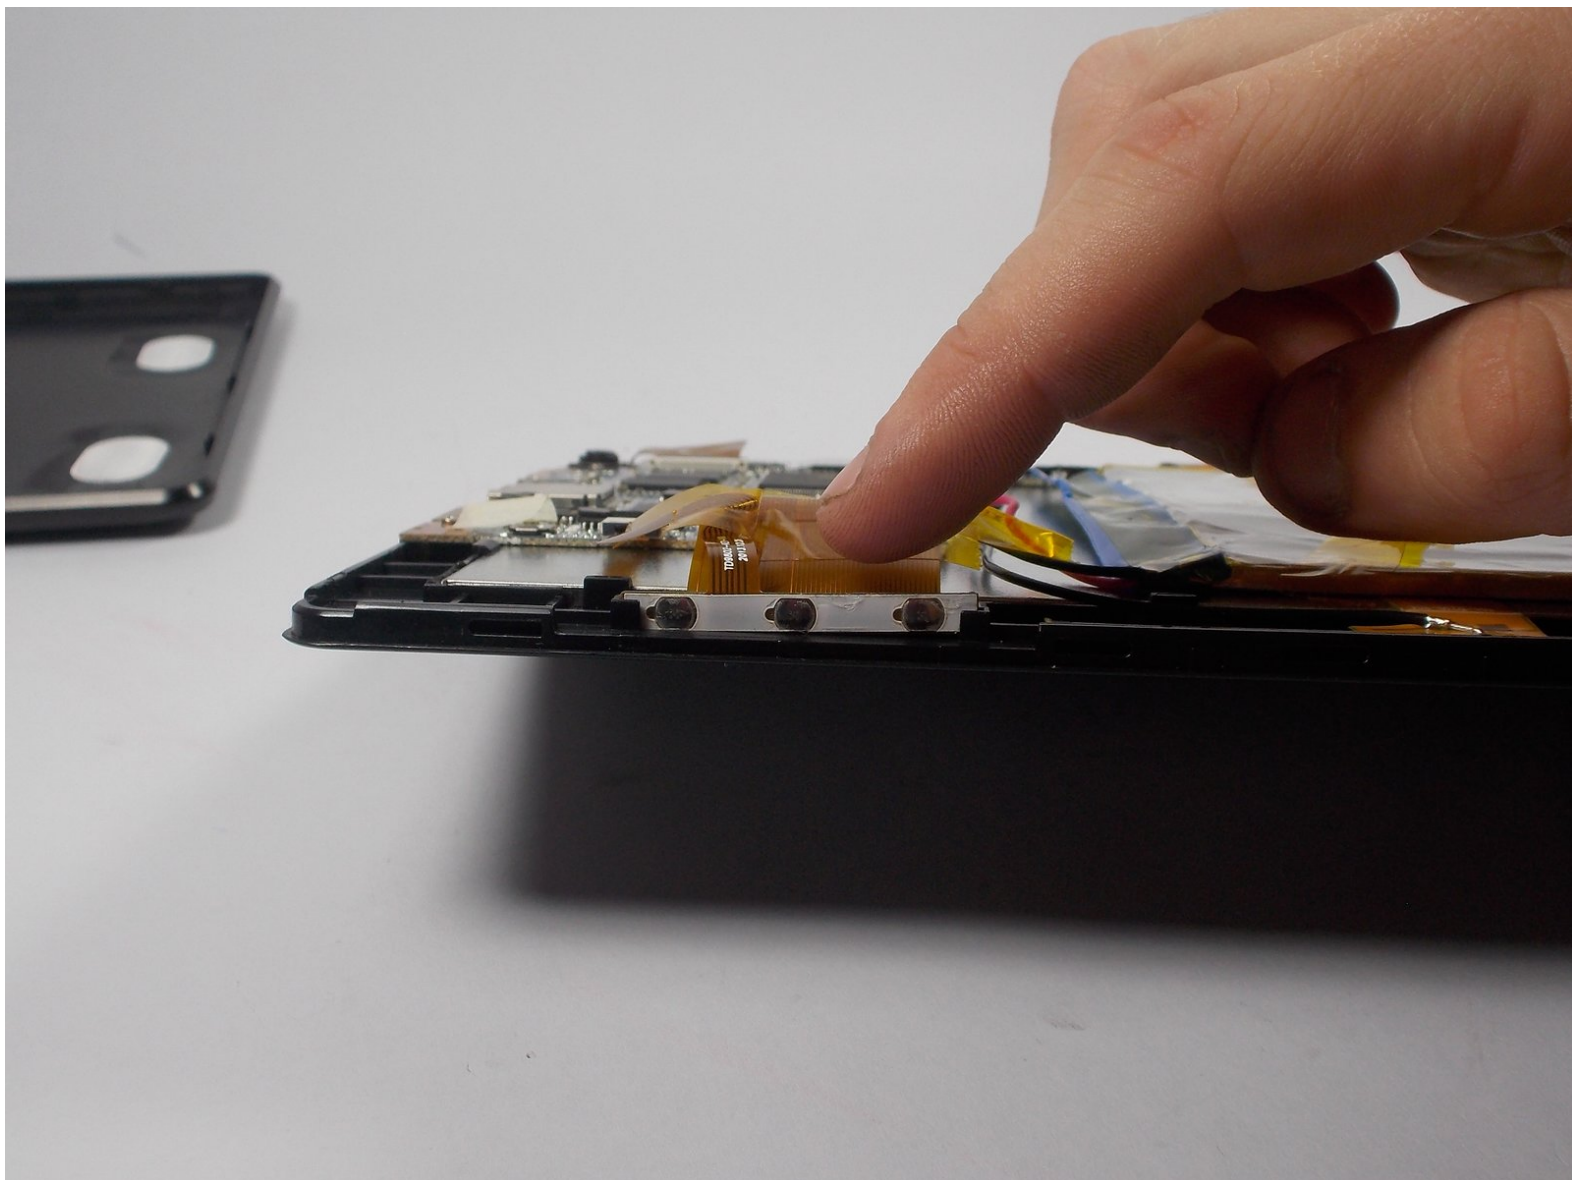

INTRODUCTION

We are going to teach you how to remove the buttons of your Digital2 Platinum Pad 9. This is a very simple guide and easy to follow and complete. But you will need to be able to identify components, you can learn how to do that by following this guide [Recognizing & Disconnecting Cable Connectors](#).

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — External Cover



- Take the plastic opening tool and insert it into the crease between the screen and the plastic casing and press down.

Step 2



- After inserting the plastic opening tool, run it around the device a few times to loosen the external cover.

Step 3




- Once you've gone around a few times a corner will pop up, insert the opening tool there and repeat step 2 with slightly more pressure. Do this until every section of the backing has popped up.
- Then just remove the backing.

Step 4 — Volume Buttons




- You can locate the volume buttons on one of the longer sides of the tablet.

Step 5

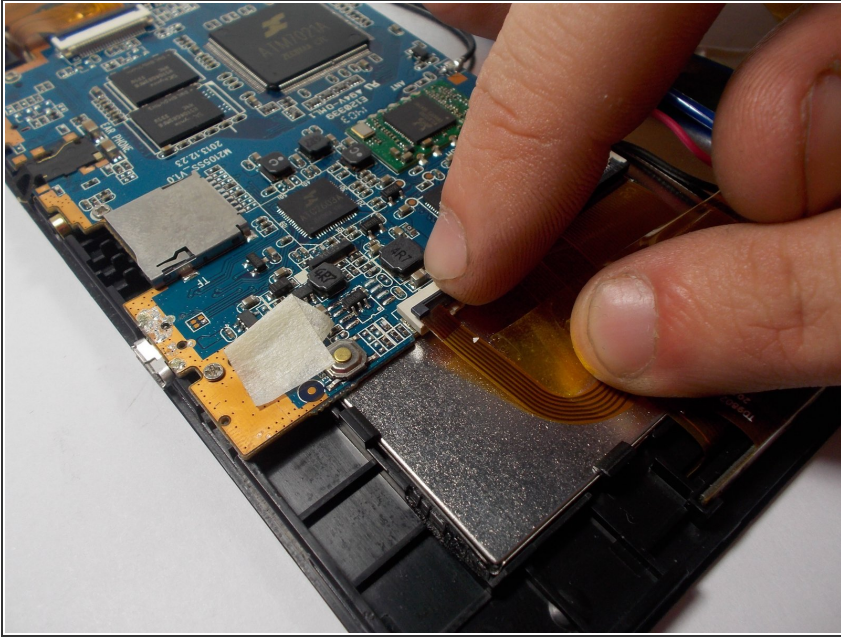

- Lift up the ZIF connector that is attached to the volume buttons ribbon cable.


Step 6

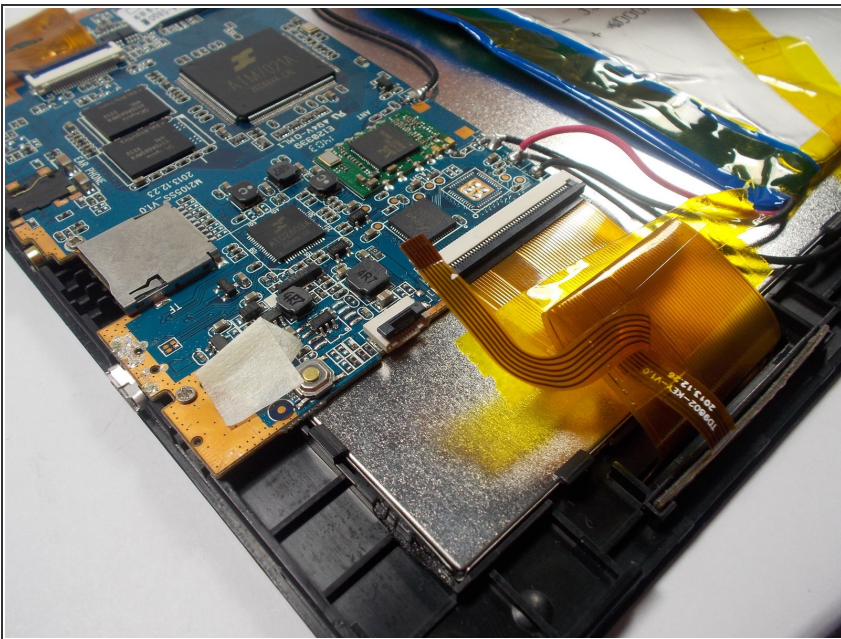



- Then remove the ribbon cable from the ZIF connector.

Step 7



 Make sure to separate the volume button's cable from the cable connecting the motherboard to the screen

Step 8

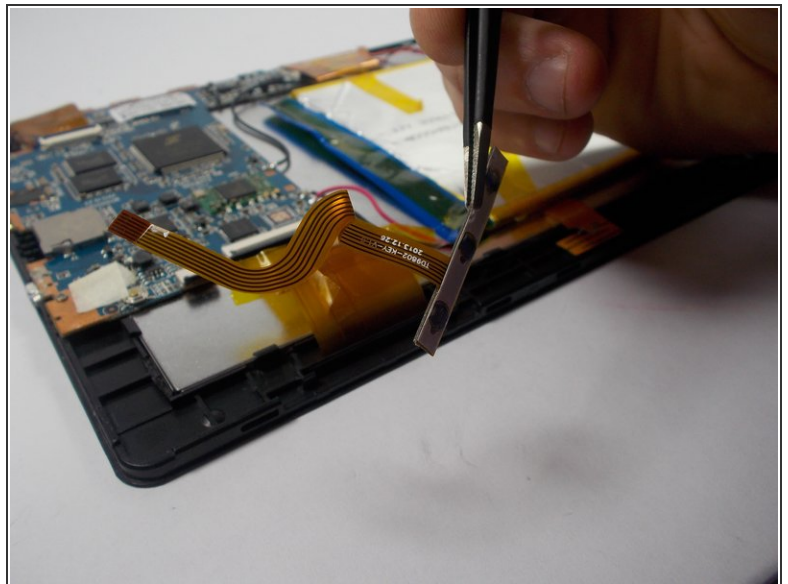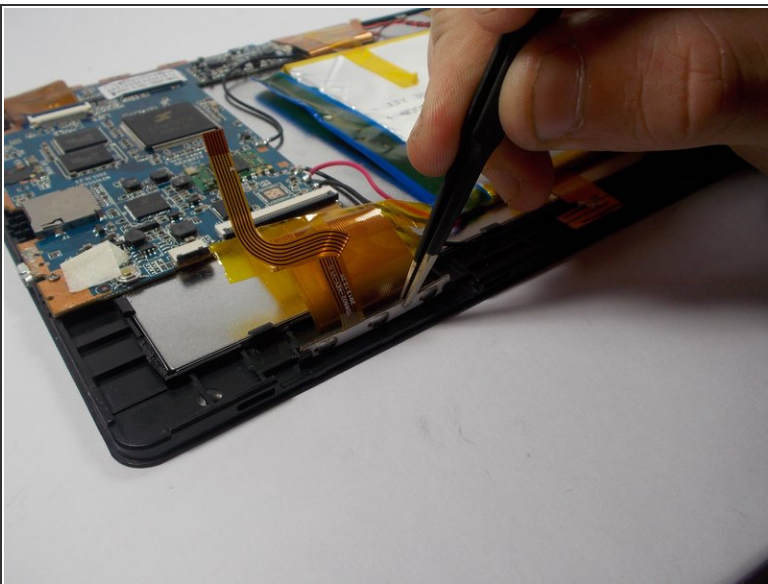

- Then use the precision tweezers to grab the volume buttons.
- Pull until the buttons come out.

To reassemble your device, follow these instructions in reverse order.