



FoodSaver V4980 Liquid Chamber Accessory Replacement

This guide will walk you through replacing the liquid chamber.

Written By: Mackenzie Grossgold



INTRODUCTION

The liquid chamber can be replaced very easily and requires no tools.

Step 1 — Liquid Chamber Accessory



- The liquid chamber accessory can be found on the top-left side of the appliance.

Step 2



- Pull the black top (identified with the rubber loop) from the liquid chamber. You may now replace/clean the accessory.

To reassemble your device, follow these instructions in reverse order.