



# Sony Handycam CCD-TR5 Video/Audio Input/Output Replacement

How to replace a Sony Handycam CCD-TR5 video/audio input/output.

Written By: Aaron Hovde



---

## INTRODUCTION

The Audio and video connectors are important aspects for the Sony Handycam as they are used for carrying audio and video signals and allow the camera to output audio and visual.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Video/Audio Input/Output




- Use a Phillips #00 screwdriver to remove the eight screws located on the bottom of the camera.

## Step 2




- Use a Phillips #00 screwdriver to remove the five cassette side cover screws.

### Step 3

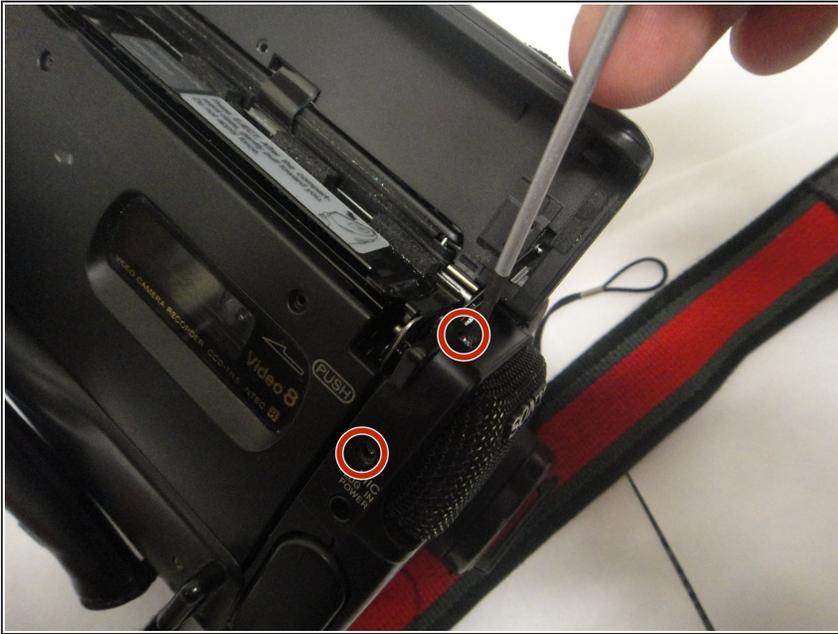


- Use a Phillips #00 screwdriver to remove the two top microphone screws.
- Remove the microphone and cassette side cover.

### Step 4

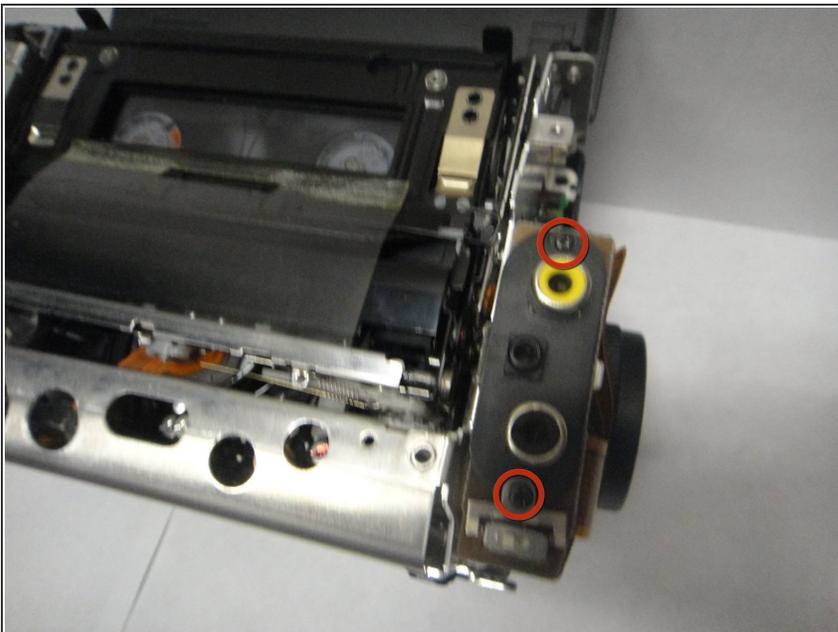

- Use a Phillips #00 screwdriver to remove the two screws from the Input/Output.

## Step 5

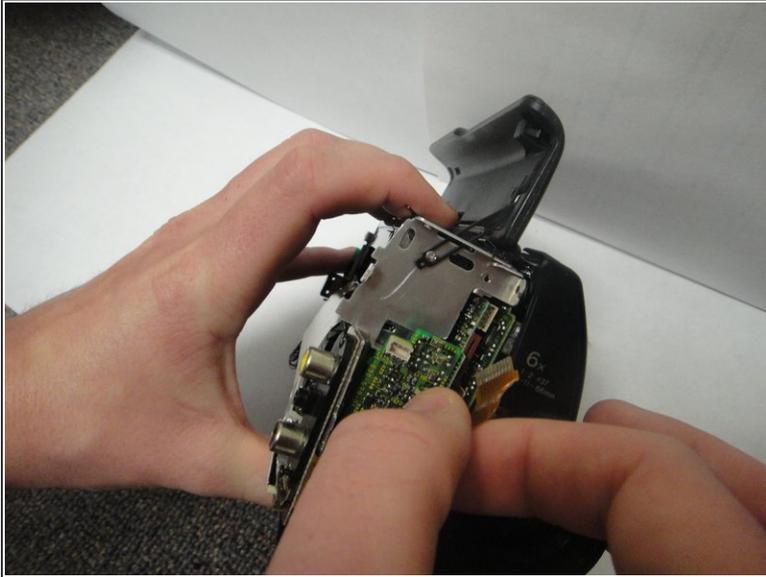

- Gently remove the Input/Output plug from the camera.

To reassemble your device, follow these instructions in reverse order.