



HTC Inspire 4G Speaker Replacement

This page shows that how to replace the speaker.

Written By: MOHANAD





TOOLS:


- [Spudger](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Speaker



- Use a plastic opening tool to take off the rear panel.

Step 2

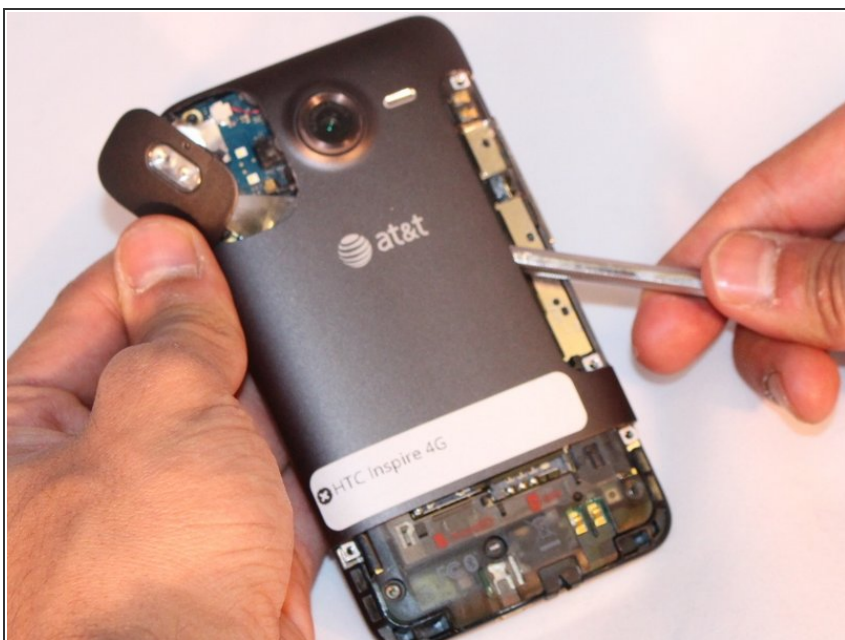

- Use a curved metal spudger to remove the rear panel.
- ⓘ Always try using a nylon spudger or plastic opening tool first; metal spudgers are not ESD-safe and can potentially damage your device.

Step 3



- Push up to remove the back cover.

Step 4



- Remove the earpiece speaker connector using the tweezers.
- Pry out the speaker using a nylon spudger.

To reassemble your device, follow these instructions in reverse order.