



# Apple IIc Power Converter Replacement

If you are having trouble with powering your...

Written By: Josiah



# INTRODUCTION

If you are having trouble with powering your computer, it is possible that your power converter needs to be replaced. If that is the case, this guide will show you how to locate and carefully remove the power converter step by step.

## TOOLS:

Phillips #2 Screwdriver (1)

iFixit Opening Tool (1)

### Step 1 — Disassembling Apple IIc Cover



- Remove the six 19 mm long screws with a #2 Phillips head screwdriver.




## Step 2




- Release the catch by pushing it in using a plastic opening tool.
- ① The catch is off-center, but in line with the middle of the speaker underneath.

## Step 3

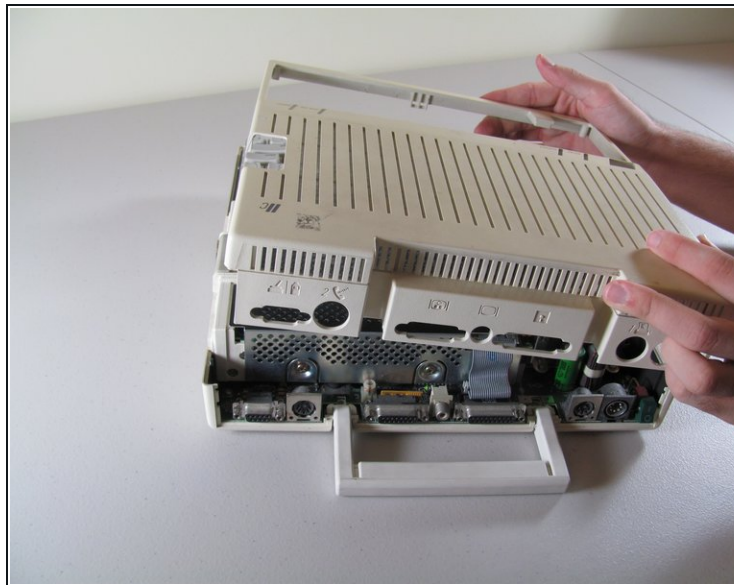

- Slide the case toward the ports on the back, then grip under the catch and pull up while moving toward the ports to remove.

## Step 4

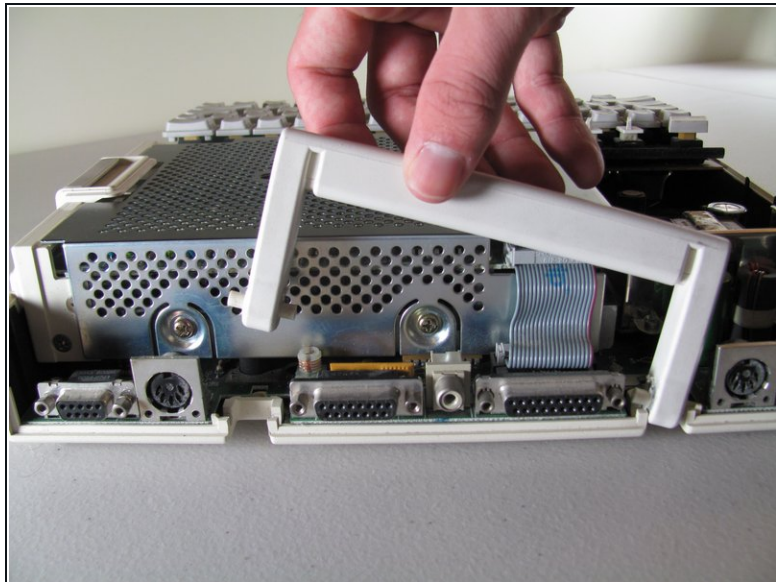

- Lift the handle straight up to remove.


## Step 5 — Power Converter



- Remove the two 7.7mm length Phillips screws that secure the power converter.



## Step 6

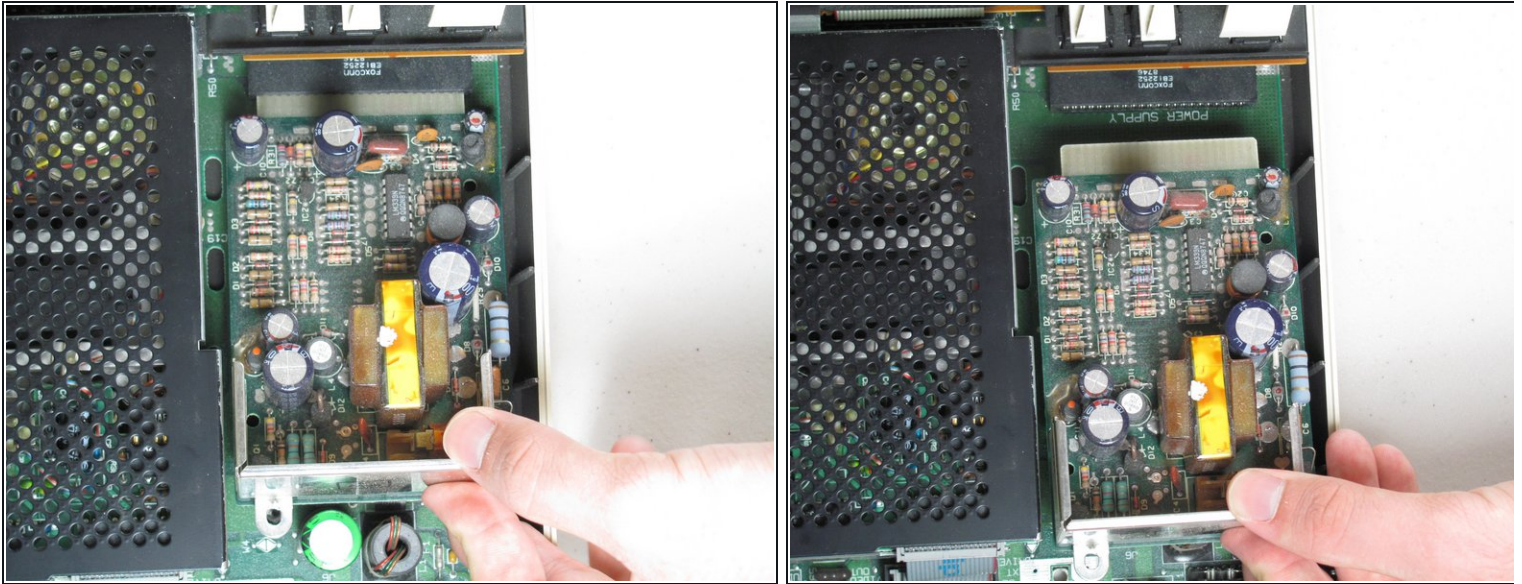

- Grab the back of the power supply and pull out while lifting up so that it will clear the other components.

**⚠ The power supply can be difficult to remove so be careful not to bend or damage any nearby components while you pull out the power supply.**

To reassemble your device, follow these instructions in reverse order.