



# HTC Wizard 200 LCD Screen Replacement

Installation of the LCD Screen on the HTC Wizard 200.

Written By: Kyle Champ



# INTRODUCTION

This guide will explain how to install / remove the LCD screen from the HTC Wizard 200.

---

## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Battery



- To expose the battery, remove the outer case with your fingernail.
- Remove the battery by pulling the black tab.

## Step 2 — Back Panel



- Insert the flat end of the [spudger](#) into the two notches on the back of the camera cover and pry them up.




## Step 3




- Work the [spudger](#) around the edges of the camera cover until it comes off.

## Step 4

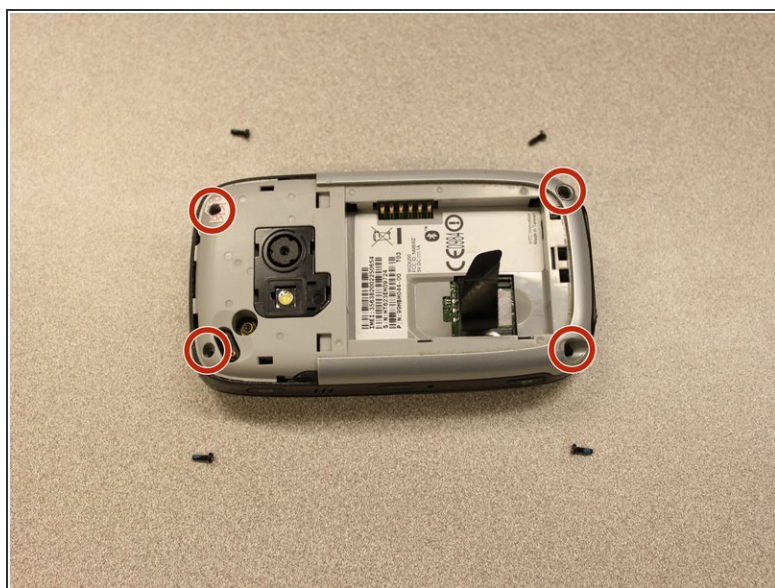

- Remove the four 6 mm screws with the [T5 Torx screwdriver](#).

 One of the screws is under the "void" sticker.




## Step 5



- Insert the flat end of an iFixit opening tool between the side and inner covers to create a gap.
- Work the tool around the edges until all the clips release.

## Step 6

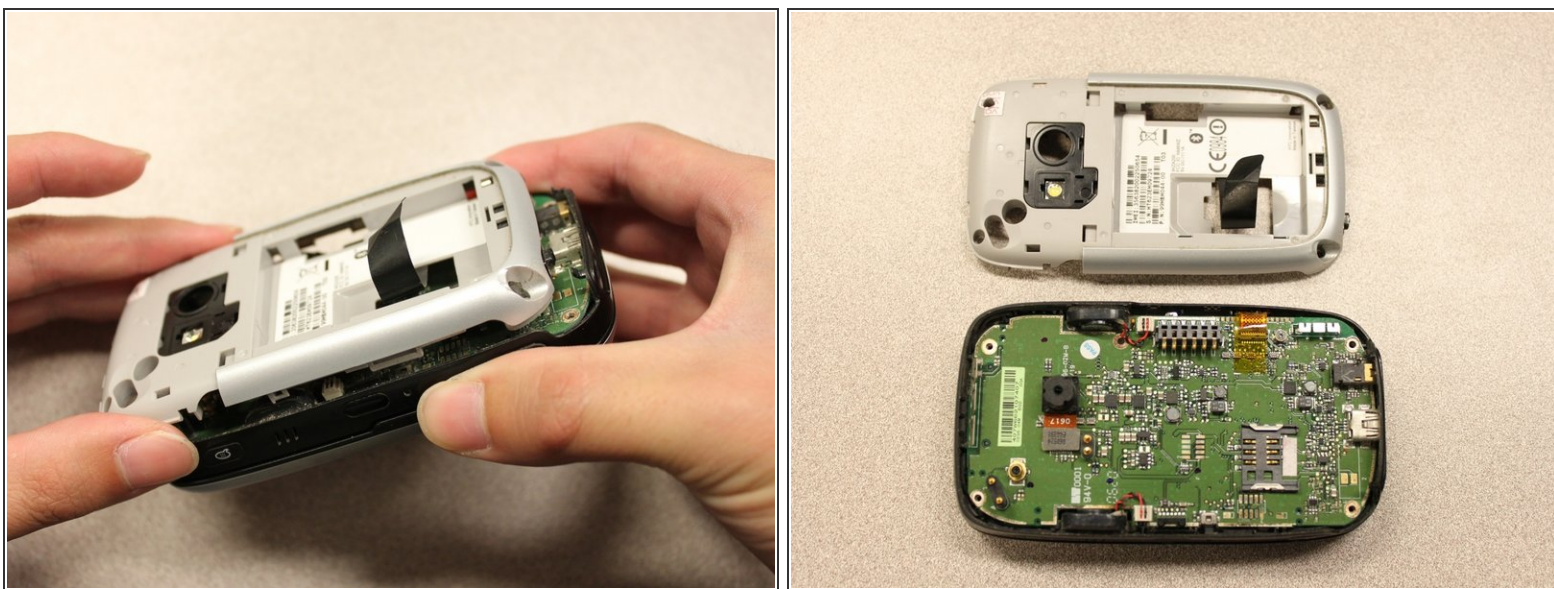



- Once all the clips are open, remove the inner panel from the phone.

## Step 7 — Motherboard



- Use the [spudger](#) to pry the camera off.

## Step 8

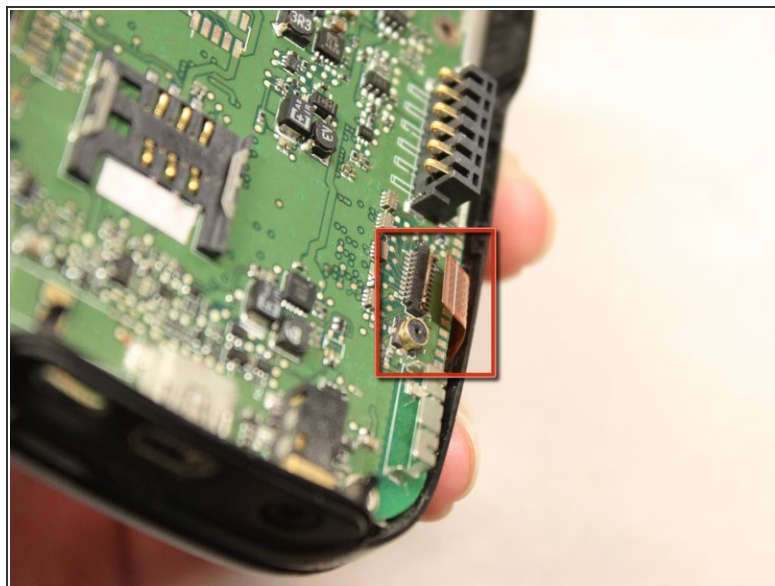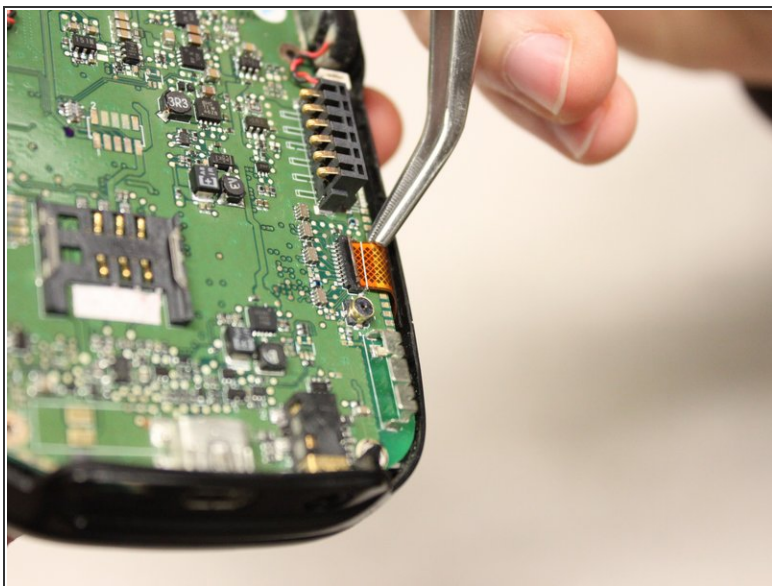

- Using [tweezers](#), flip the connector latch away from the motherboard.
- Detach the flexible connection from under the connector latch.




## Step 9





- Slide the keyboard into the open position.

## Step 10

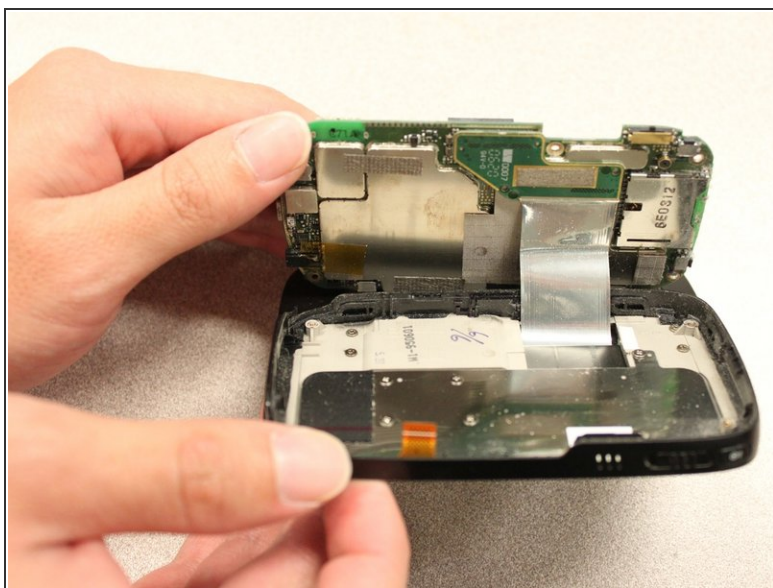

- Lift the motherboard out of the case using the [spudger](#).
- Expose the underside of the motherboard using your hands.


## Step 11

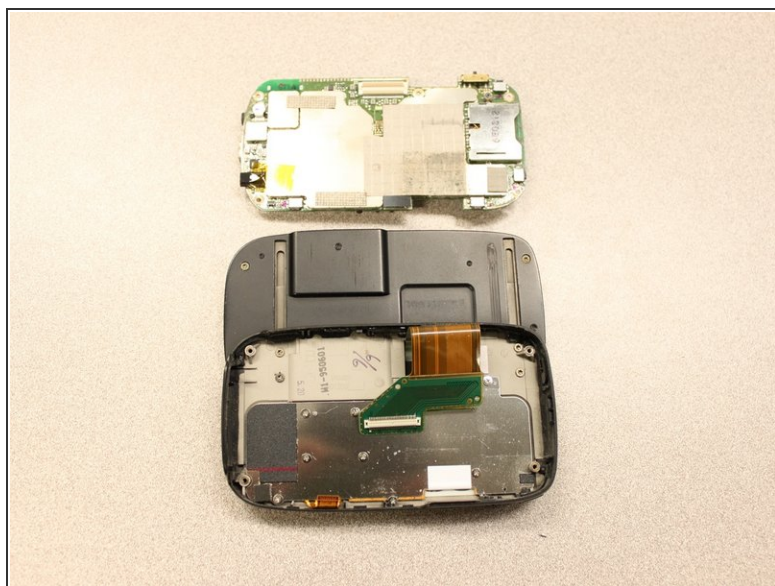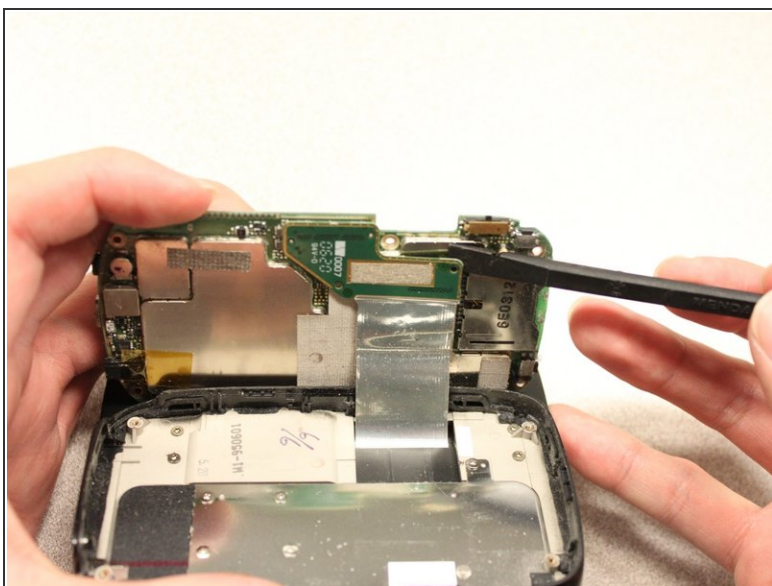

- Remove the flexible connection from the motherboard.

⚠ Caution: Removing the connection too fast may cause damage to the connection and cables.



## Step 12 — Keyboard Slider

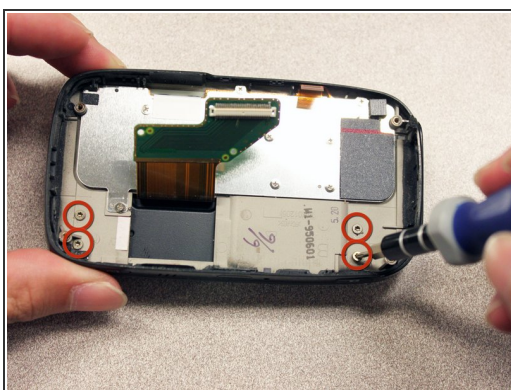

- Remove the four 5mm screws with the [T5 Torx screwdriver](#).
- Remove the keyboard slider from the main body.





## Step 13 — Screen Cover

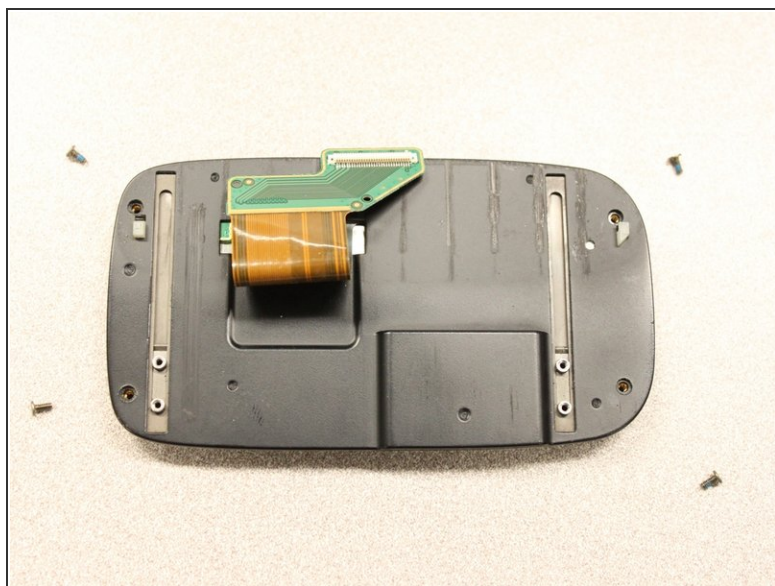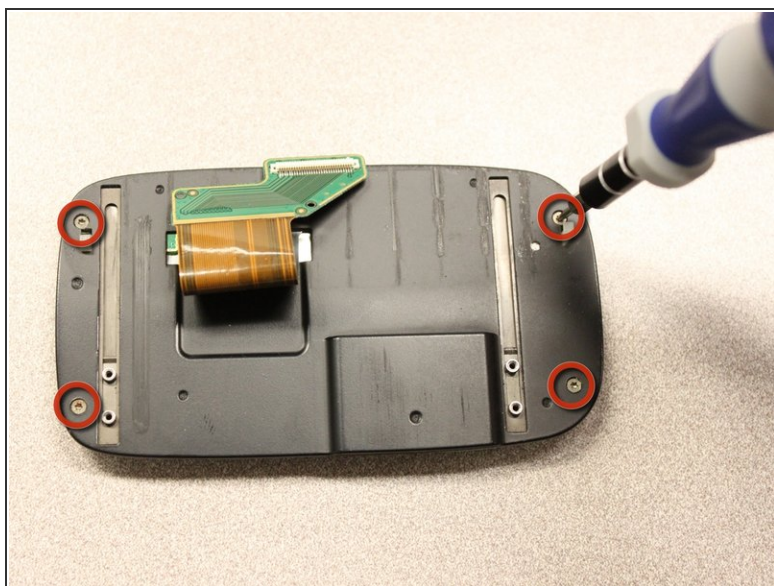


- Use the T5 Torx screwdriver to remove four 5mm screws that secure the back of the screen casing.

## Step 14

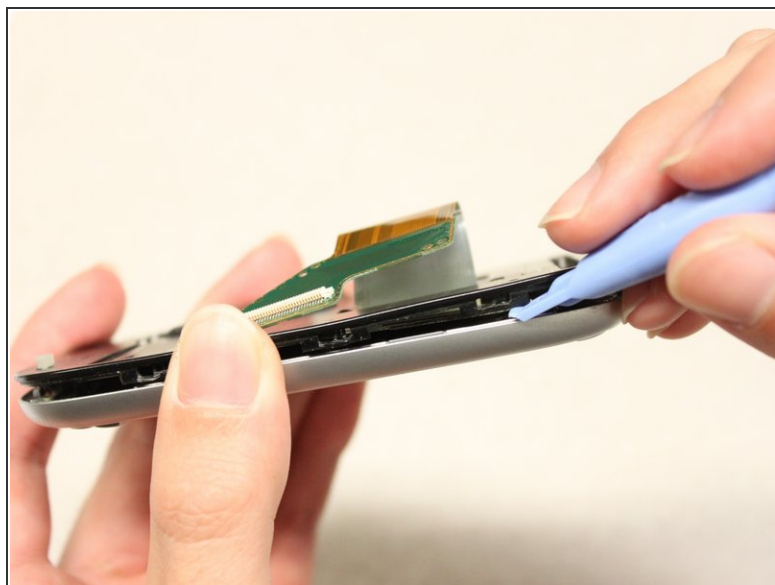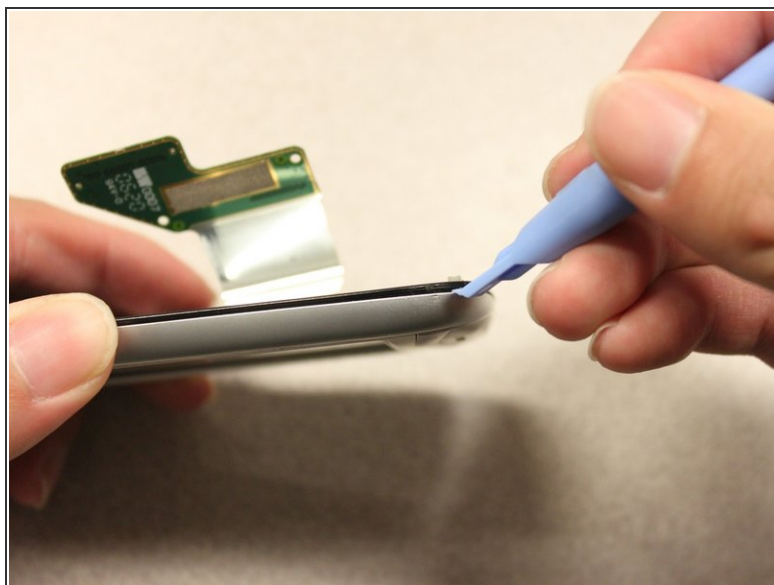


- Insert the plastic opening tool between the front panel and the rear panel and pry open to reach the screen.

## Step 15

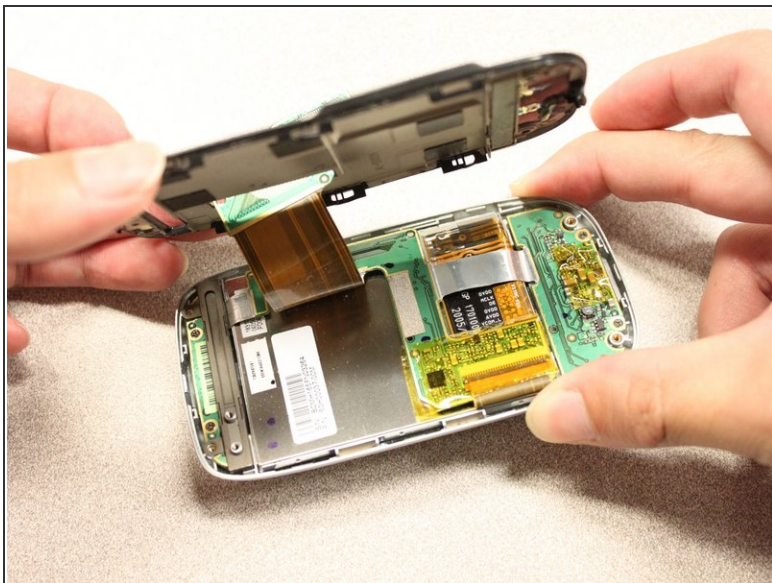

- Once the rear panel is loose, lift it off of the front panel.
- The flexible connection will pop loose.



## Step 16

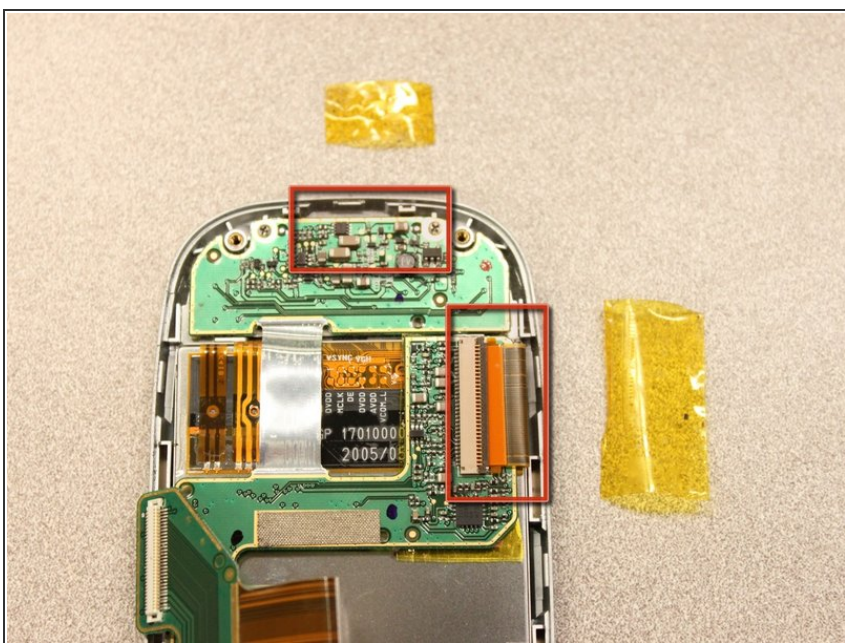

- ① Device rotated 90 degrees CCW.
- Remove the yellow anti-static tape.




## Step 17

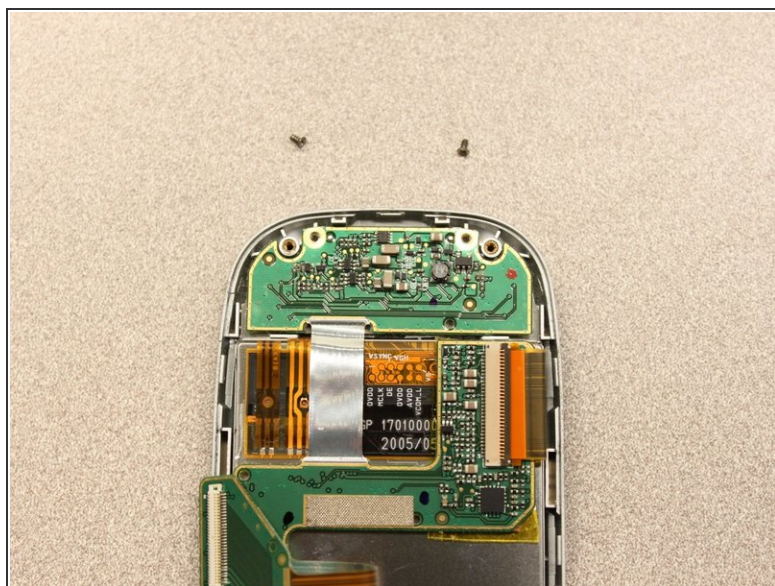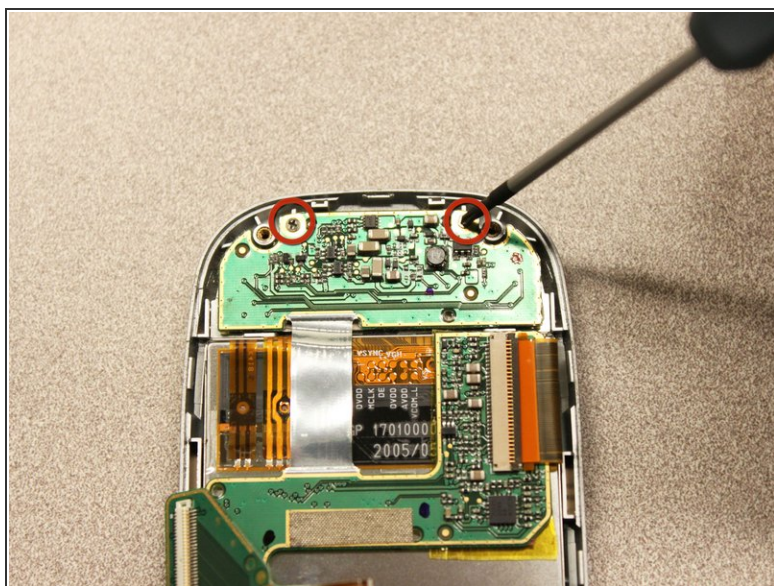

- Unscrew the two 3mm phillips #0 screws from the bottom of the device that secure the rigid flex board to the screen panel.


## Step 18

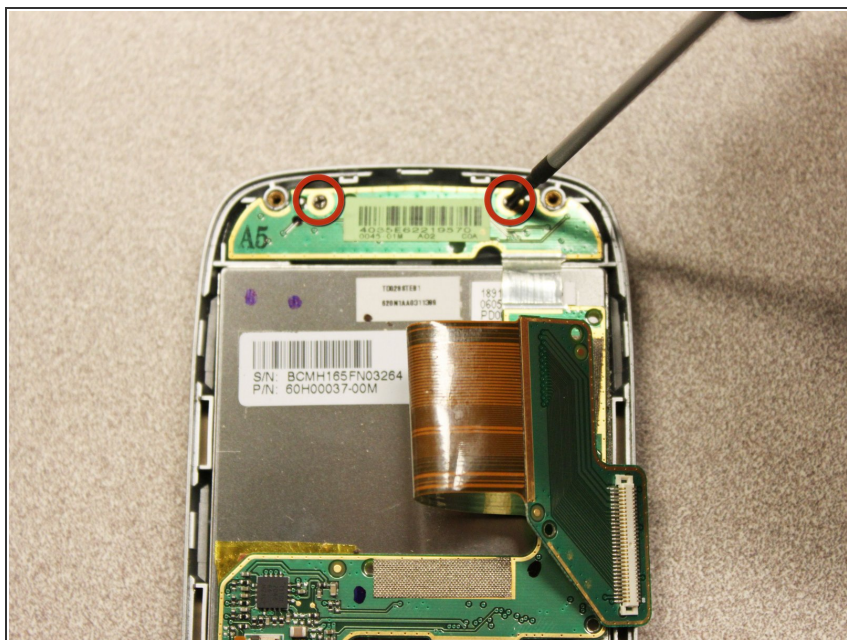

ⓘ Device rotated 180 degrees CW.


- Unscrew the two 3mm phillips #0 screws from the top of the device that secure the rigid flex board to the screen panel.

## Step 19

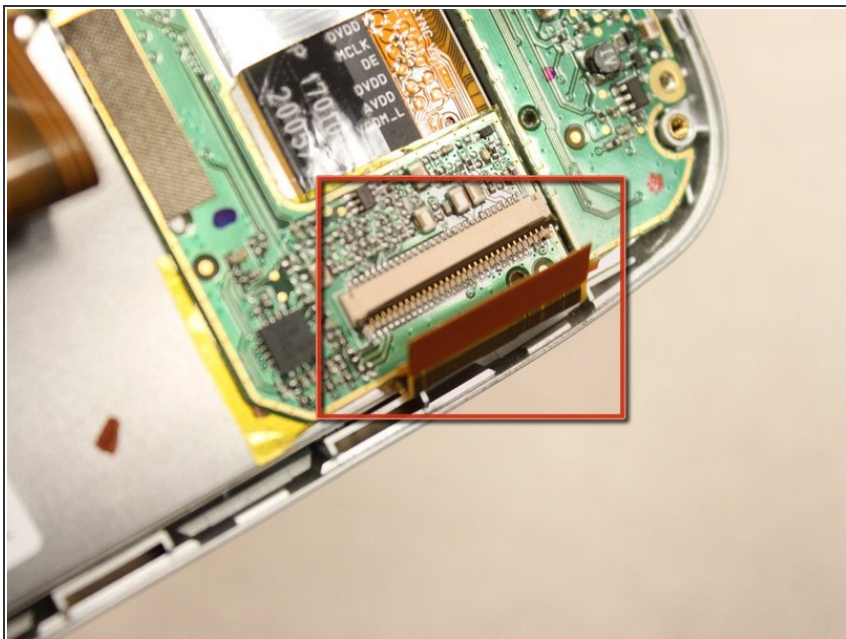

- ① Device rotated 90 degrees CCW.
- Unhinge the flexible connection and use the tweezers to disconnect.

## Step 20

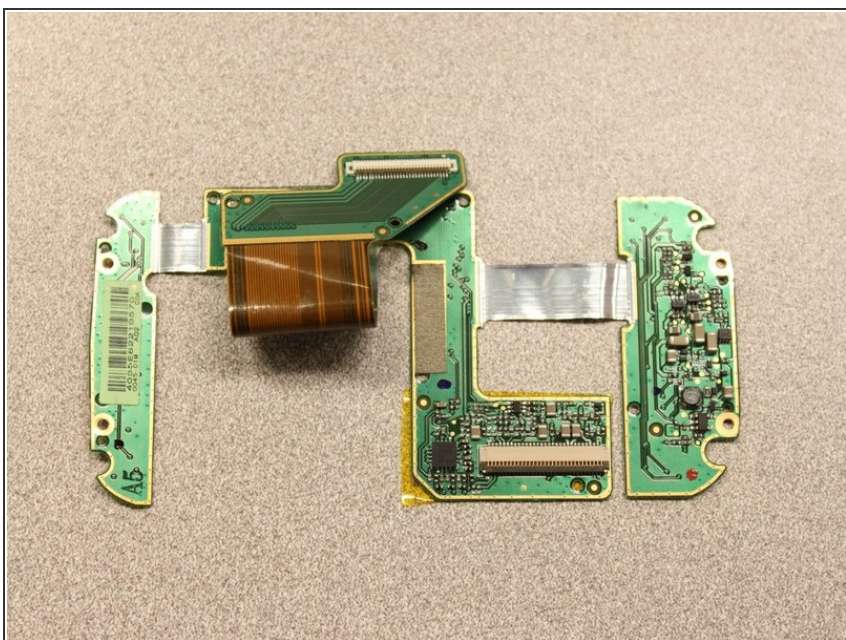

- Now that the rigid flex board is loose, remove it from the screen.



## Step 21 — LCD Screen



- Simply pull out the loose screen.

To reassemble your device, follow these instructions in reverse order.