



Kodak Signet 35 Back Cover Replacement

Use this guide to replace the back cover of the Kodak Signet 35.

Written By: Christopher Negrón



INTRODUCTION

This guide will walk you through the process of replacing the back cover of the Kodak Signet 35.

Step 1 — Back Cover



- While the lens is facing away from you, there is a button at the center of the latch on the right side. Press this button with your finger and slide the latch downward. This will disengage the latch, opening the back of the camera.

Step 2



- Open the back cover and it will unhitch on the left.

To reassemble your device, follow these instructions in reverse order.