



Verizon Wireless CDM 7075 Screen Replacement

This guide provides the information on how to...

Written By: Corey Ryman



INTRODUCTION

This guide provides the information on how to replace a screen for a Verizon Wireless CDM 7075. If your screen starts to blur, gets dark, or does not turn on at all then it may be time for a replacement screen.

Prior to beginning this guide, ensure that the device is disconnected from any charging ports and fully turned off. Ensure that you have the replacement screen ready and in hand before beginning this guide.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Battery



- Remove the back panel by first pressing and holding the gray button on the back. While doing that also press and slide the panel down and off.

Step 2



- Carefully remove the battery from the phone by prying the battery from the top.

Step 3 — Screen



- Remove the rubber plugs from the screw holes around the screen with the opening tool.

Step 4



- Remove the four screws from around the phone's screen with a Phillips screwdriver.

Step 5



- Pry the top cover off the phone with a plastic opening tool.

Step 6



- Remove the screen assembly from the phone.

Step 7



- Pry the circuit board off of the screen with the opening tool.

To reassemble your device, follow these instructions in reverse order.