

LG G Pad 7.0 LTE Speaker Replacement

Written By: Fadi Bitar



 **TOOLS:**

Tweezers (1)

Phillips PH000 Screwdriver (1)

iFixit Opening Tool (1)

Anti-Static Wrist Strap (1)

Step 1 — Removing the Back Cover



- Power off your device before beginning the battery replacement (hold the button with the red marker until the device prompts you to power it off, then tap "Power Off").

 **Be wary of the front screen and SIM Card while tearing down the device.**

Step 2




- ✦ Put on an [Anti-Static Wrist Strap](#) to prevent damage to sensitive electrical components (optional).
- To separate the frame from the cover, pry between the screen and the cover using a plastic prying tool.
- ⚠ Begin at the top left of the device to avoid damaging the motherboard and work your way around the perimeter of the screen.
- ⚠ When you pry your device open, be wary of the volume rockers, motherboard, and camera. These components are delicate and can be sensitive to static electricity.

Step 3 — Speaker



- Remove (1) Silver 3mm PH0 screw from the speaker (red marker).

Step 4

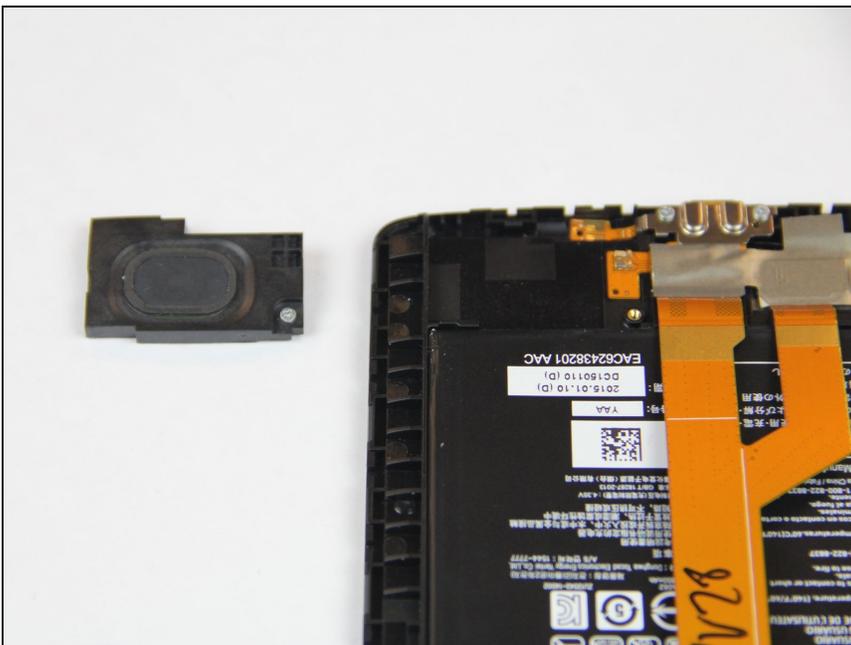

- Remove speaker from device.

To reassemble your device, follow these instructions in reverse order.

