



# Sony Vaio PCG-4G1L Battery Replacement

A demonstration on how to remove and replace the battery for the Sony Vaio PCG-4G1L device.

Written By: Cole Collins



## INTRODUCTION

Common reasons for removing the battery could be a device shutting down while unplugged, or a battery that does not charge.

In this guide, you will learn how to replace the battery for your device. Please remember to unplug the charging cable, since it could result in electric shock.

## Step 1 — Battery



- Turn off the computer and disconnect the charging cable.


⚠ Failing to unplug the cable can result in electric shock.

## Step 2



- Slide battery release toggle switch towards the "RELEASE" print.

### Step 3

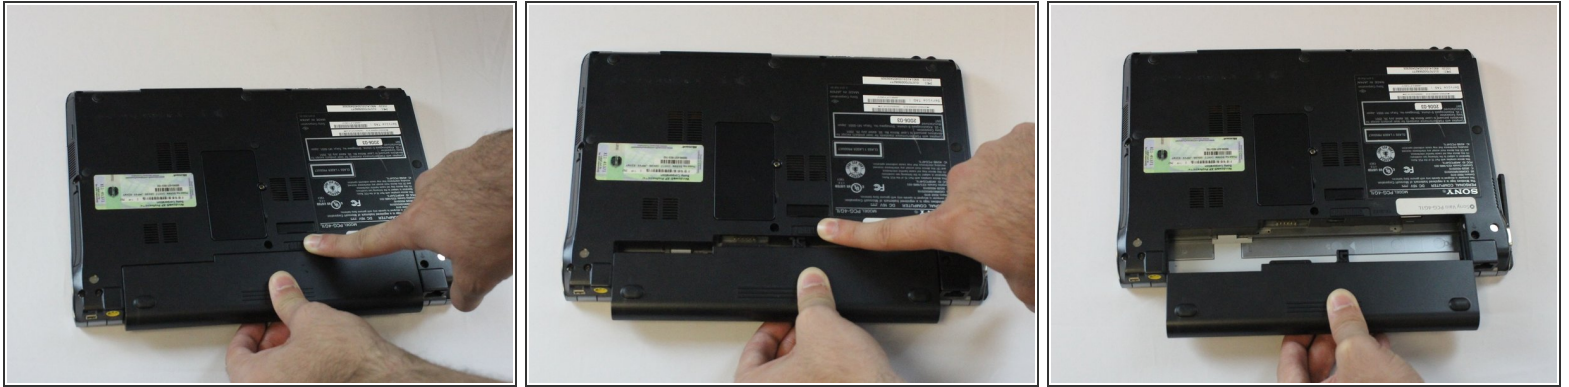

- Apply pressure with your thumb on the grip.
- Pull the battery out while simultaneously holding the battery release toggle switch in the release position.

To reassemble your device, follow these instructions in reverse order.