 




# How to clean Magnavox MWD200F gears

This will give you a brief description of how you clean the gears on the disc drive.

Written By: Taryn

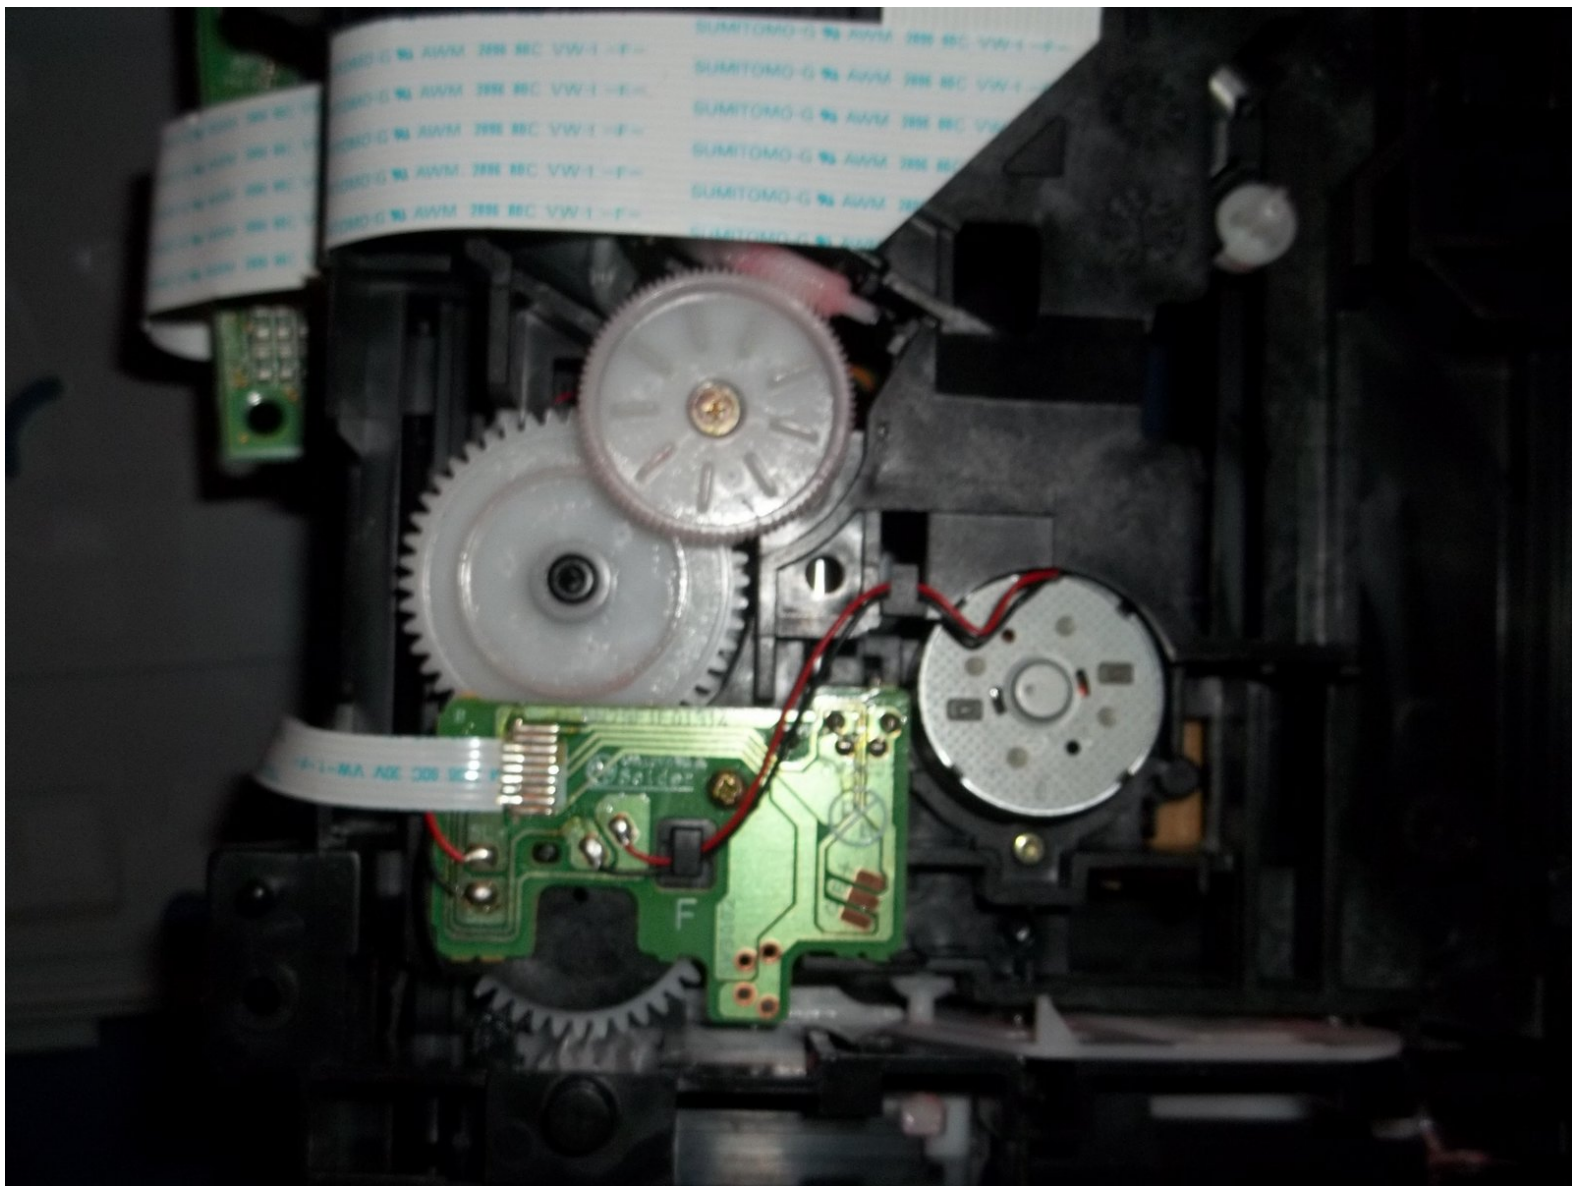



## TOOLS:

- [Cotton Swab](#) (1)
  - [High Content Rubbing Alcohol](#) (1)
  - [Soft Cloth](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Faceplate



- Use a Phillips #2 screwdriver to remove the two screws on the top of the device toward the back.


## Step 2



- Remove the plastic cover by lifting up the back and pulling it away from the faceplate.



### Step 3

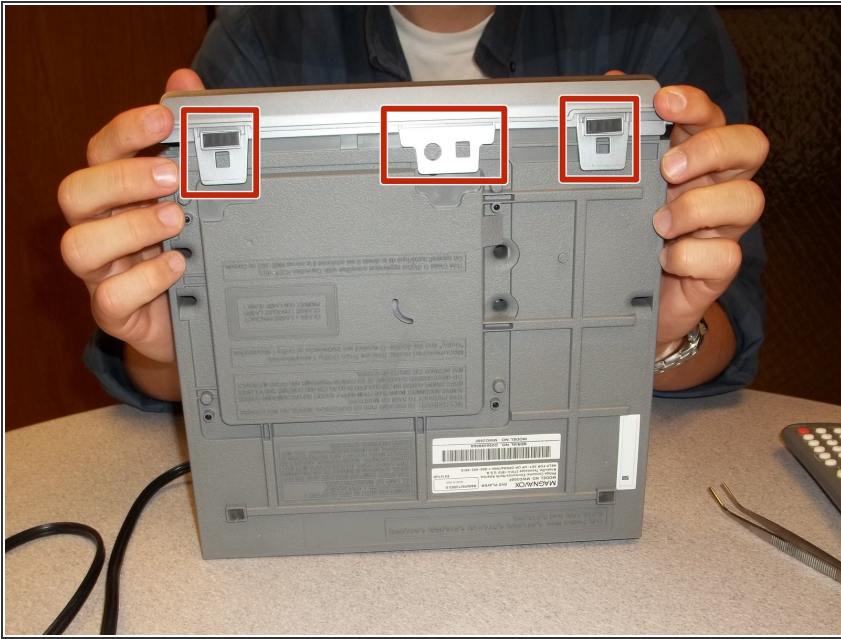



- Unclip the three latches on the bottom of the device.

### Step 4



 
 
- Pull the faceplate off.

## Step 5 — Disk Drive

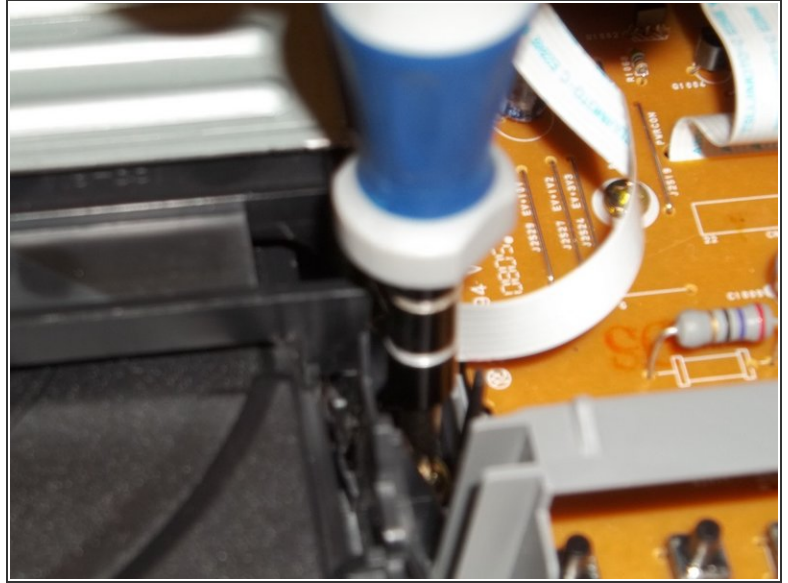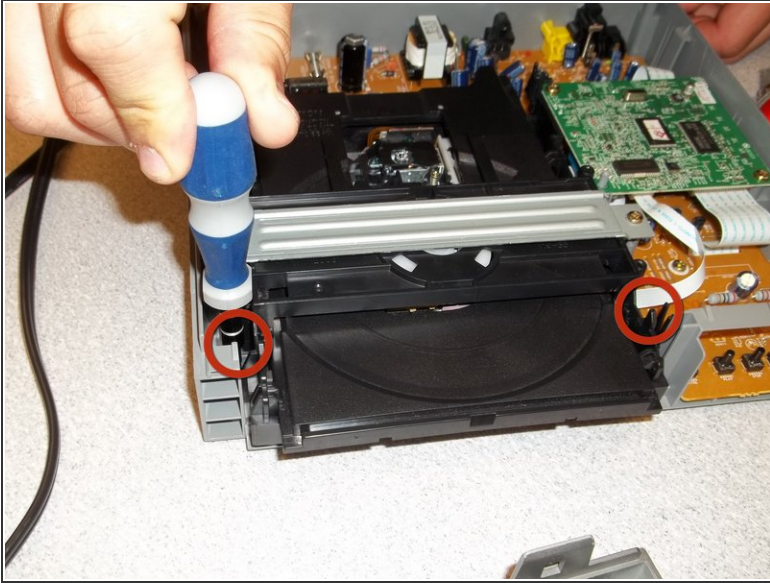

- Use a Phillips #2 screwdriver to remove the two screws at the base of the disk drive.



## Step 6

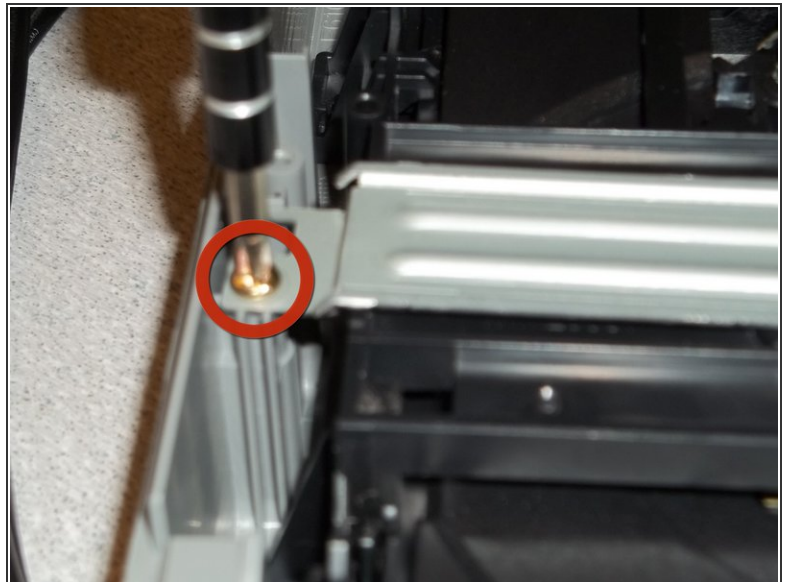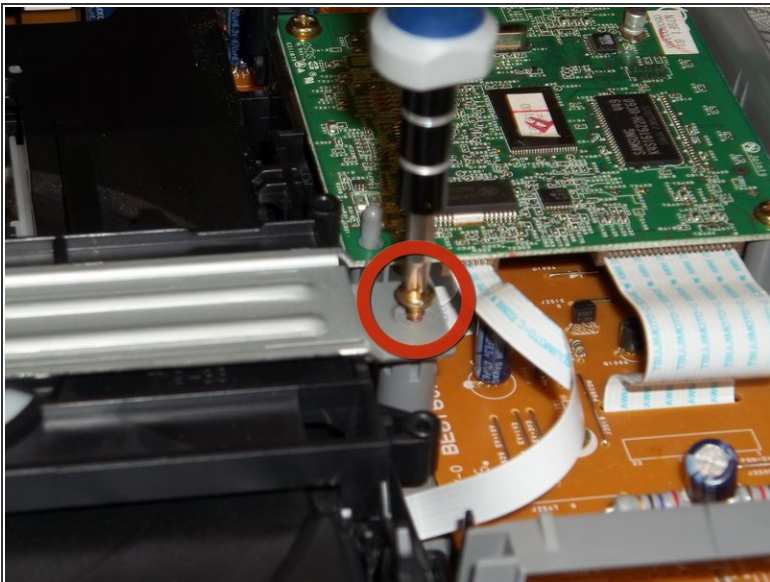  

- Use the screwdriver to remove two screws on either side of the silver security bar.




## Step 7

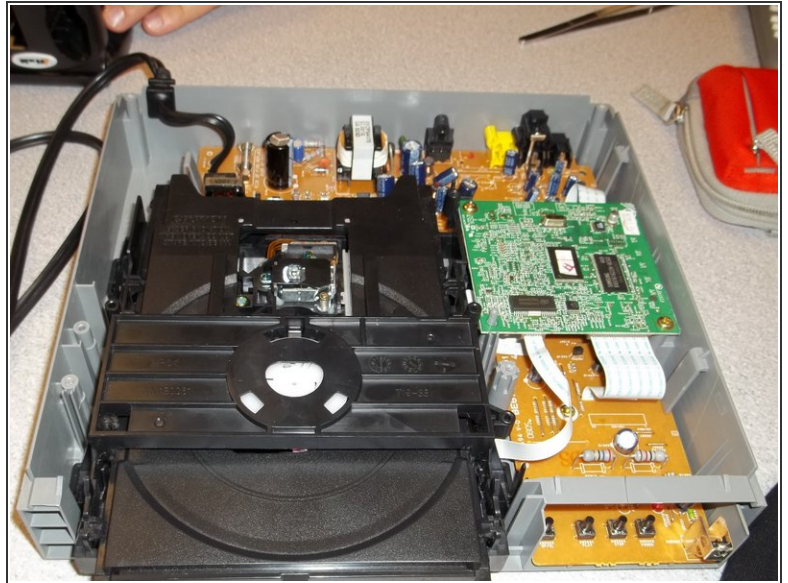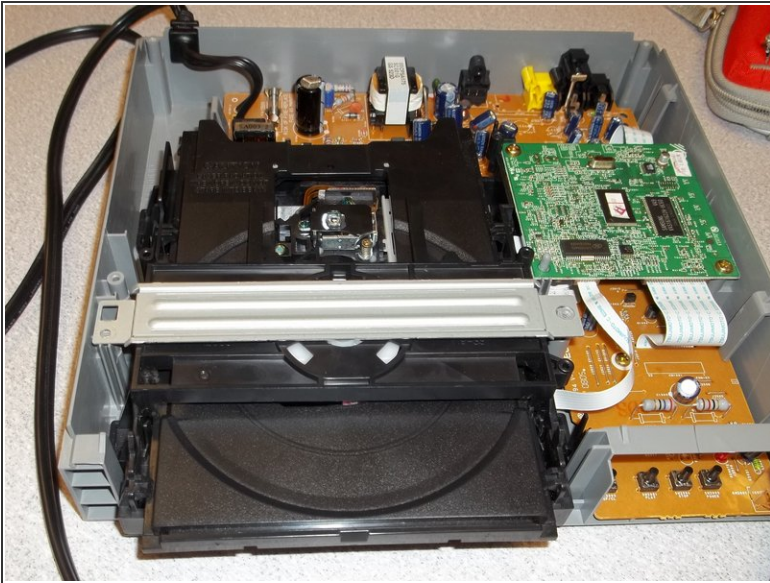  

- Pull out the silver security bar and set aside.

## Step 8

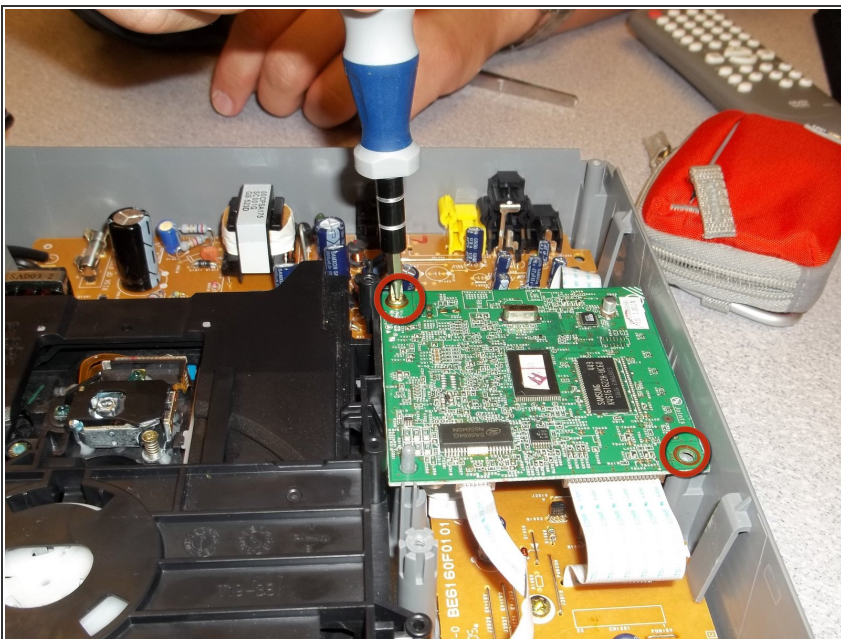 

- Take out the two screws on either side of the green circuit board.




## Step 9



- Carefully lift the board just enough to remove the disk drive.


## Step 10

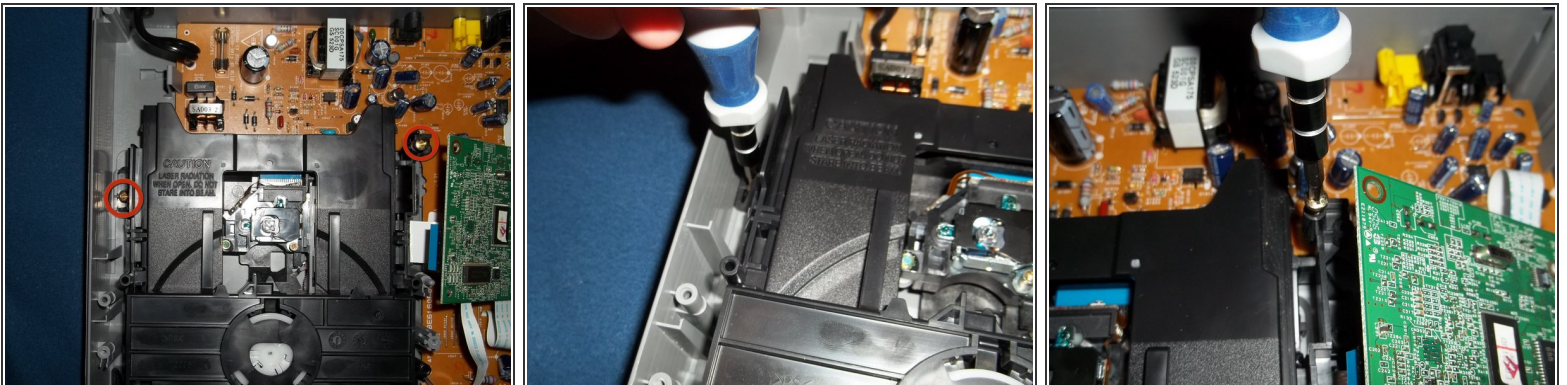

- Remove the two screws at the back of the disk drive.





## Step 11

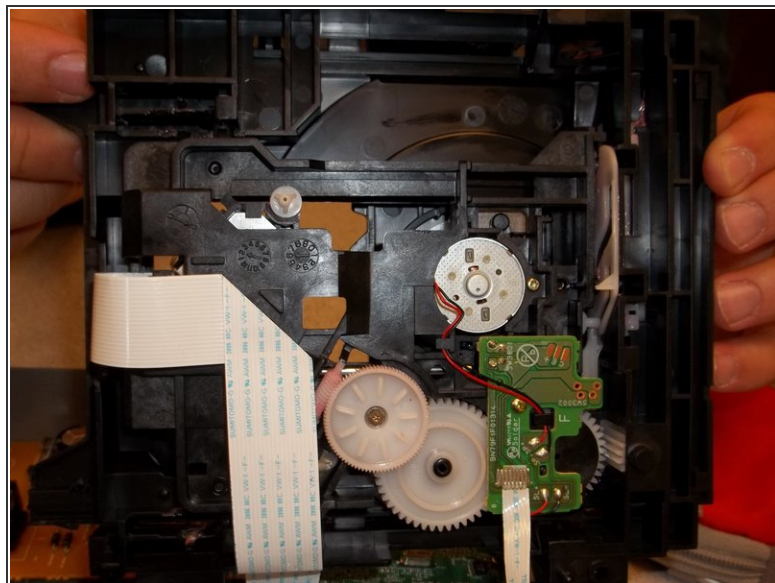 

- Gently lift the disk drive out of the DVD player.
- ⓘ The disk drive is still attached but you are now able to get to underneath it for cleaning and maintenance.



## Step 12 — How to clean Magnavox MWD200F gears

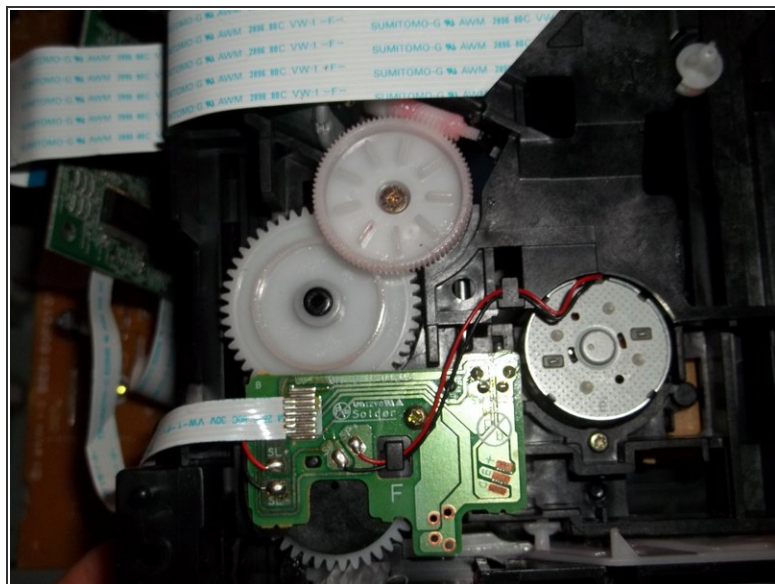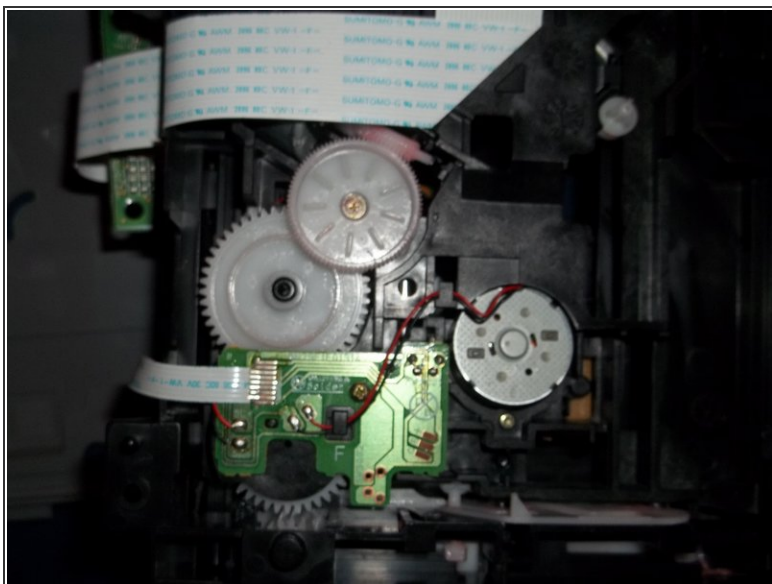  

- Turn disc drive over so you can see the gears on the bottom.



## Step 13

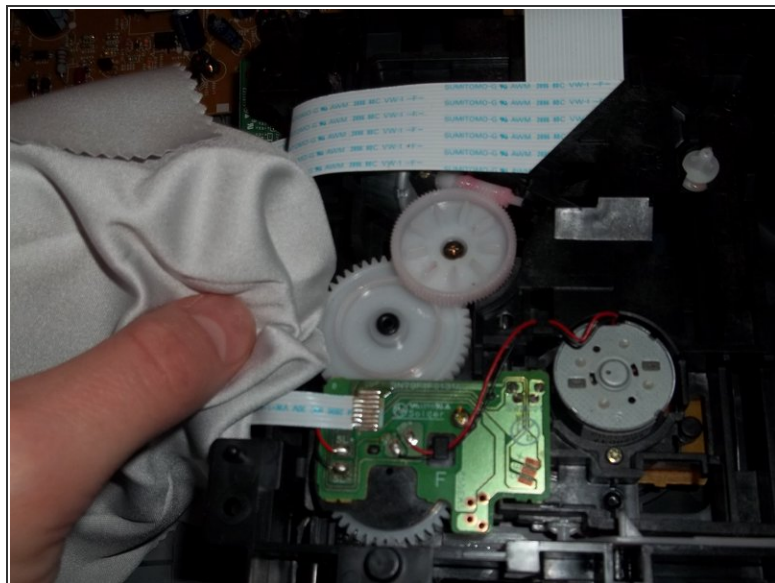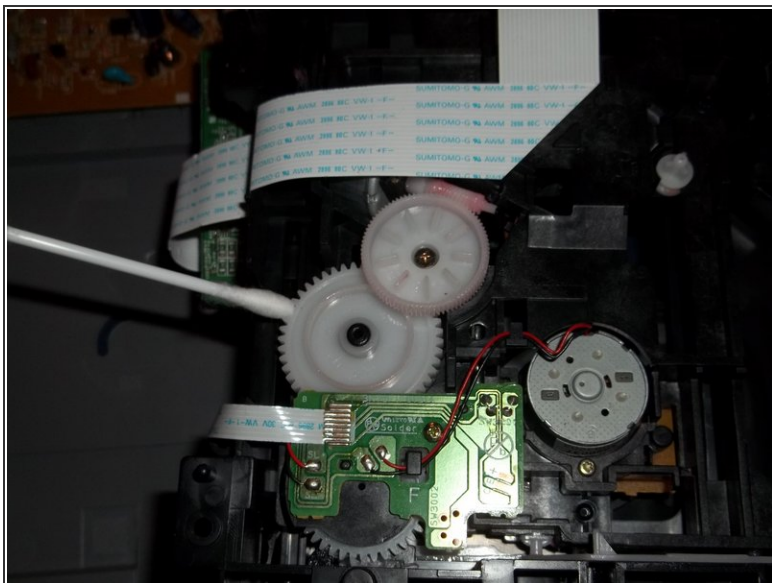  

- Using a cotton swap or a cleansing cloth and alcohol, gently rub the gears ridding of any debris and dust.
- You can also use a compressed air can as well. Just point the nozzle at the gears and spray with the compressed air.

To reassemble your device, follow these instructions in reverse order.