



TomTom Go 60 S Micro SD Card Replacement

In order to have more room for maps, a Micro SD Card can be used to add more storage to the TomTom Go 60 S. This guide will show how to remove the Micro SD Card and replace it.

Written By: Ambermarie Dawdy



INTRODUCTION

This guide will show how to remove the Micro SD Card and replace it with the TomTom Go 60 S in order to add more memory to the device.

Step 1 — Micro SD Card



- Locate the Micro SD slot on the bottom of the device.

Step 2



- Gently push in to the Micro SD slot with your finger in order to have the Micro SD card push out.

Step 3



- ★ Replace by inserting card in the micro SD slot until you feel it click in.

To reassemble your device, follow these instructions in reverse order.