

TomTom Go 60 S LCD Screen Replacement

This replacement guide will help users remove and replace a faulty LCD Screen.

Written By: Tomy Peralta



INTRODUCTION

The purpose of this guide is to provide simple steps on how to repair an LCD screen on the TomTom Go 60s. The screen may need replacement if it encounters water damage or a fractured screen.



TOOLS:

• iFixit Opening Tools (1)

Step 1 — LCD Screen




 Use the iFixit opening tool to pry open the TomTom Go 60 S. Start from a corner and drag the tool around the device.

Step 2



 Disconnect the screen from the motherboard by removing the flap connecting both with your hands.

Step 3

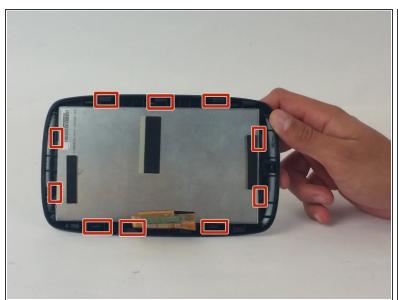



 Begin by removing the flaps pressing LCD screen against device. Then, detach screen from the adhesives by gently pushing on the screen and disconnect remaining yellow flap from screen.

To reassemble your device, follow these instructions in reverse order.