



Bonaire BAP 600 Exhaust Vent Replacement

This is a replacement guide that's replacing the exhaust vent in the Bonaire BAP 600 air purifier. The exhaust vent is a black, plastic piece that's on top of this air purifier.

Written By: Nicholas Allen Smith



INTRODUCTION

This is a replacement guide that will use previous replacement guides in order to achieve the end goal of replacing the exhaust vent.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Base/Intake




- Rotate base counterclockwise, supporting top with opposite hand.

Step 2



- Pull base away from housing exposing air filter.

Step 3 — Air Filter

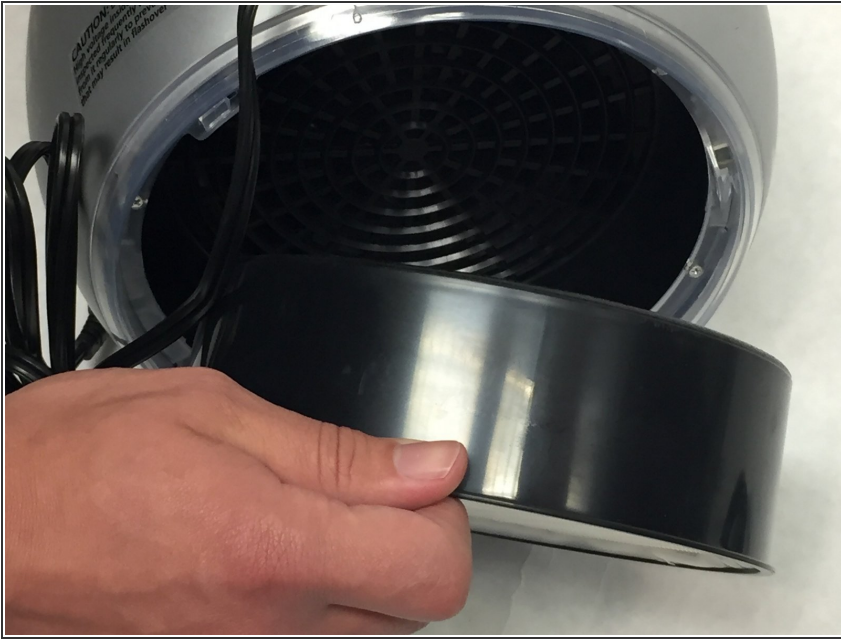

- Grab the edge of the filter housing and pull the filter away from the rest of the device.

Step 4



- Gently pull apart each fold of the filter to check for abrasions or other anomalies. Clean with a dust rag if necessary.

Step 5 — Outer Shell




- Remove all 6 screws from the LED housing.

Step 6



- After the 6 screws are removed, remove the LED housing from the bottom of the device by lifting it off.

Step 7

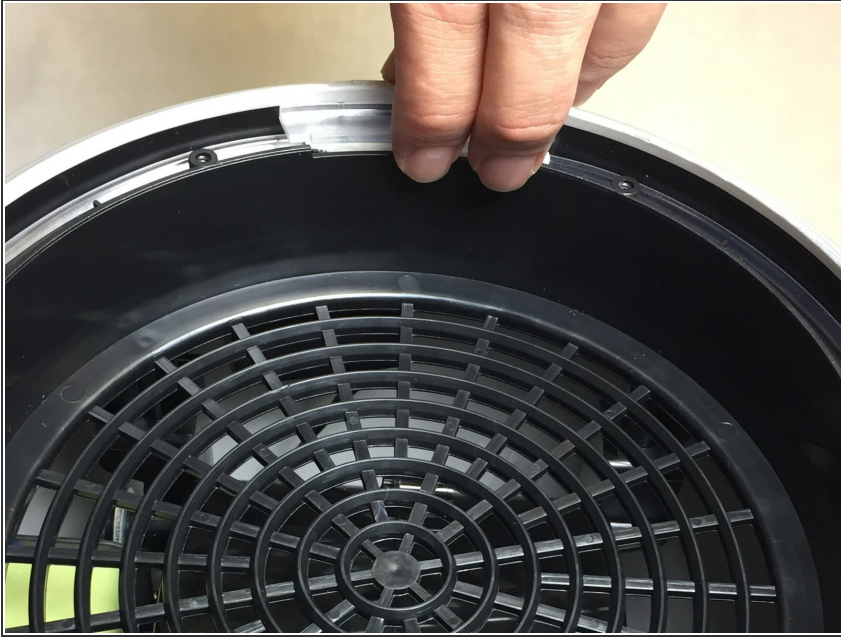

- Using two fingers lift the translucent LED cover from the inside. Repeat this step for the second tab.

Step 8



- After lifting 45 degrees, pull the translucent tab away from the housing. Repeat this step for the second LED cover.

Step 9



- Locate the tab about 1 inch below the top vent. Insert a flat tool laterally past the tab and press in toward the center of the device. As the tab is being held down, pull the two halves of the egg apart to keep the shell open.

Step 10



- Locate the second tab on the back of the device approximately 2 inches above the power cord.
- Insert the flat tool at a slight angle toward the left of the power cord. Depress the tab and pull the two halves of the shell apart.

Step 11




- Locate the bottom tab on the front side at the same height as the bottom tab on the back side.
- Depress the tab using a flat tool at a slight angle and pull the halves apart.

Step 12




- Locate the last tab about one inch below the top on the front side.
- Depress the tab using the flat tool at a slight angle and finish pulling the removable half of the shell off.

Step 13

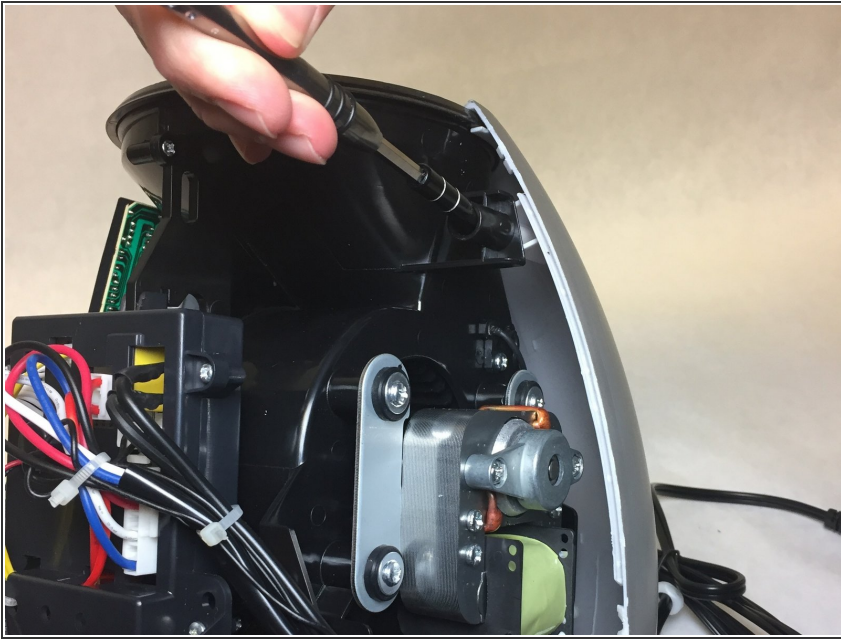


- Locate the screw housing opposite of the control board, and remove the screw.

Step 14

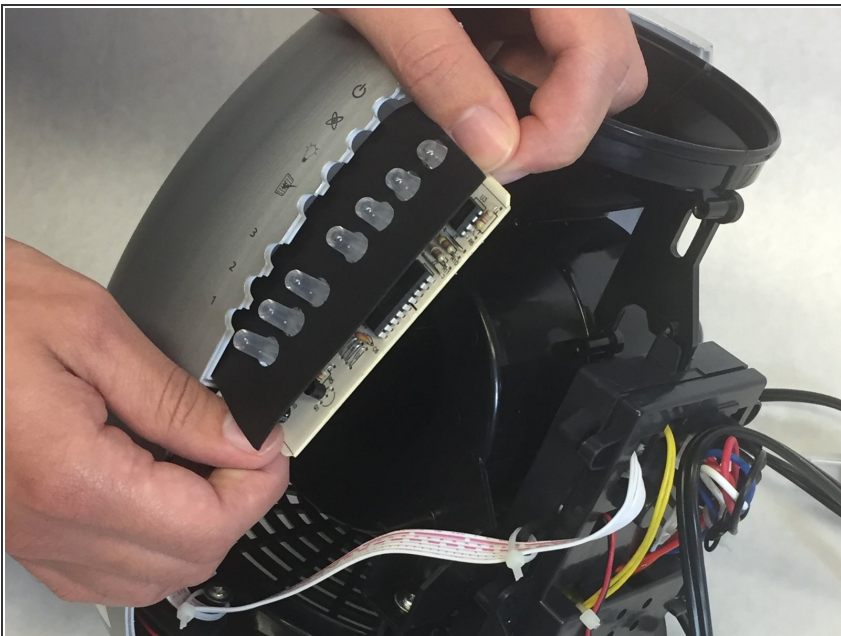

- Locate the control board and grab it by the top and bottom firmly. Pull the board straight out being careful not to flex the circuit while removing.

Step 15

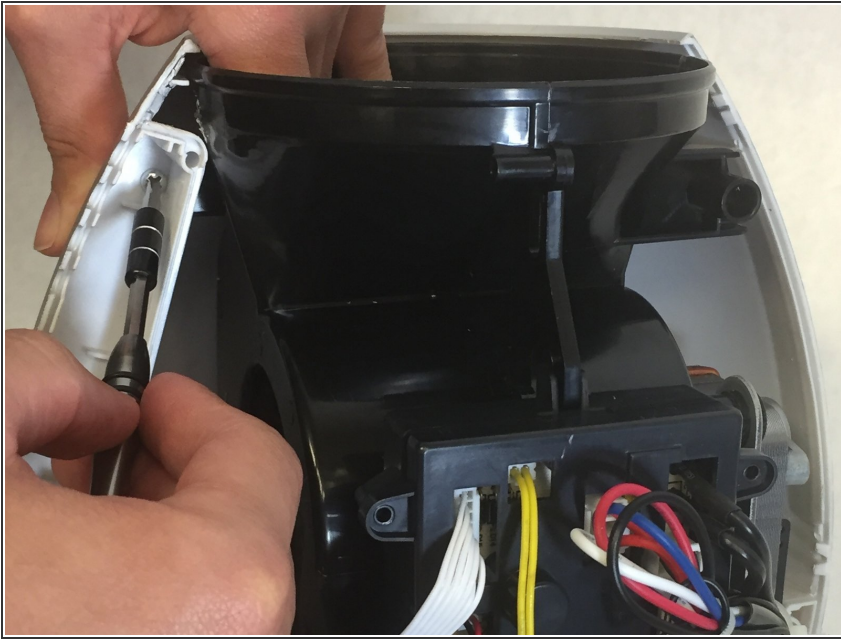

- Locate the screw that was being hidden by the control board and remove it to release the second half of the shell.

Step 16



- Remove the released half of the shell to finish removing the entire outer shell of the device.

Step 17 — Exhaust Vent



- Use a flathead tool to place it in between the the exhaust vent and the inner side of the outer shell.

Step 18



- Now, pull the exhaust vent towards you, and lift upwards to dislodge the exhaust vent in order to replace this exhaust vent as shown below.

To reassemble your device, follow these instructions in reverse order.