



Acer Aspire One 522 Battery Replacement

Use this guide to replace a faulty Acer Aspire...

Written By: Claudio Felix



INTRODUCTION

Use this guide to replace a faulty Acer Aspire One 522 Laptop Battery. You can also check your battery's health with [this article](#).

Warnings: While replacing the battery is a generally safe procedure, please remember to turn your netbook off and unplug it from any power source before proceeding. **Exercise extreme caution if your battery is swollen or shows any signs of damage.**

TOOLS:

Spudger (or a plastic opening tool) (1)

PARTS:

Phillips #00 Screwdriver (1)

Step 1 — Turn the netbook upside down



- With the screen closed, turn the netbook upside down on a table.

Step 2 — Unlock the battery



- Unlock the battery by sliding the indicated lock to the right. A red indication will show it is unlocked.

Step 3 — Release and remove the battery



- Slide and hold the lock to the left to release the battery.
- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.