


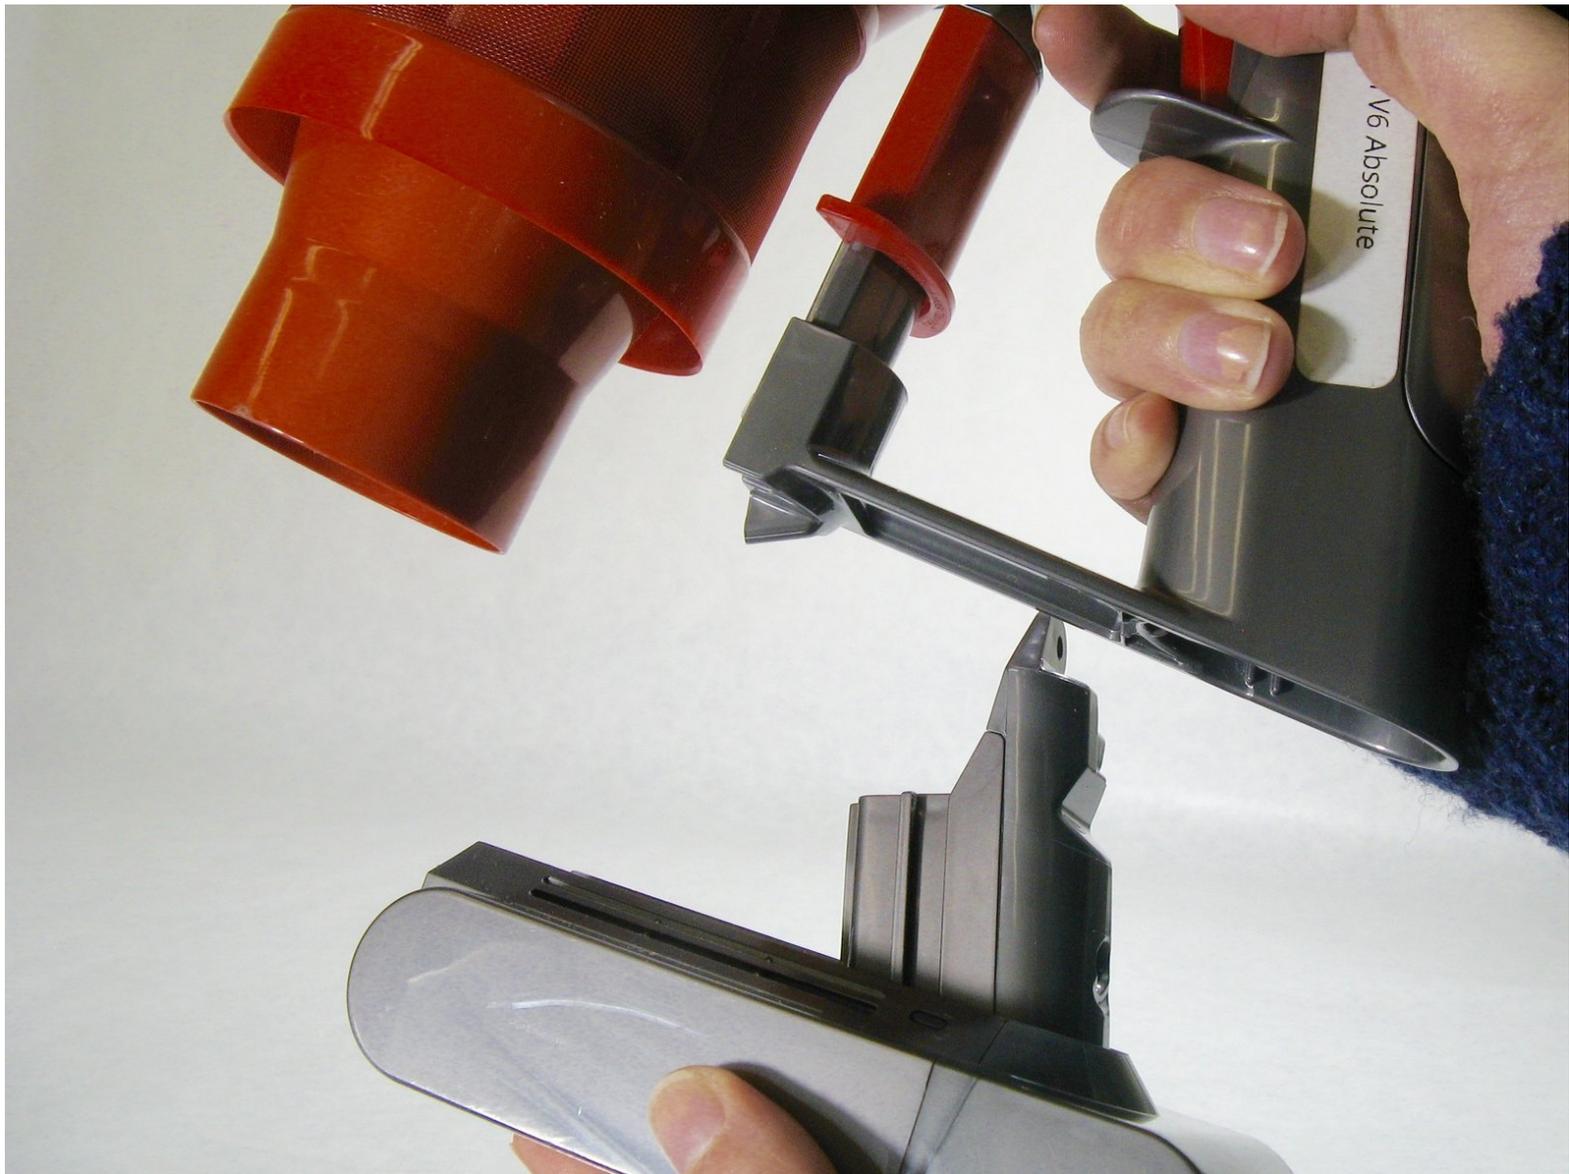

Dyson v6 Absolute Battery Pack Replacement

The battery pack of the Dyson v6 Absolute can be removed for replacement and charging.

Written By: Tabitha Espina Velasco



INTRODUCTION

The battery pack of the Dyson v6 Absolute provides 20 minutes of powerful, consistent suction on a 3.5-hour charge. It is easily removed and replaced.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)

PARTS:

- [Dyson V6 Vacuum Battery](#) (1)

Step 1 — Bin




- Unplug the device.

Step 2



- Push down the red lever located on the outside of the bin, next to the device handle, to open the door to the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 3

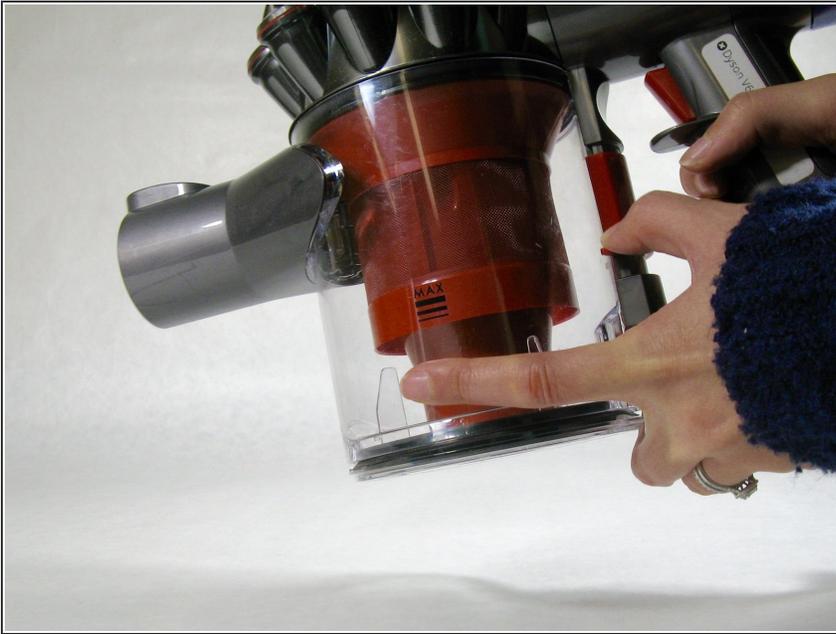

- Push the red lever down a second time to release the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 4



- Pull bin away from the cyclone.

Step 5 — Battery Pack



- Locate the screw on the battery pack.
- Use a Phillips #2 screwdriver to unscrew the battery pack.

Step 6



- Locate the screw on the device handle.
- Use a Phillips #2 screwdriver to remove the screw and release the battery pack.

Step 7



- Pull the battery pack down and away from the device.

To reassemble your device, follow these instructions in reverse order.