


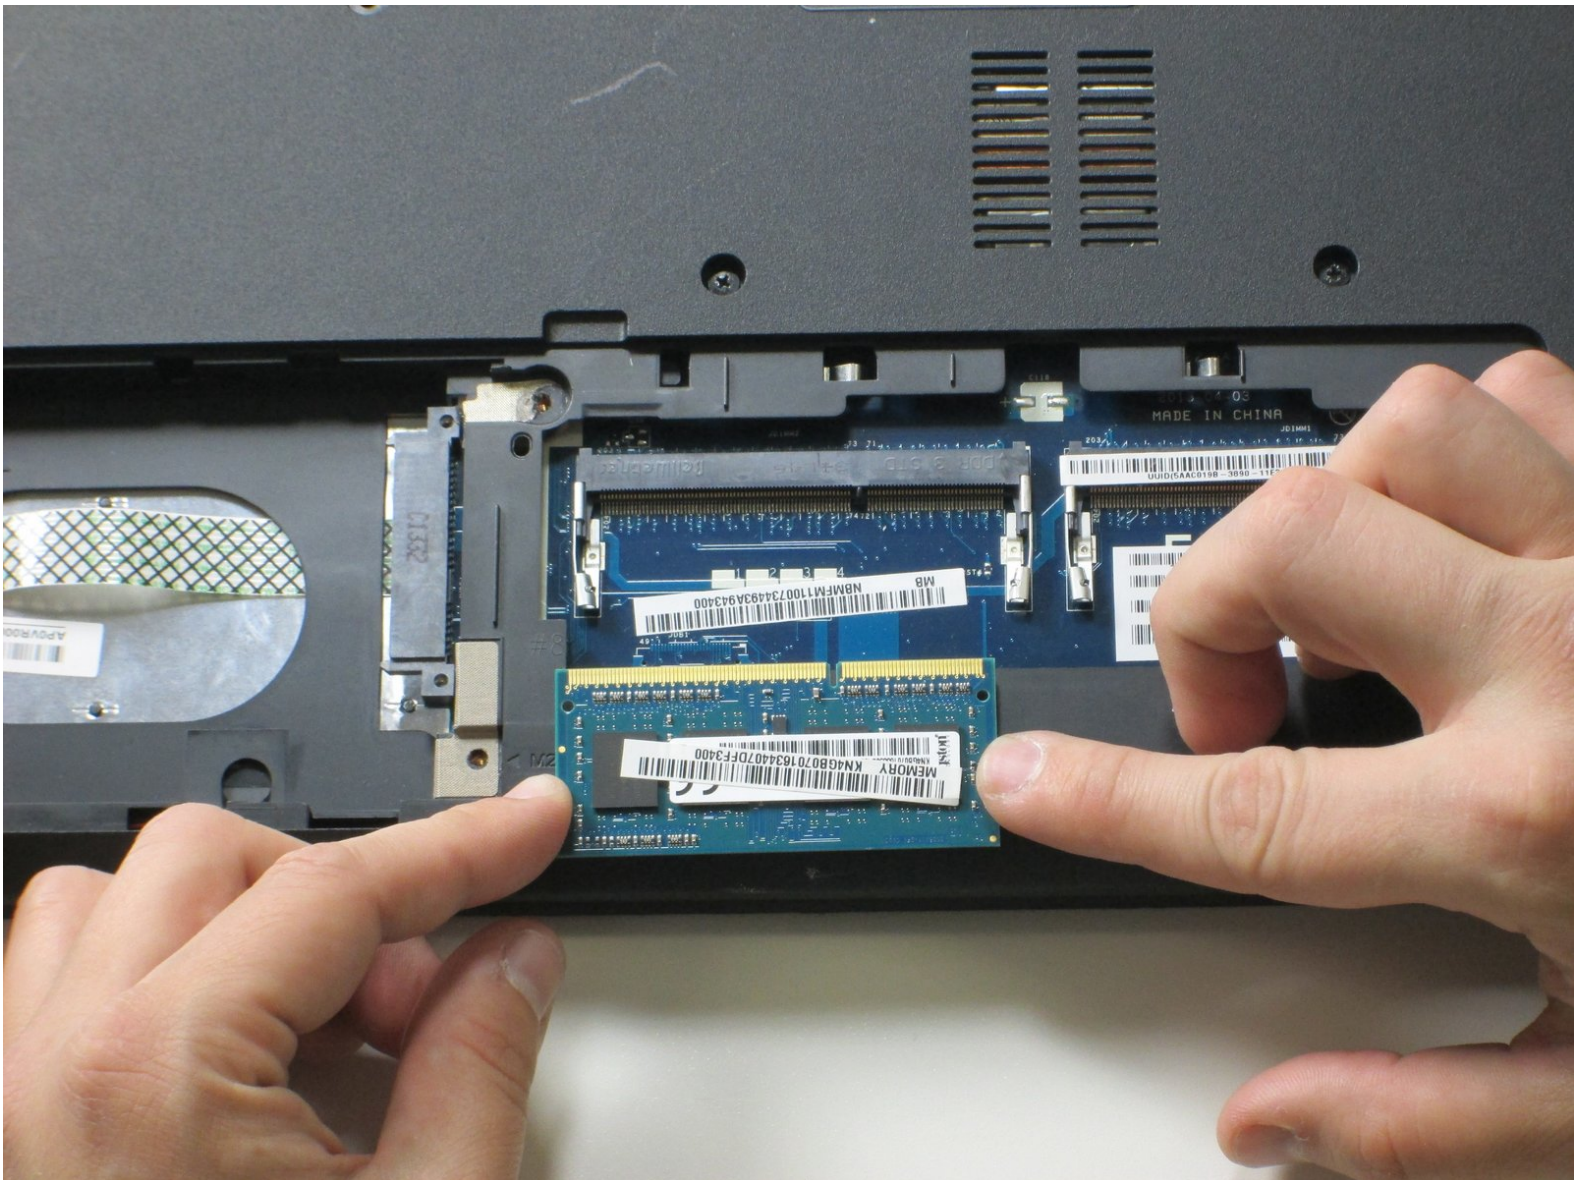

ACER Aspire E1-572-6870 RAM Replacement

Replacing the RAM in your ACER Aspire E1-572-6870.

Written By: Cody Lim



INTRODUCTION


Using this guide you will be able to replace or remove the RAM from your laptop.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

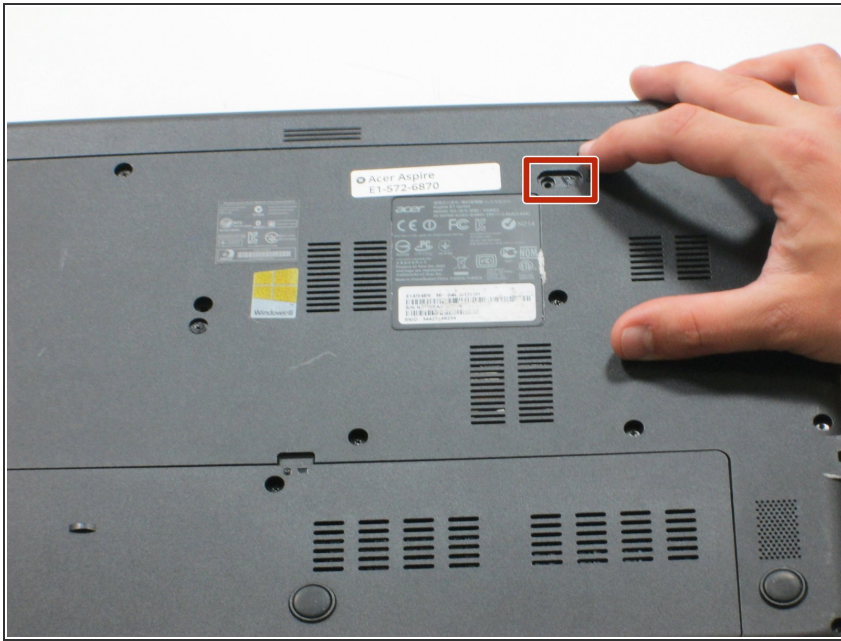

- ❗ Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Flip your laptop over so the back panel is facing upwards.
- Locate the lock switch below the battery.

Step 2





- Slide the lock switch to the right using your finger or a spudger.
 - At the same time, grasp the battery with your other hand and slide it out of the laptop.
 - Remove the battery.
- 🔧 To reinsert or replace the battery, simply line up the tabs on the battery with the laptop and slide it straight back in. There is no need to move the lock switch.

Step 3 — RAM




- Unscrew the one 2.5 x 8mm Phillips #0 screw from the bottom panel as designated in the image.

Step 4

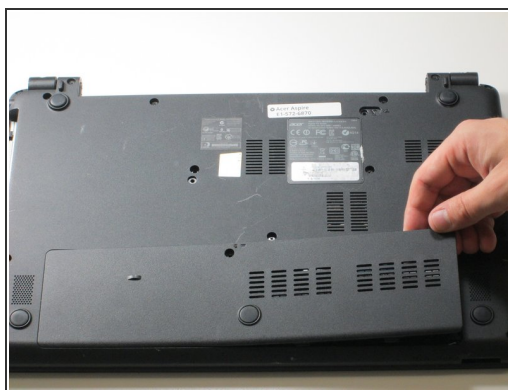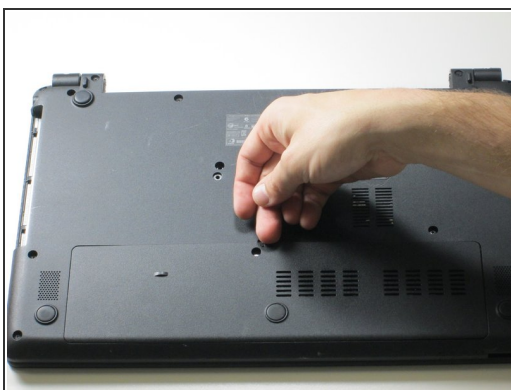

- Remove the back panel by carefully disengaging it around the edges and then pull upwards.

Step 5

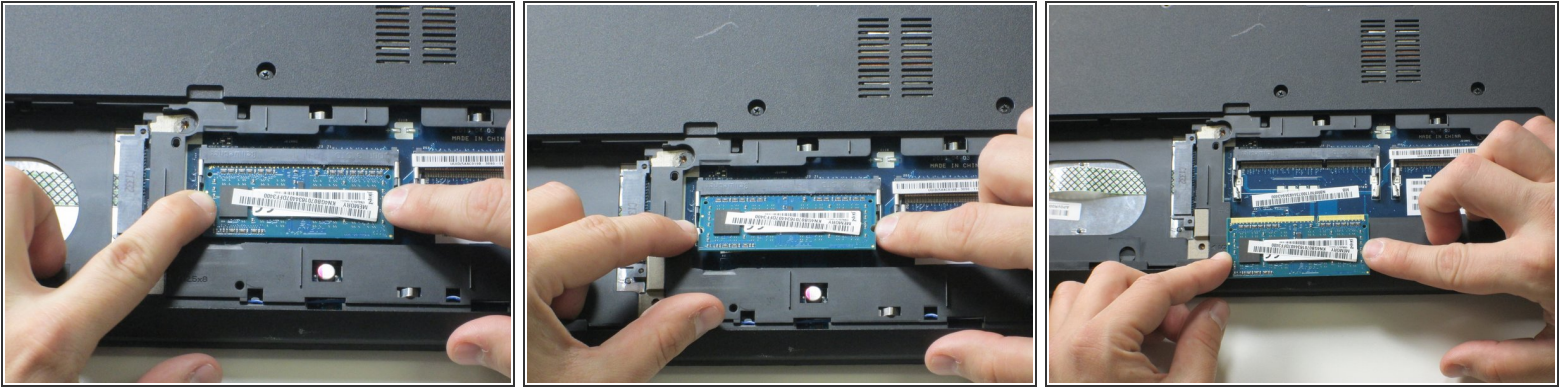

- Disengage the metal tabs located on either side of the RAM stick by pulling the tabs outward.
- Carefully remove the RAM so you don't damage the connectors.

To reassemble your device, follow these instructions in reverse order.