

Samsung Galaxy S7 Edge Rear Camera Lens Replacement

Fix cracked glass over the rear-facing camera in a Samsung Galaxy S7 Edge by replacing the camera lens.

Written By: Evan Noronha

This document was generated on 2020-11-25 09:43:35 AM (MST).

SAMSUNG

INTRODUCTION

If your main camera glass is broken, you can either remove and replace the lens glass, or replace the whole lens assembly.

Removing the lens while the phone is still assembled may cause small pieces of glass to fall into the camera, but is a faster fix that requires less disassembly.

The lens assembly replacement is longer, and requires removing the back panel, but it is less likely to damage the camera itself. This procedure includes replacing the glass lens and the camera bezel, and will require replacement rear glass adhesive.

F TOOLS:	PARTS:
 Tweezers (1) iOpener (1) Or a hair dryer or heat gun iFixit Opening Picks set of 6 (1) Suction Handle (1) 	 Galaxy S7 S7 Edge Rear Camera Bezel Lens Cover (1) Includes both the lens and camera bezel Galaxy S7 Edge Rear Cover Adhesive (1) Optional - Only required if replacing bezel and lens.

This document was generated on 2020-11-25 09:43:35 AM (MST).

Step 1 — Glass-Only Replacement



- Follow this procedure if you are replacing only the glass lens over the rear-facing camera.
- If you are replacing the entire bezel, skip this step and follow the instructions in the next step.

Step 2 — Bezel and Camera Lens Replacement



- Follow this longer procedure to replace the bezel and camera lens, which are installed on the rear case.
- If you follow this procedure, you will need new adhesive to reinstall the rear case. <u>Follow this guide</u> to reinstall the camera bezel adhesive as well as the rear cover adhesive.

This document was generated on 2020-11-25 09:43:35 AM (MST).