



# Replacing Nokia Classic 2600c-2b Faceplate

Replacing the faceplate of the Nokia Classic phone


Written By: Ian VanZandt



## **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Faceplate

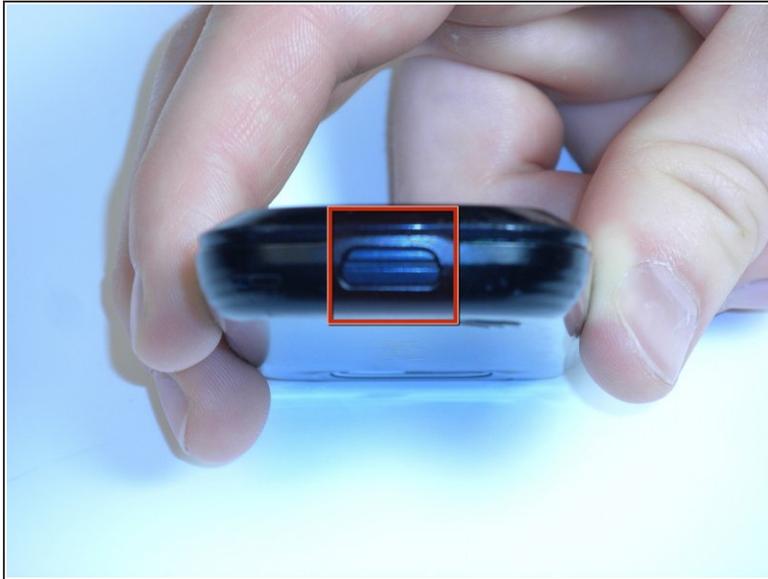

- Press down on the button located at the bottom of the phone, using the center ridge as a guide.
- Pull the phone apart from the bottom, keeping the button pressed down.

**⚠ CAUTION!** The plastic opening tool may be used to gain leverage. Some force is required to open.

## Step 2




- Remove the back cover to expose the battery.

### Step 3



- Place a finger or plastic opening tool in the gap between the battery and the phone.
- Gently lift the battery out.

## Step 4

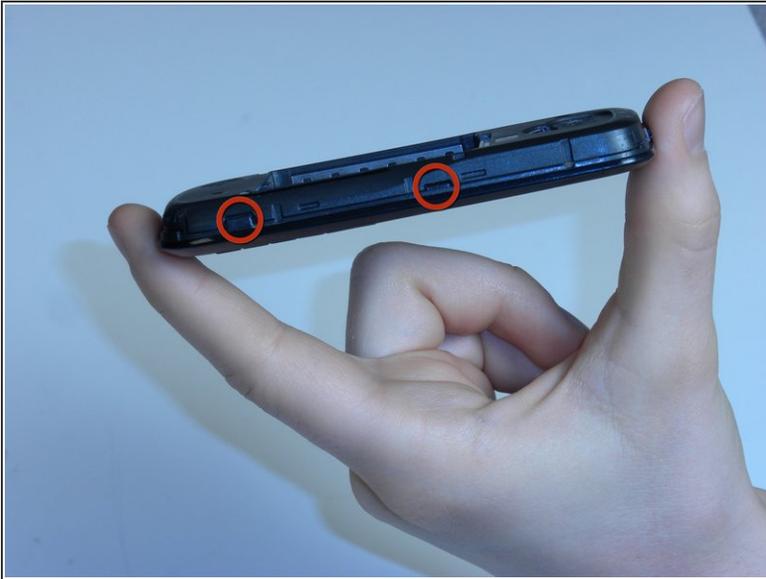

- Locate the plastic latches on the left and right sides of the phone.
- Insert the plastic opening tool or a fingernail into each latch and pry them open individually.

 **CAUTION!** Some force is required.

## Step 5



- Remove the faceplate with the number pad attached.

## Step 6



- Turn the faceplate so the number pad faces downward.
- Lift the number pad out of the faceplate.
- Apply new faceplate.
- Follow the instructions in reverse order to reassemble the phone.

To reassemble your device, follow these instructions in reverse order.