



Nokia X Speaker Replacement

This guide will guide you through the steps to replace a speaker on the Nokia X

Written By: Jose Maya



INTRODUCTION

To replace the Nokia X speaker; follow the steps below.



TOOLS:

- [Spudger](#) (1)



PARTS:


- [nokia x speaker](#) (1)

Step 1 — Nokia X Disassembly Prerequisites



- Remove the back cover of the device by applying light pressure toward the outer rim and display.

Step 2

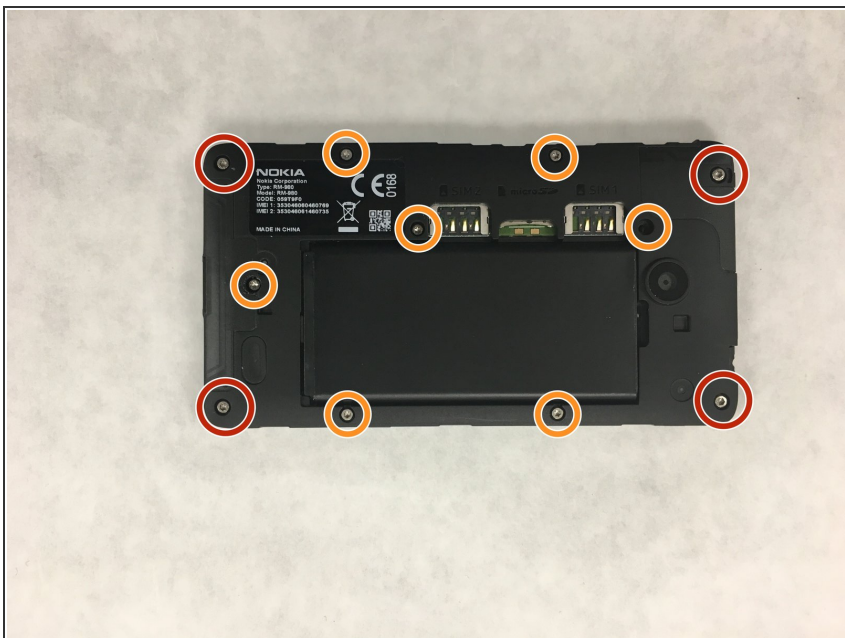

- Remove 7 (size 4 M1 4*3.5) and 4(size 6 M2 6*4.5) screws using P5 hex screwdriver.
- The M2 screws are shown in red.
- The M1 screws are shown in orange.


Step 3



- Gently separate the display from the chassis.
- Slowly spread the display and chassis until the inside of the device is reachable.

⚠ Do not pull apart.

Step 4

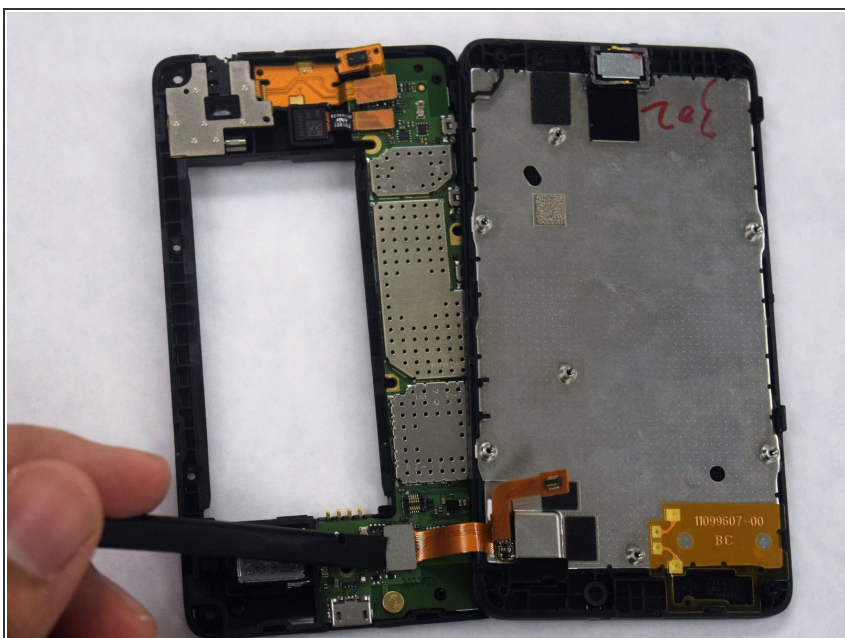


- Using the [spudger](#) tool, release the top flex ribbon from the light swap package.

Step 5 — Speaker



- Use a nylon spudger to pry off the speaker and speaker gasket.

Step 6

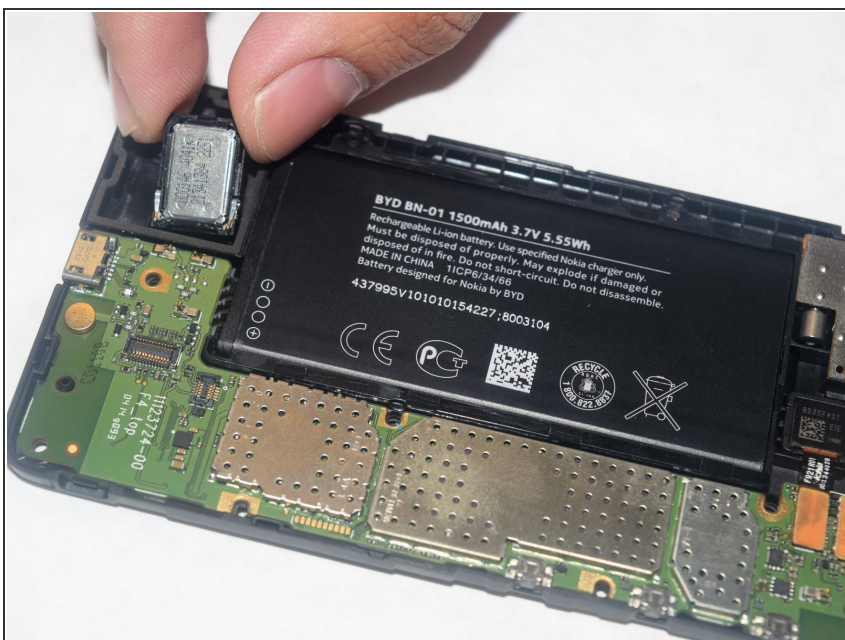

- Put a new speaker back into the speaker gasket.

To reassemble your device, follow these instructions in reverse order.