



Unbranded UB-15MS10 Screen Replacement

This guide will show the steps required to replace the damaged or broken screen of an Unbranded-15MS10 tablet.

Written By: Evan Peterson





TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Ub-15ms10 Tablet Touch Screen Digitizer Lcd](#) (1)

Step 1 — Screen



- Use an opening tool to pry off the lid of the memory card compartment.

Step 2

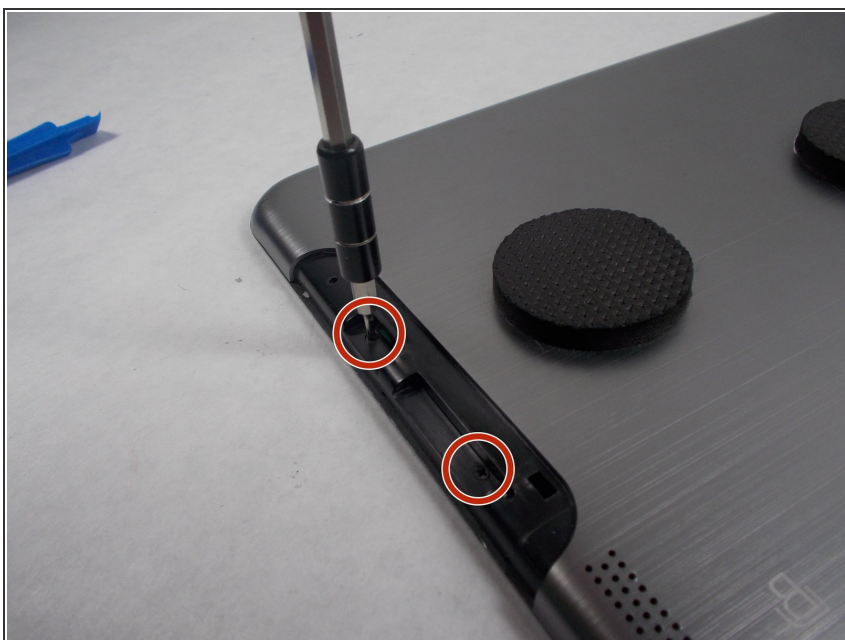

- Use a Phillips #00 Screwdriver to unscrew the two 1.2mm screws within the compartment. This allows the device to be opened.

Step 3




- Insert opening tools to partially pry open the cover.

Step 4




- With the cover being partially held open, slide a spudger around the seam to pry off the cover.

Step 5

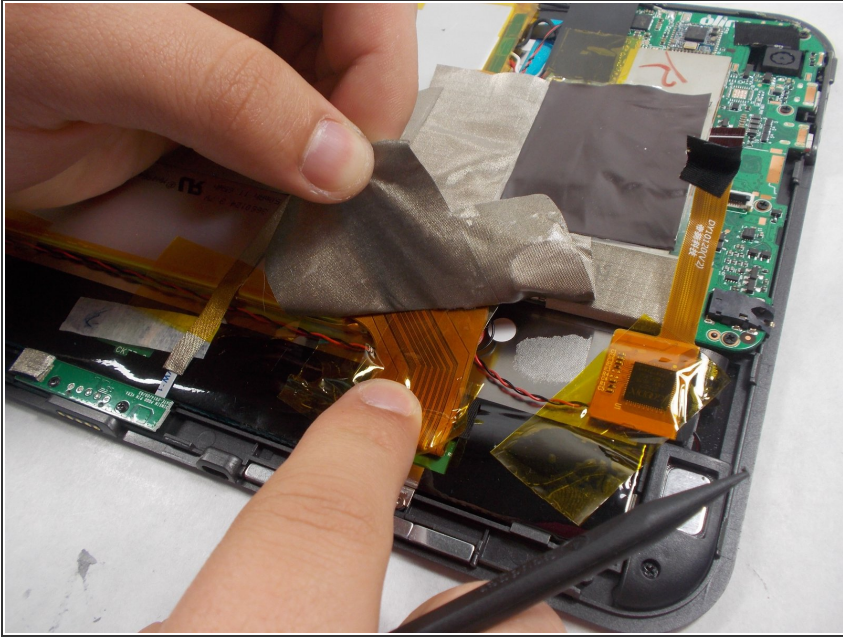


- Remove the tape that is holding the battery in place.

Step 6

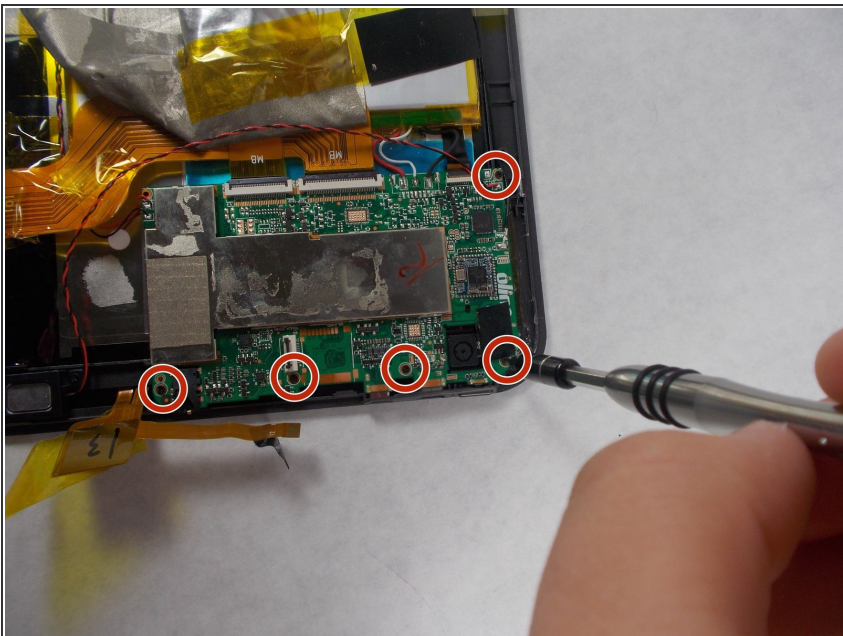


- Unscrew the five 1.2mm screws that connect the circuit board to the device.

Step 7

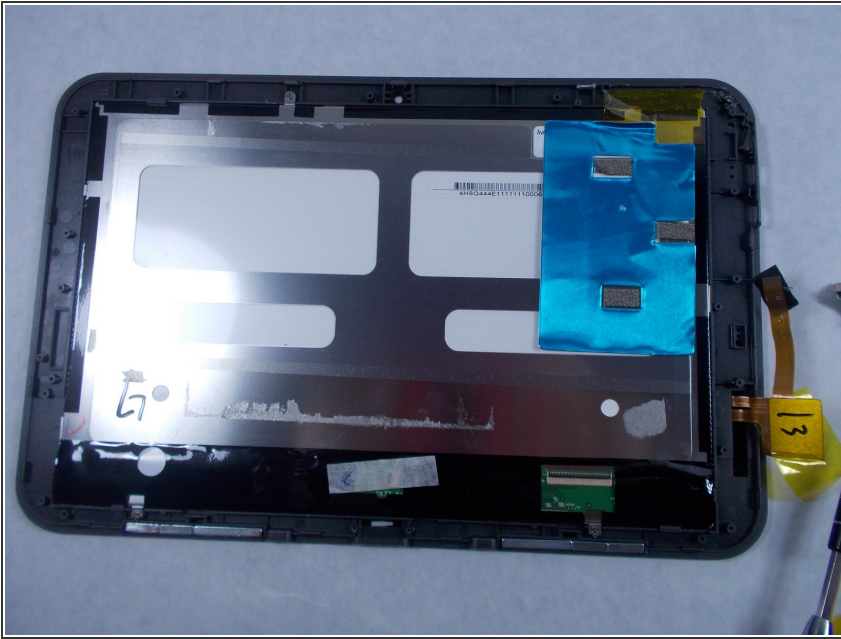

- There are three silver tabs around the internal components that connect it to the frame with screws. Unscrew these screws to remove the internal components.

Step 8

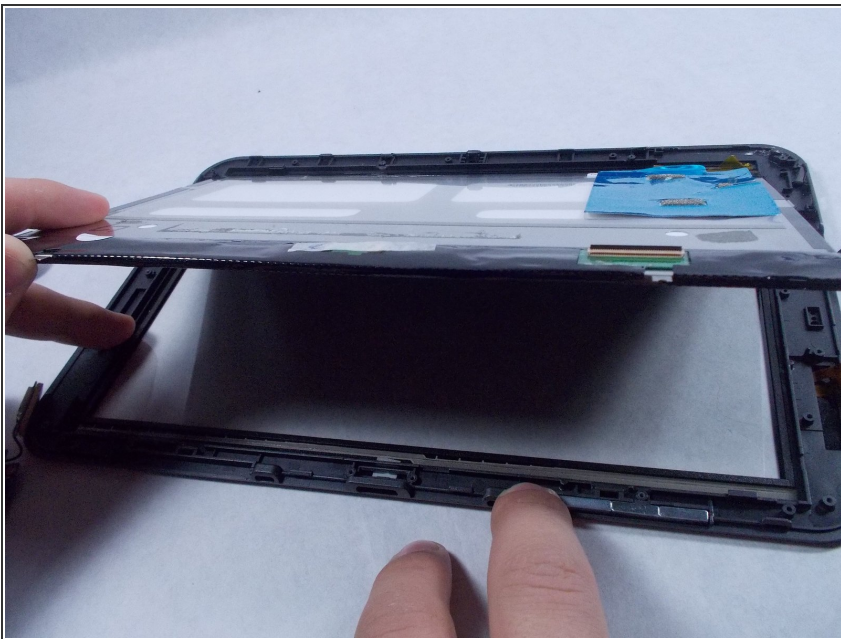

- Carefully lift the internal components from the screen and place them into a replacement screen.

To reassemble your device, follow instructions 1-7 in reverse order.