



# Asus U50F-RBBAG05 Keyboard Replacement

This guide will teach you how to remove and...

Written By: Kelly Greeling



## INTRODUCTION

This guide will teach you how to remove and replace the keyboard on your Asus U50F-RBBAG05 Series laptop. When done correctly, the keyboard should easily lift out as one solid piece.

This replacement can help if some keys are sticking or not working at all, as well as let you see if there is any debris under the keyboard that may need to be cleared out. This also helps if you need to replace any keys, as it would be best to do so when the keyboard is not attached to the laptop.


BE CAREFUL as the keyboard is delicate and must be lifted out carefully to avoid any damage.

### TOOLS:

[Jimmy](#) (1)

[iSesamo Opening Tool](#) (1)

## Step 1 — Battery

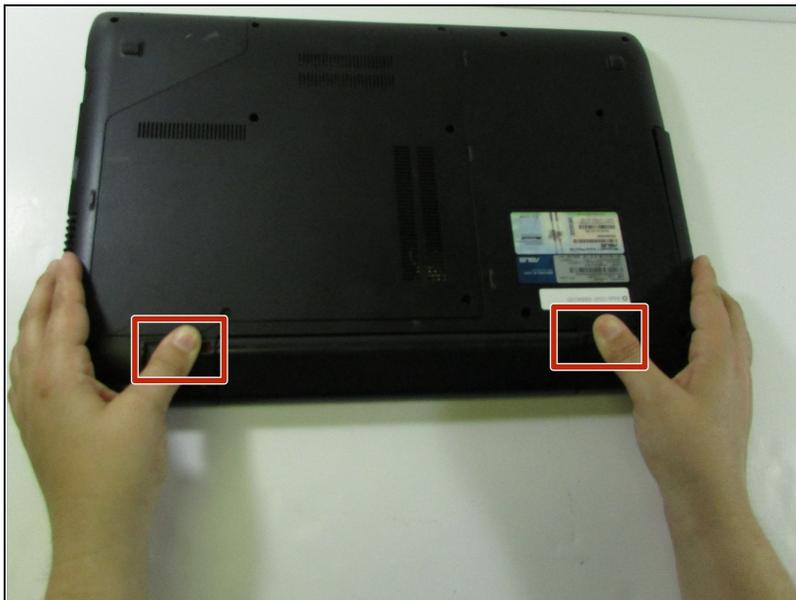

- Turn the laptop over so the bottom is facing up.
  - Slide the two tabs on the bottom of the laptop toward the edges of laptop.
  - Slide the left tab to the left to lock it into the unlocked position. The red showing next to the tab signifies that it's unlocked.
-  You will have to hold the right tab to the right to keep the slot unlocked while removing the battery.

## Step 2



- Hold down the tab on the right side, then begin sliding the battery out.
  - Remove the old battery.
- ☑ Next, insert the new battery into the empty slot. Release the right tab to begin locking the new battery into place. Slide the left tab to the right to completely lock the battery into the slot. The red that was showing near the left tab should be gone. This signifies that the battery is locked into place.

### Step 3 — Keyboard



- Insert one of the pry tools under a top corner and the other tool under the side of the same corner. Make sure to get under the metal of the keyboard, not just the first layer of plastic. Then pry the corner down and out from under the little overhang its sitting under.
- Next, slide the pry tool on the top over to the next overhang and insert the second tool on the other side. Push down and pry out the keyboard.
- Repeat the same process all the way down to the opposite corner.

### Step 4



- Once the keyboard is free, lift it up slightly and release the cable connection underneath.

## Step 5



- Last, remove the keyboard completely from the computer.

---

To reassemble your device, follow these instructions in reverse order.