


Palm Treo 700P LCD Replacement

Written By: Lucas

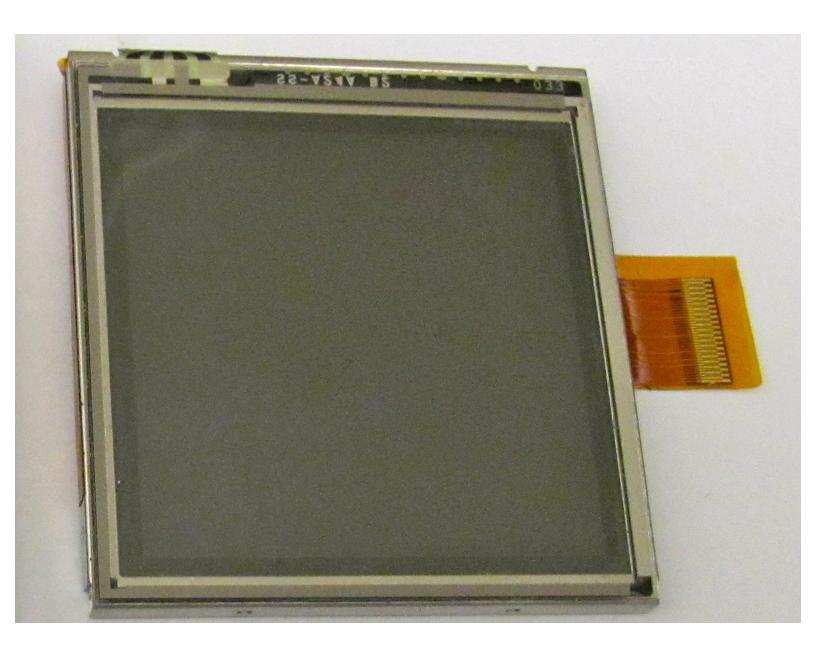



- iFixit Opening Tools (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)
- T5 Torx Screwdriver (1)

Step 1 — Battery







Press the button located just above the Sprint™ logo and then slide the cover down.

Step 2





• Use the small notch on the left hand side of the phone to remove the battery.

Step 3 — Back Case



Remove the stylus from the phone.

Step 4



 After removing the battery and stylus, unscrew the 5 Torx screws (using a T-5 Torx screw driver)



 Using the spudger, remove the small rubberized patch under the antenna.

Step 6



 Unscrew the last two screws using the previous screw driver.






Using the plastic opening tool, gently separate the back case from the phone body.

Step 8 — Motherboard



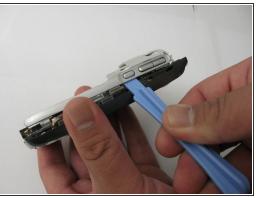



• Using a plastic opening tool, gently edge your way between the back and border case (Picture 2) until they are completely separated (Picture 3).










- Remove the antenna chip by unscrewing the two screws with Torx T-5 screwdriver (Picture 1).
- Once unscrewed, gently detach the antenna chip with your hands (Picture 2).

Step 10

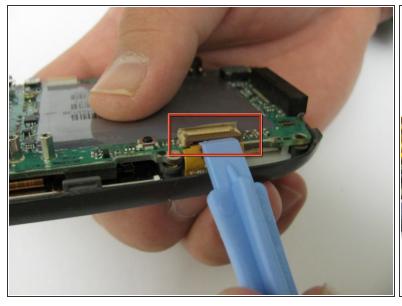

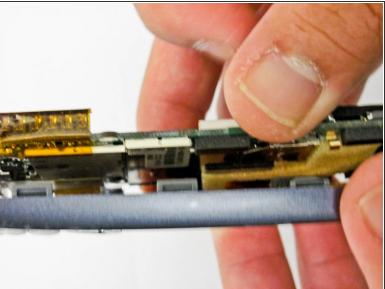

- Use the plastic opening tool to unlock the tab holding the keyboard connection (Picture 1).
- Once the keyboard connection is detached, use your hands to gently separate the motherboard from the back panel (Picture 2).

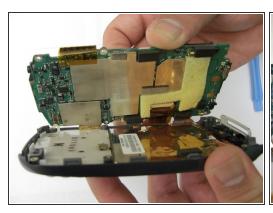






- To completely detach the motherboard from the back panel, use the plastic opening tool to unlock the LCD connection from the motherboard (Picture 2).
- Once the LCD connection is unlocked, the motherboard should now be completely detached from the back panel, keyboard, and LCD (Picture 3).

Step 12 — LCD

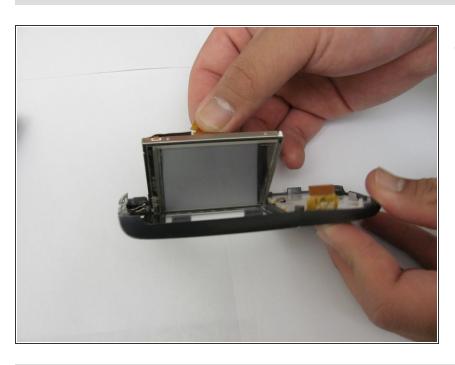

 Once the motherboard is removed, the LCD should be resting on the front case of the phone.

To reassemble your device, follow these instructions in reverse order.