


Sony Ericsson W518a SIM Card Replacement


Remove the SIM card from the Sony Ericsson w518a cell phone.

Written By: Branden



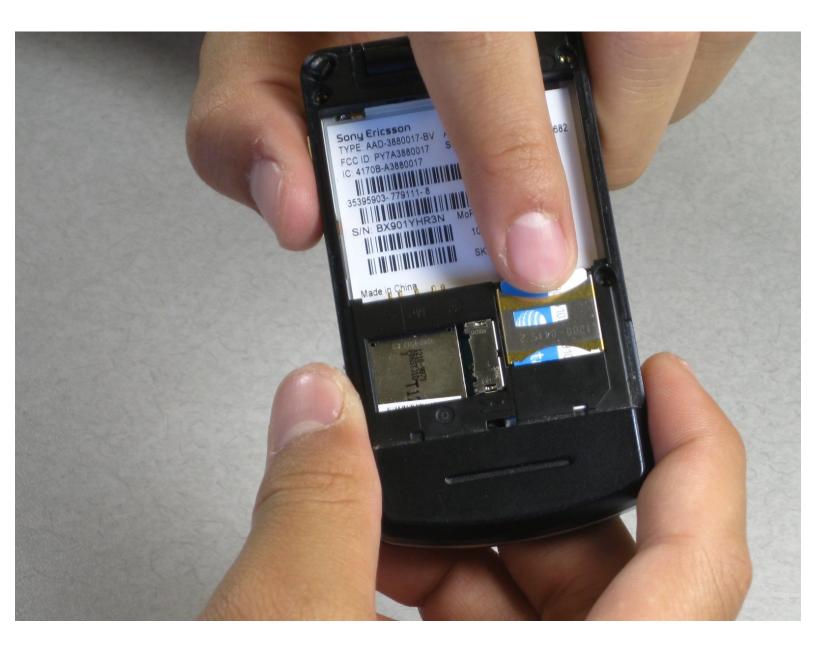

Step 1 — Battery

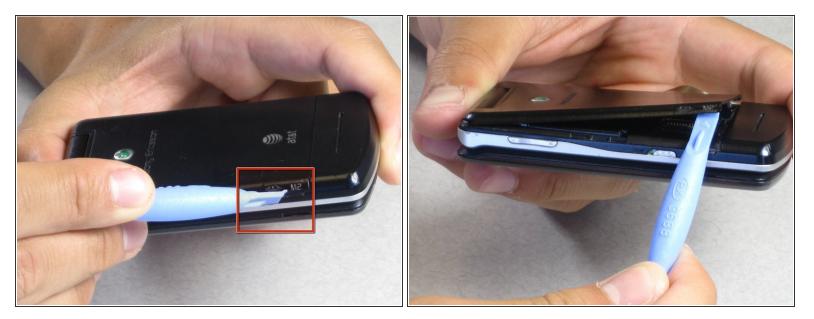


• Insert the plastic opening tool in the notch to remove the cover.

Step 2



• Use your fingers to pull up and remove the battery.

Step 3 — SIM Card

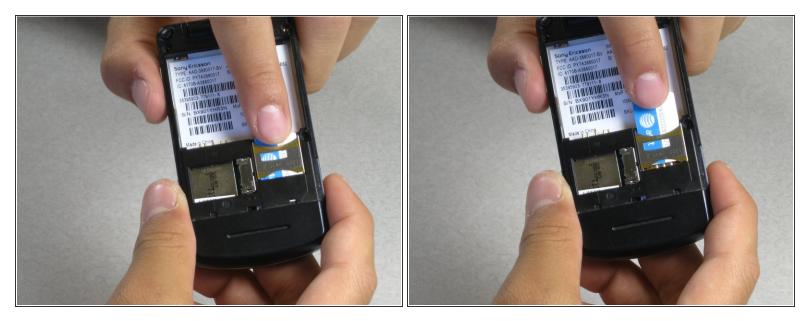

• Using you finger to pull out the SIM card.

To reassemble your device, follow these instructions in reverse order.