




# Acer Chromebook C720-2848 Screen Replacement

A repair and replacement guide for a defective LCD screen.

Written By: Cory Provost

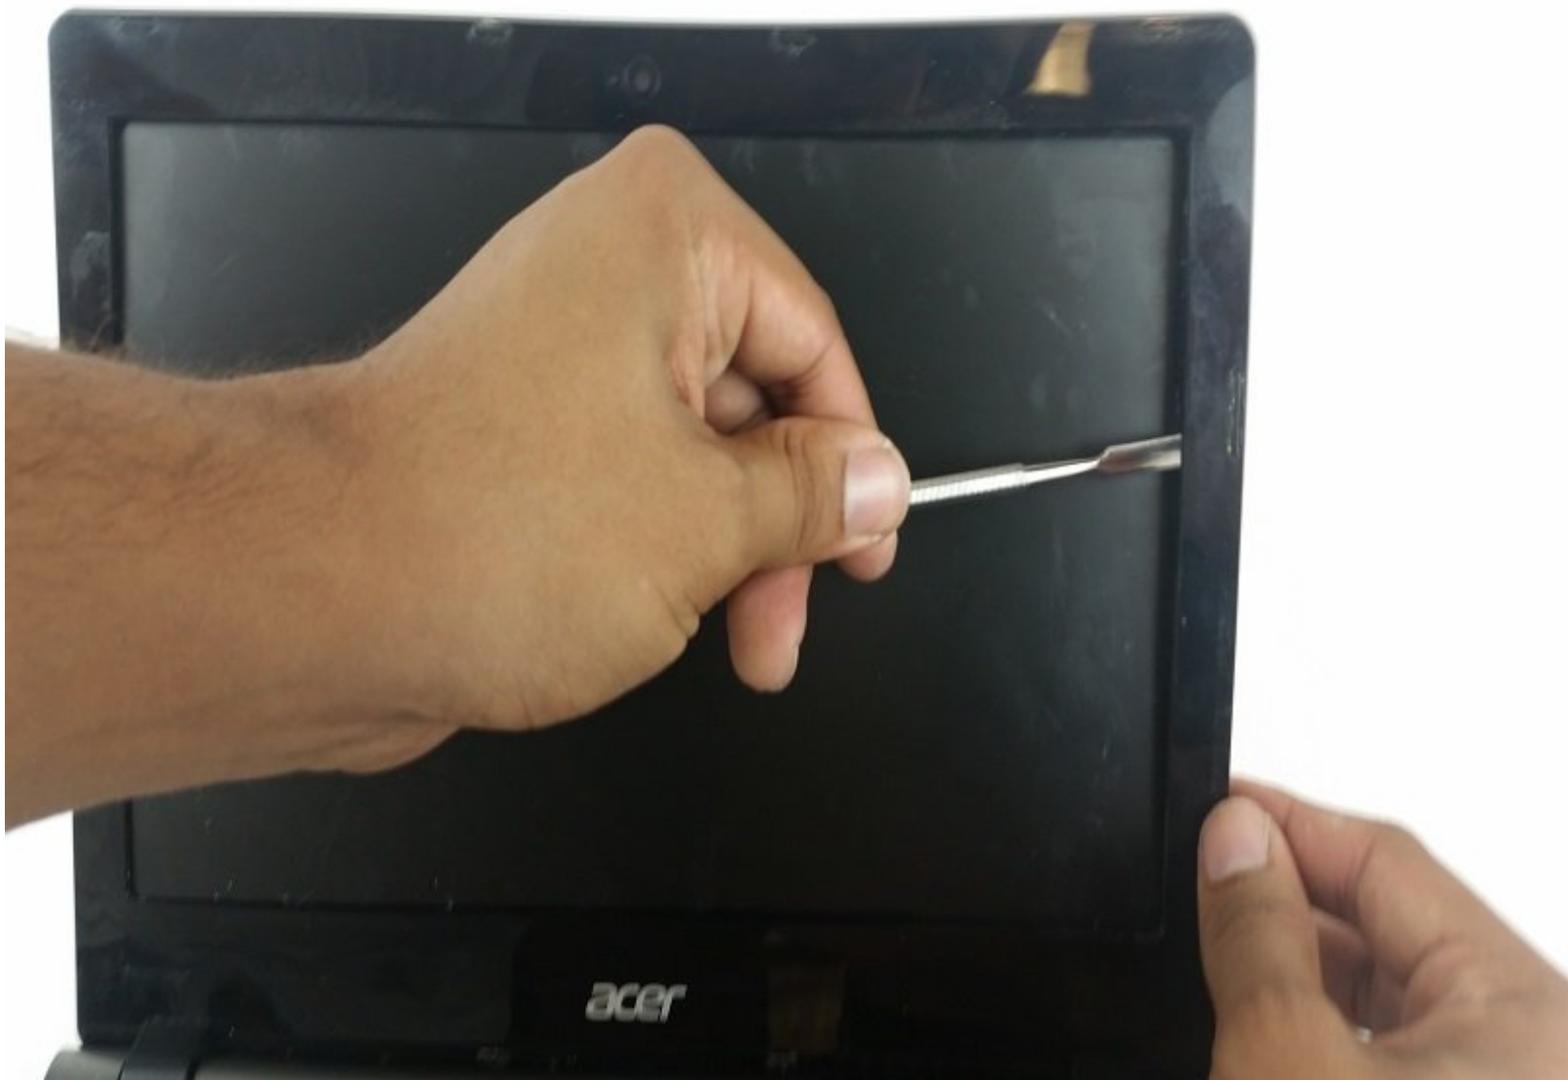

---

## INTRODUCTION


This guide instructs the reader how to disassemble, extract, replace, and reassemble the LCD monitor for an Acer Chromebook C720-2848.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Screen

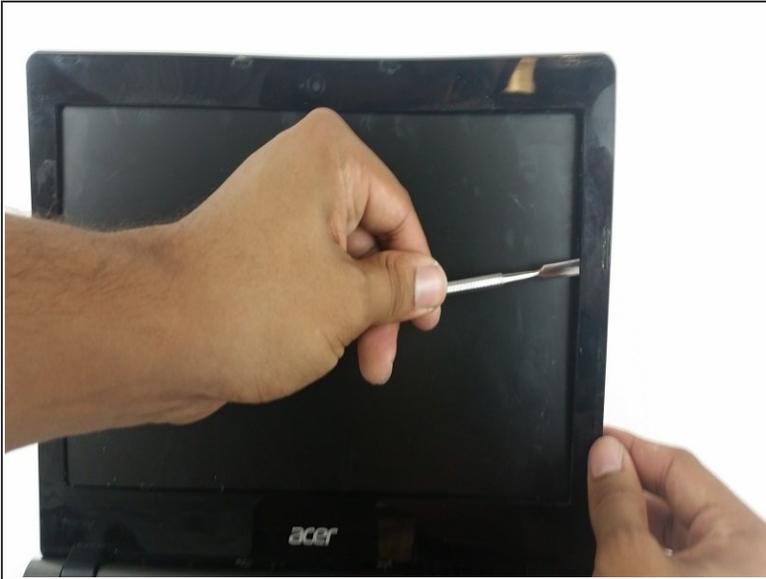

- Insert a metal spudger around the inner side of the screen's plastic perimeter.
- Move along the perimeter while leveraging to pop the faceplate out like so.

## Step 2



- Remove the faceplate's bottom hinges that connect to the body of the device with the metal spudger. This will free the plastic perimeter, which may now be removed.

### Step 3



- Use a Phillips #0 screwdriver to remove the 6 screws in these circled locations.

### Step 4



- Reposition so the screen will lay flat on the keyboard of the laptop.

## Step 5



- Locate the bar code adhesion strip at the base of the screen, and then peel it back carefully. Once peeled back the plug-in will come free.

To reassemble your device, follow these instructions in reverse order.