



Acer Aspire V5-571-6889 CPU Fan Replacement

Written By: Joe Niu



INTRODUCTION

Does the laptop screen not show complete images? Replace it.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — CPU Fan




- Unlock the battery by pushing the button to the right.

Step 2

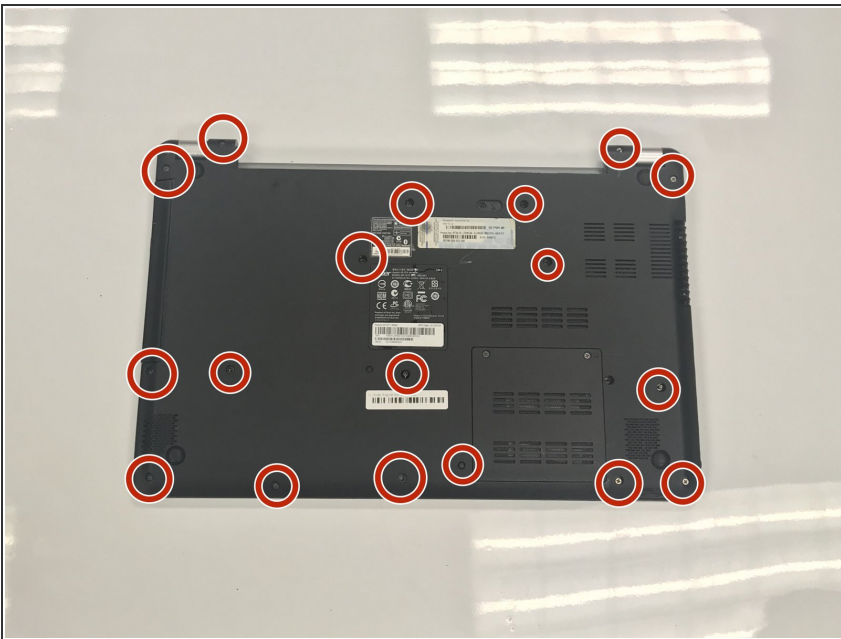


- Unscrew the eighteen 8 mm Phillips #0 screws attached to the laptop.

Step 3

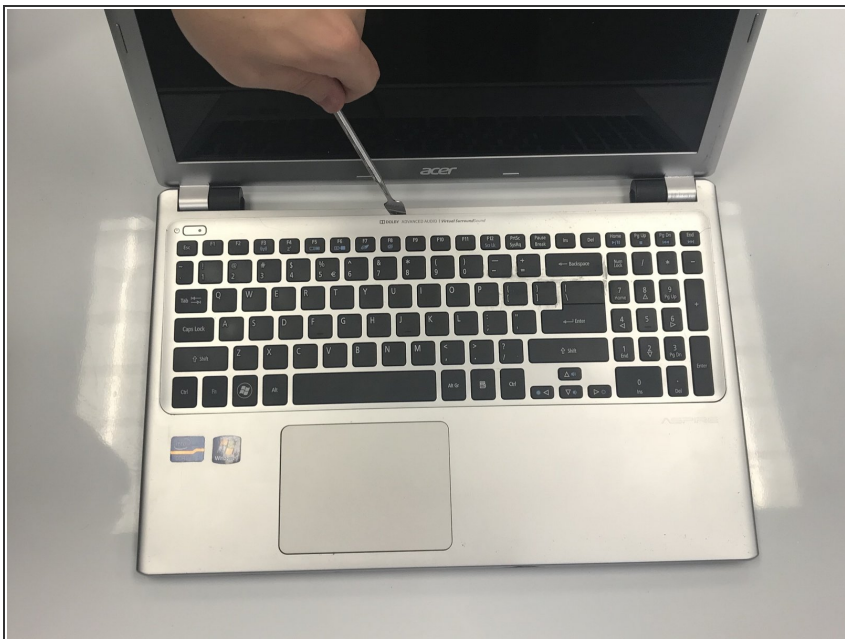

- Pry open the keyboard at the top of the keyboard.

Step 4

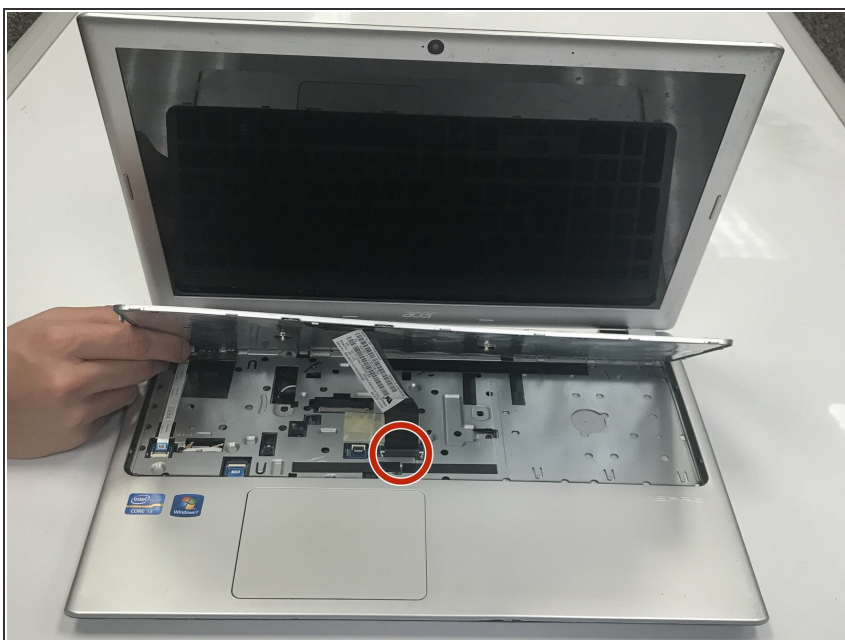

- Disconnect the keyboard label connected to the laptop.

Step 5



- Carefully pry open the keyboard frame.

Step 6



- Locate the Wi-Fi card.

Step 7



- Disconnect the two wires connected to the Wi-Fi card.

Step 8



- Unscrew the two 8mm Philips #0 screws attached to the Wi-Fi card.

Step 9



- Carefully remove the CPU fan.

To reassemble your device, follow these instructions in reverse order.