



Acer Chromebook C720-2827 Battery Replacement

How to replace a faulty/old battery in the Acer Chromebook C720-2827.

Written By: Jason Bechtold



INTRODUCTION

This guide explains how to remove the battery. Before removing the battery, the front panel assembly will also need to be removed. Once the battery is reached, you will need to unplug some cables and unscrew some screws.



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:


- [Acer Chromebook AP13J7K Battery](#) (1)

Step 1 — Back Panel Assembly

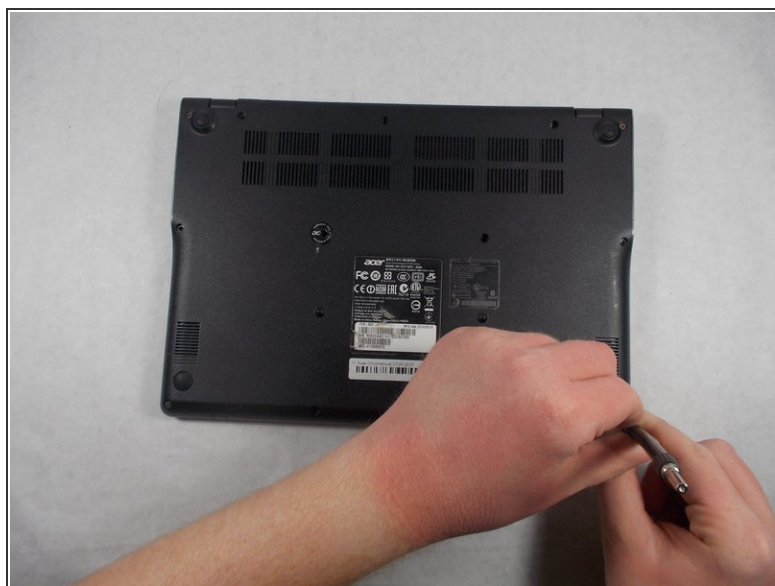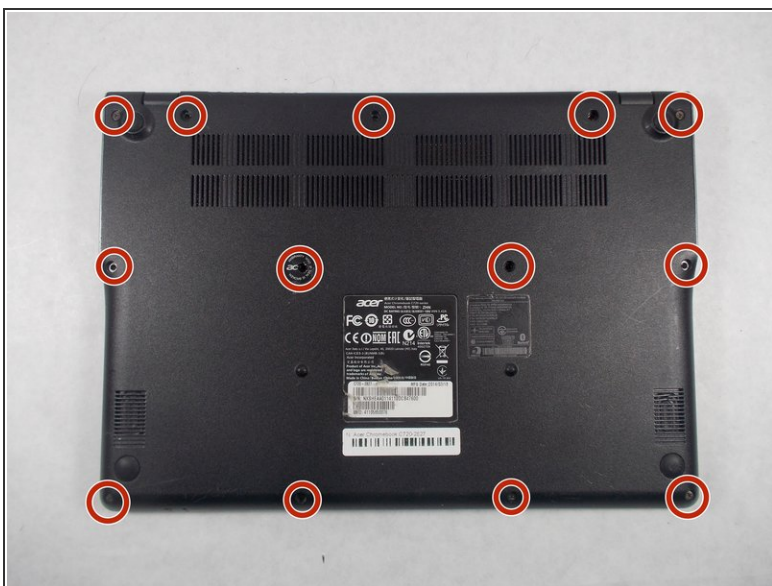

- Remove the thirteen 6.0mm screws on the back panel using your Phillips #1 screwdriver.

Step 2

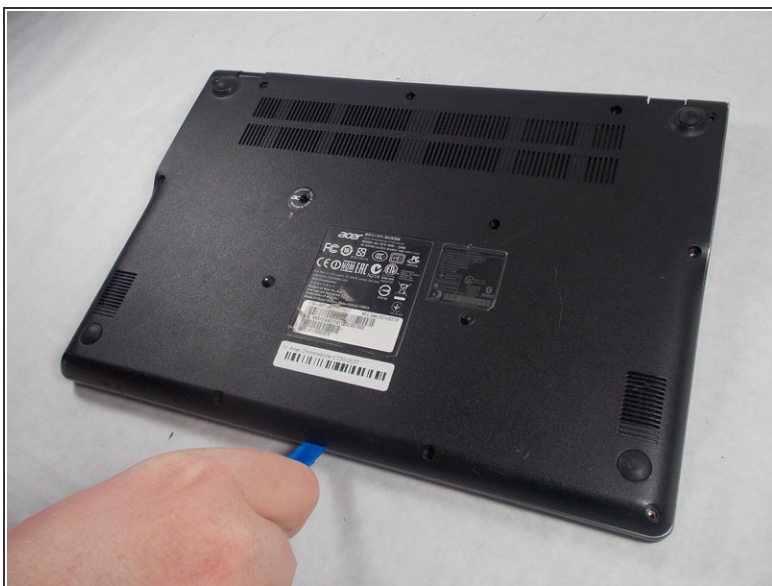



- Pry the back panel open with the plastic opening tool.

Step 3 — Battery



- Remove the two 6.0mm screws securing the battery with your Phillips #1 screwdriver.

Step 4

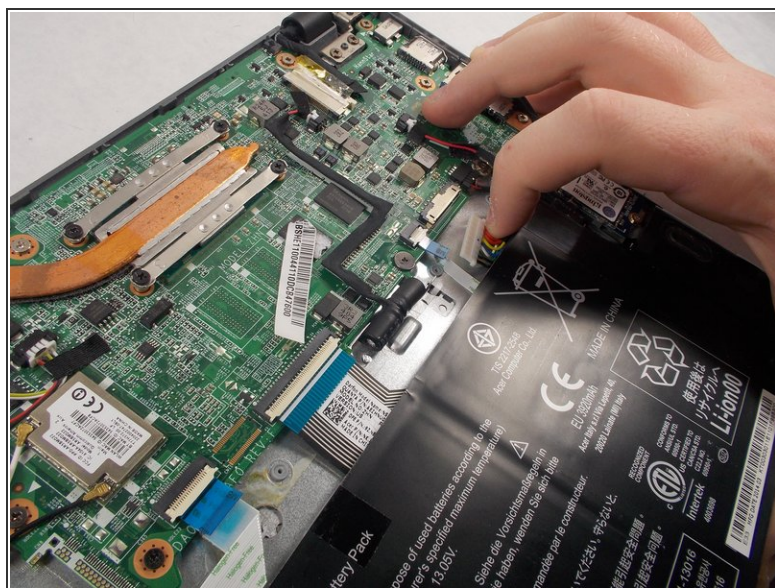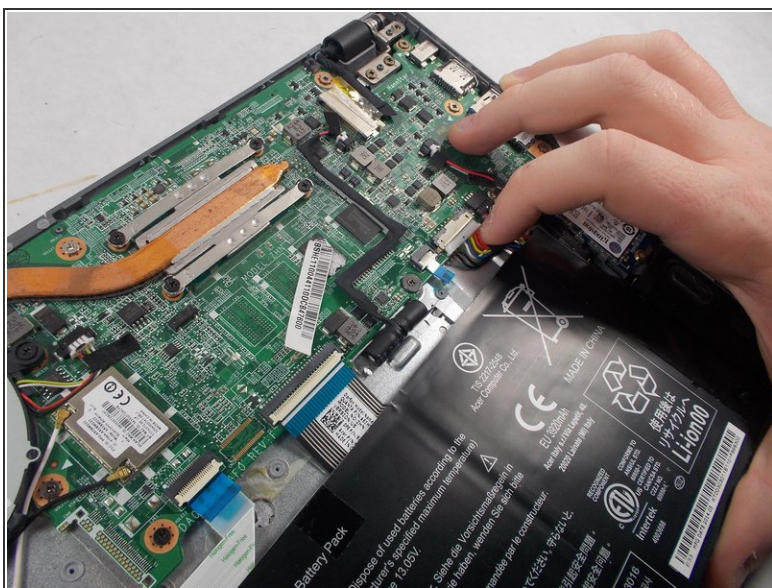

- Carefully pull out the battery wire connected to the battery port.

Step 5



- Slowly lift the battery to remove it from the Chromebook.

To reassemble your device, follow these instructions in reverse order.