



Motorola MOTO W755 Cell Phone Speaker Replacement

This guide shows how to replace the cell phone speaker.

Written By: Roberta Glenn



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [2.5 mm Flathead Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Top Panel



- Use the plastic opening tool to pull peel back screen cover.
- Gently peel back the screen cover from the speaker slit.
- Using the T6 Torx-screwdriver, remove the four 4.3 mm screws from the top panel.

Step 2




- Using the flat end of the plastic opening tool, insert it underneath the plastic cover on the top right corner.
- Move the opening tool around the phone counter clockwise.
- Pop the plastic cover off by twisting the plastic covering tool.

Step 3



- Using a flat head screwdriver, insert it between the metal logic board casing and the top portion of the phone
- Move the plastic opening tool around the phone until part of the casing is popped off.
- You will need to pop in the four plastic fasteners individually from the metal casing to remove it
- Be careful not to rip the cable ribbons that are attached to the logic board and casing

Step 4

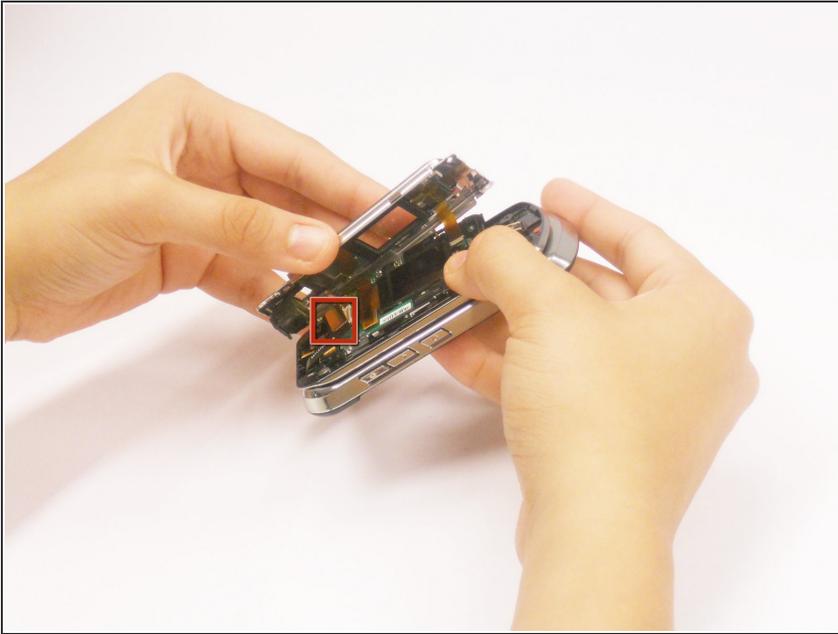

- Use the flat end of the plastic opening tool to unclip the cable ribbon from the logic board

Step 5



- You now have the top panel completely detached.

Step 6 — Speaker



- Flip the top portion of the phone so that the back is facing you.
- Using the flat end of the plastic opening tool, pry the speaker off the back of the phone.

To reassemble your device, follow these instructions in reverse order.