




Acer Chromebook C720-2848 Back Cover Replacement

Replacing the back cover of the Acer Chrombook C720-2848

Written By: Robert Escobio

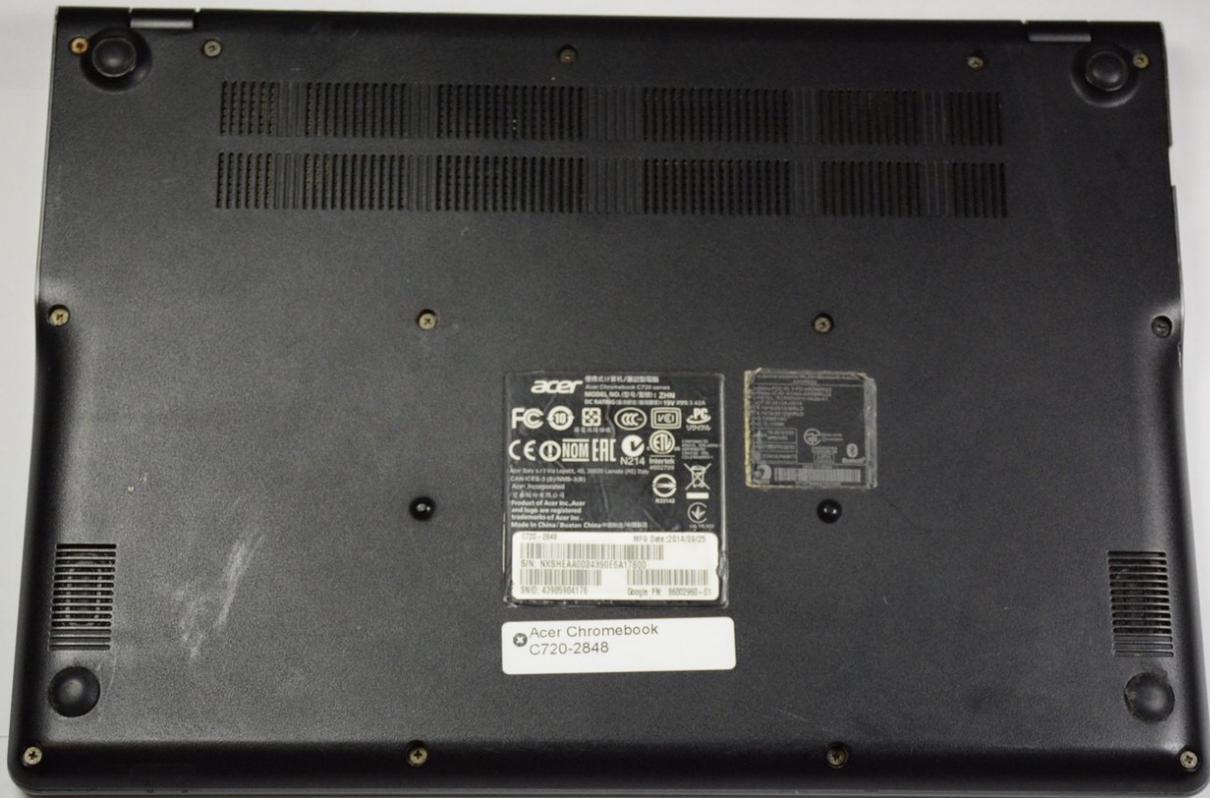


INTRODUCTION

Use this guide to replace the back cover of your device.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover

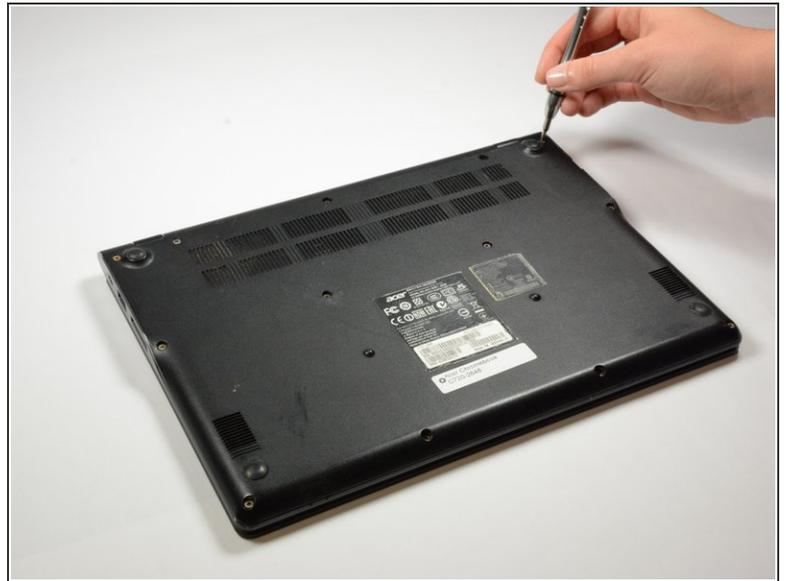

- Use a Phillips head screw driver to remove the 13 screws in these locations.

Step 2

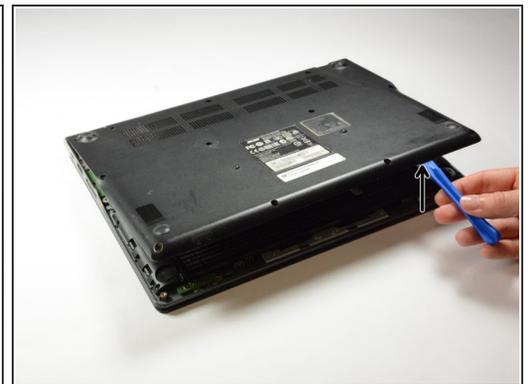

- Use a plastic spudger to pry up the bottom cover and remove it.

⚠ Be sure to pry along other edges if necessary to avoid damaging the back cover.

To reassemble your device, follow these instructions in reverse order.