



Acer Aspire 4810TZ-4120 Hard Drive Replacement

By the conclusion of this guide, the hard drive within the laptop should be swapped with a new one.

Written By: Antonio Kittrell



INTRODUCTION

This guide will show detailed steps to carefully disassemble the laptop, and replace the internal hard drive.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Hard drive




- Lay the laptop upside down.
- Locate and unscrew the seven phillips head screws.

Step 2

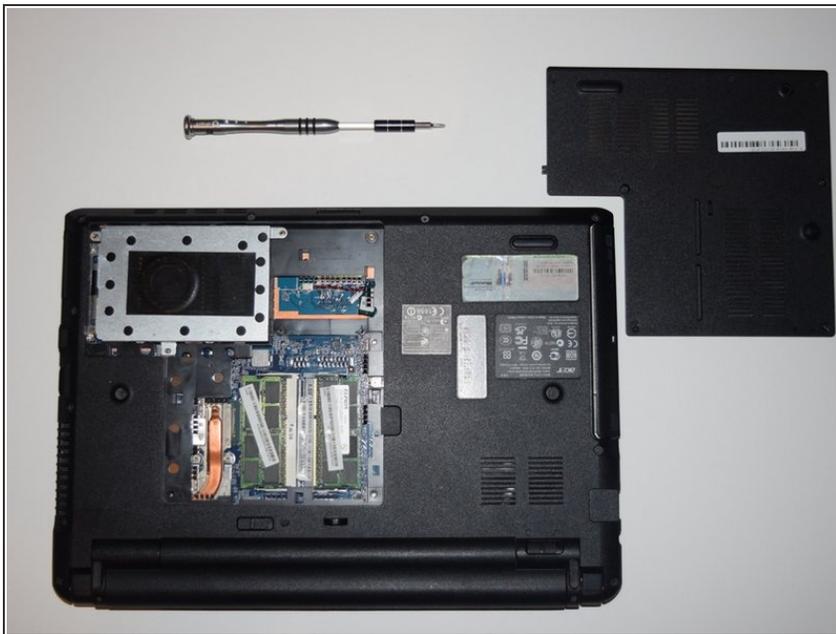

- Remove the cover panel from the laptop

Step 3

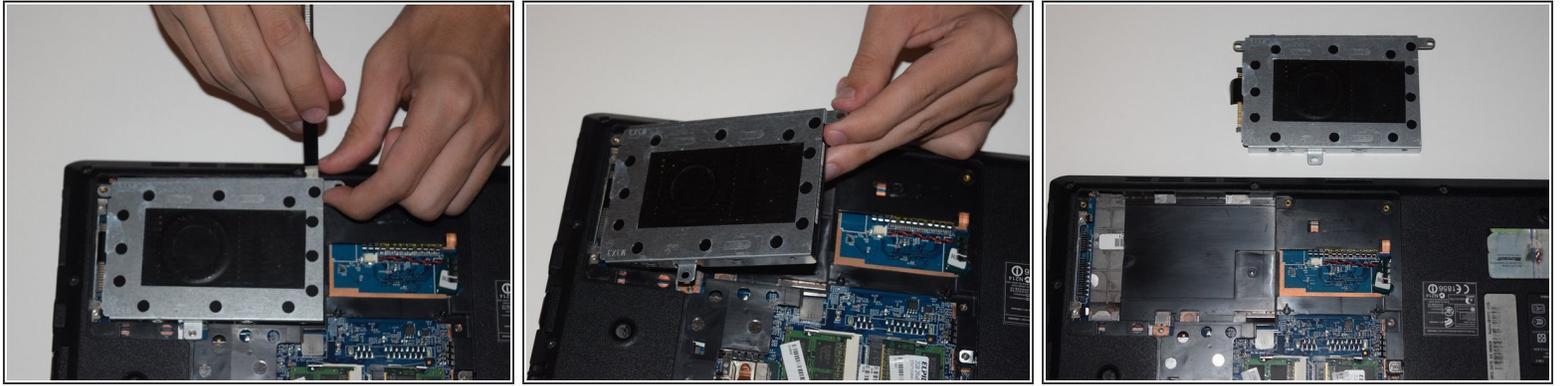

- Remove the hard drive from the laptop by using a Spudger tool to pry it out.

To reassemble your device, follow these instructions in reverse order.