




Kindle Voyage Vibrator Replacement

Replace a broken vibrator in your Kindle Voyage.

Written By: Sean Yap

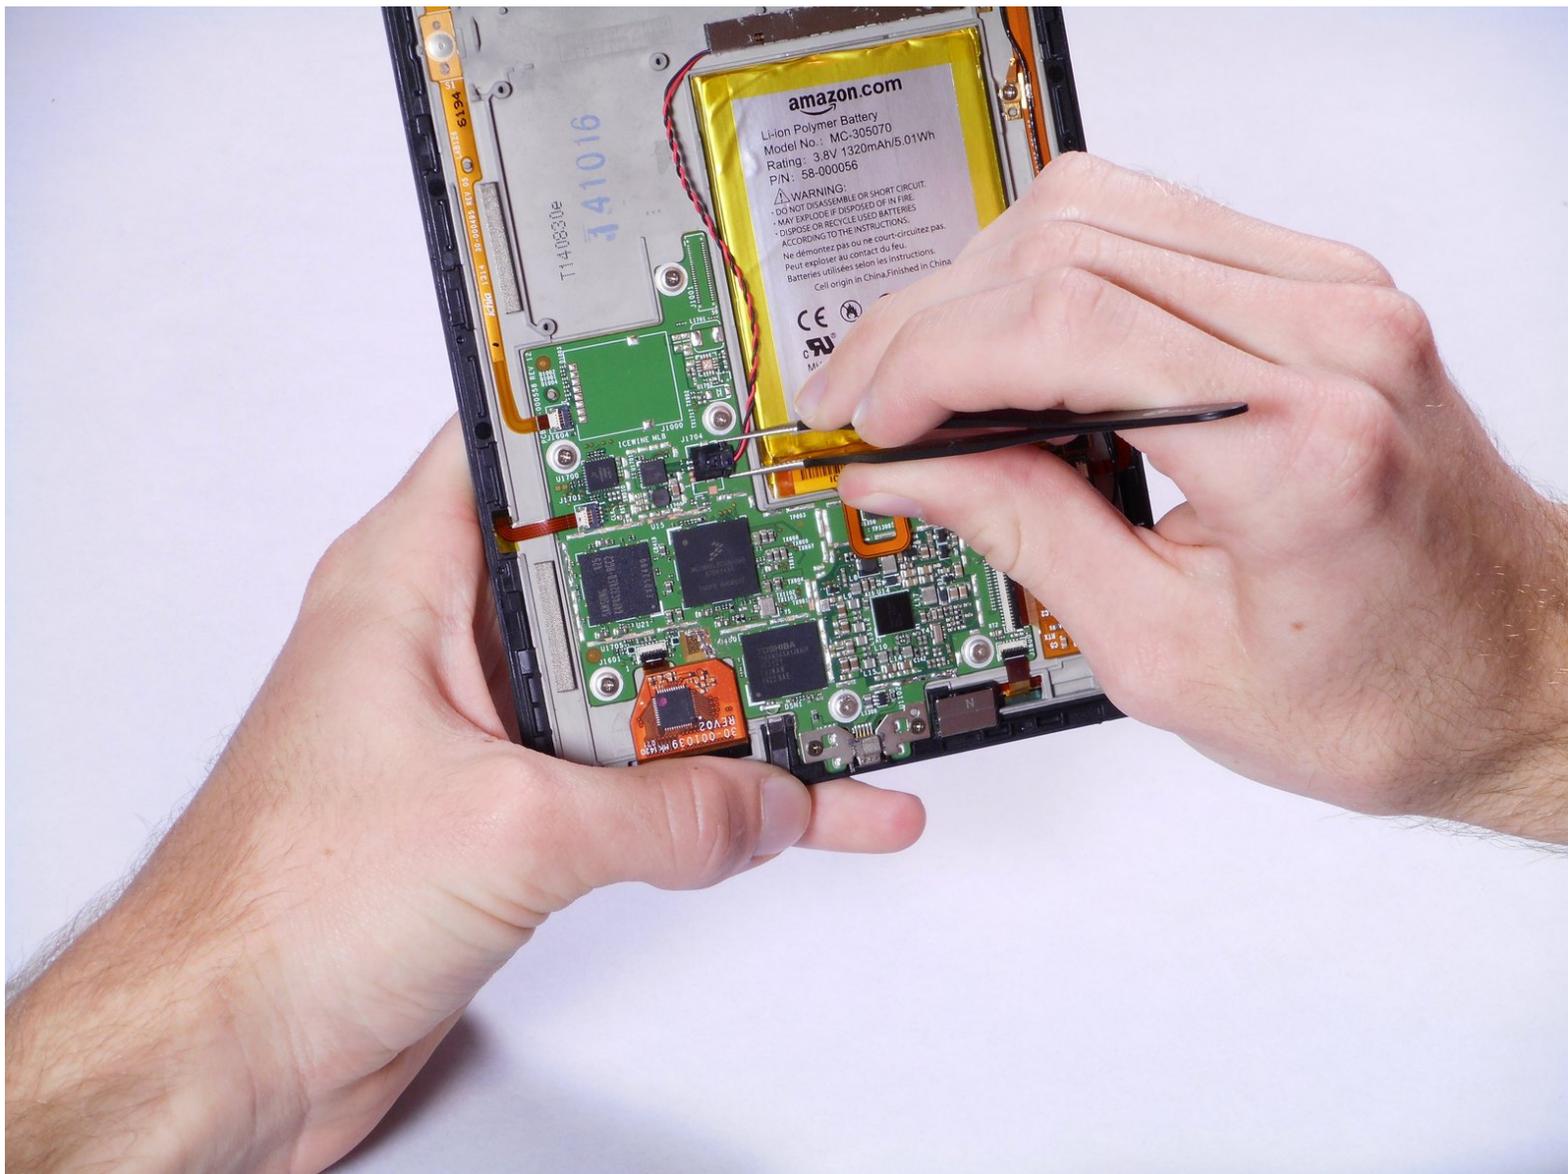

INTRODUCTION

Vibration is a useful tool to ensure the user that a device is responding to the press of a button. This guide shows how to replace the vibrator in a Kindle Voyage should the device fail to vibrate properly.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Back Panel



- Insert a plastic opening tool between the plastic panel shown on the device.
 - Use the tool to pry the plastic away from the device.
- i** There will be adhesive holding this piece of plastic to the device. You may have to pull pretty hard to get it separated.

Step 2




- Use an aluminum driver attached with a Phillips head size #00 to remove the four 3mm screws shown in the picture. For reassembly, note that the top two and bottom two screws are different sizes.

Step 3





- Once the screws are removed, the back panel can slide off the device.

Step 4

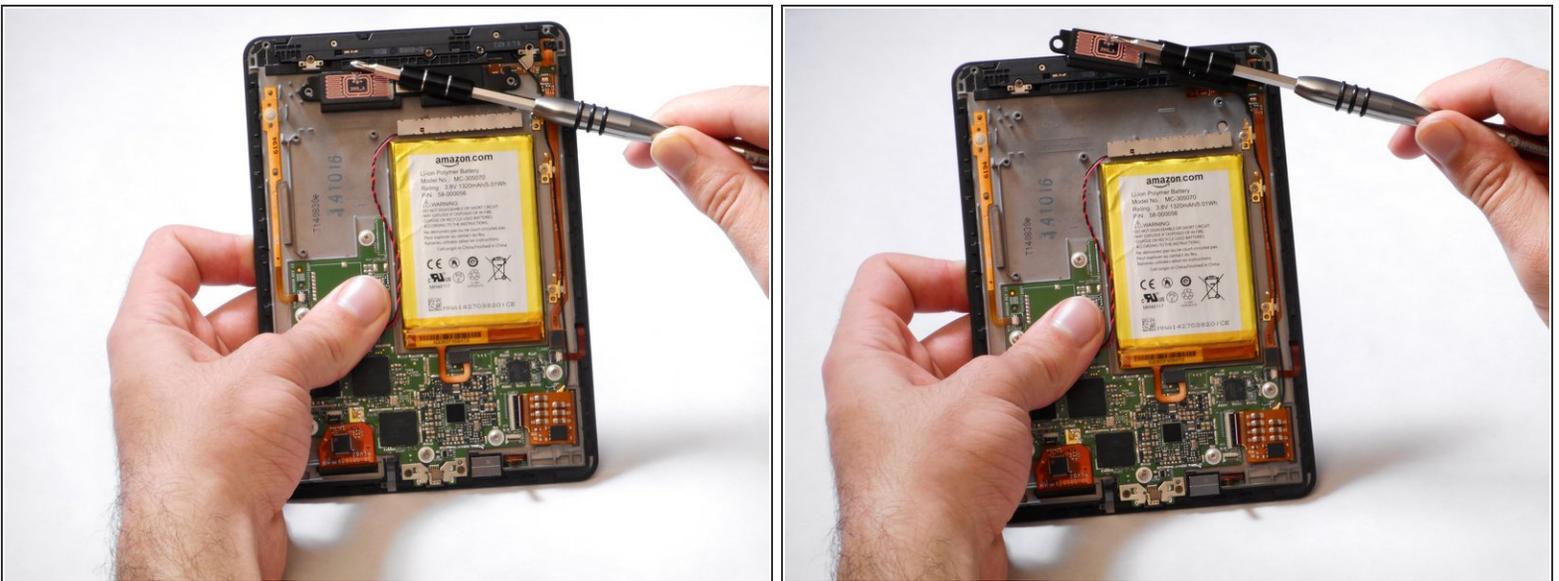

- Remove the magnetic component with the magnetic head of the aluminum driver.

Step 5 — Vibrator

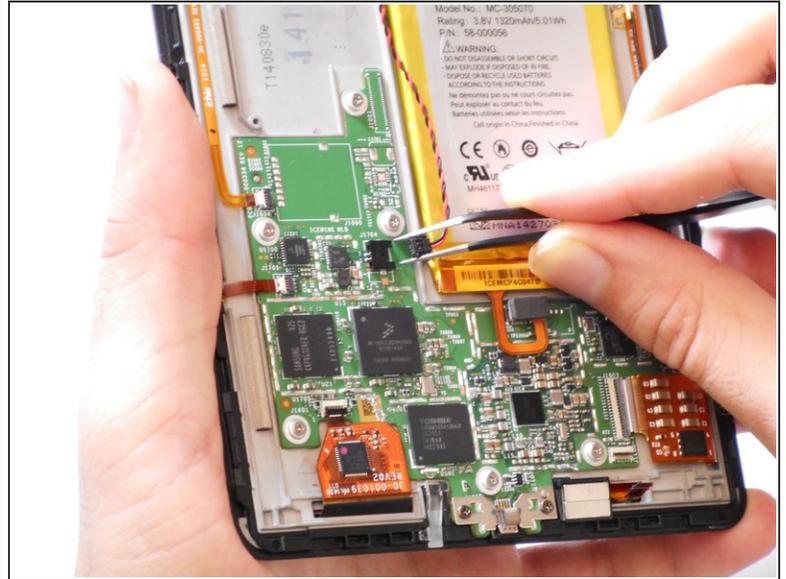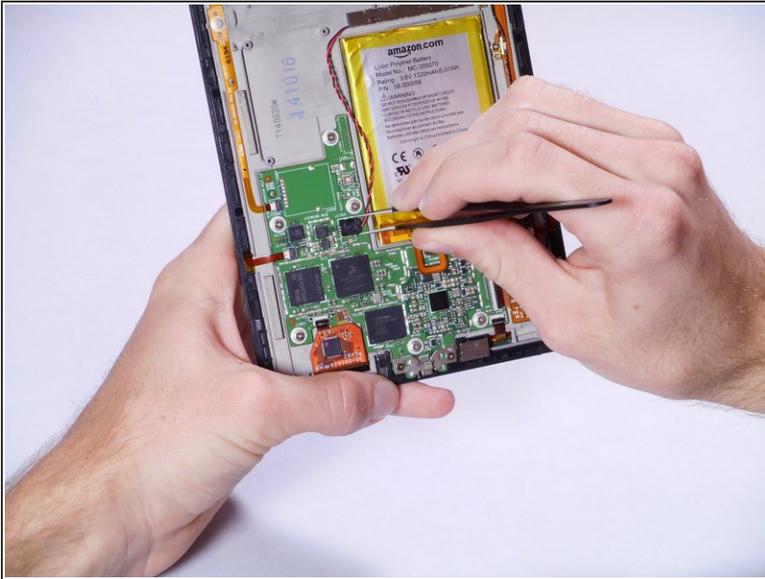

- Use tweezers to pinch in the sides of the vibrator cable and slide it out of its housing.

Step 6



- Gently peel the vibrator off of the device.

To reassemble your device, follow these instructions in reverse order.