




# HP Pavilion 15-d035dx RAM Replacement

This shows how to remove and replace the RAM in the HP Pavilion 15-d035dx RAM.

Written By: Meredith Shaffer

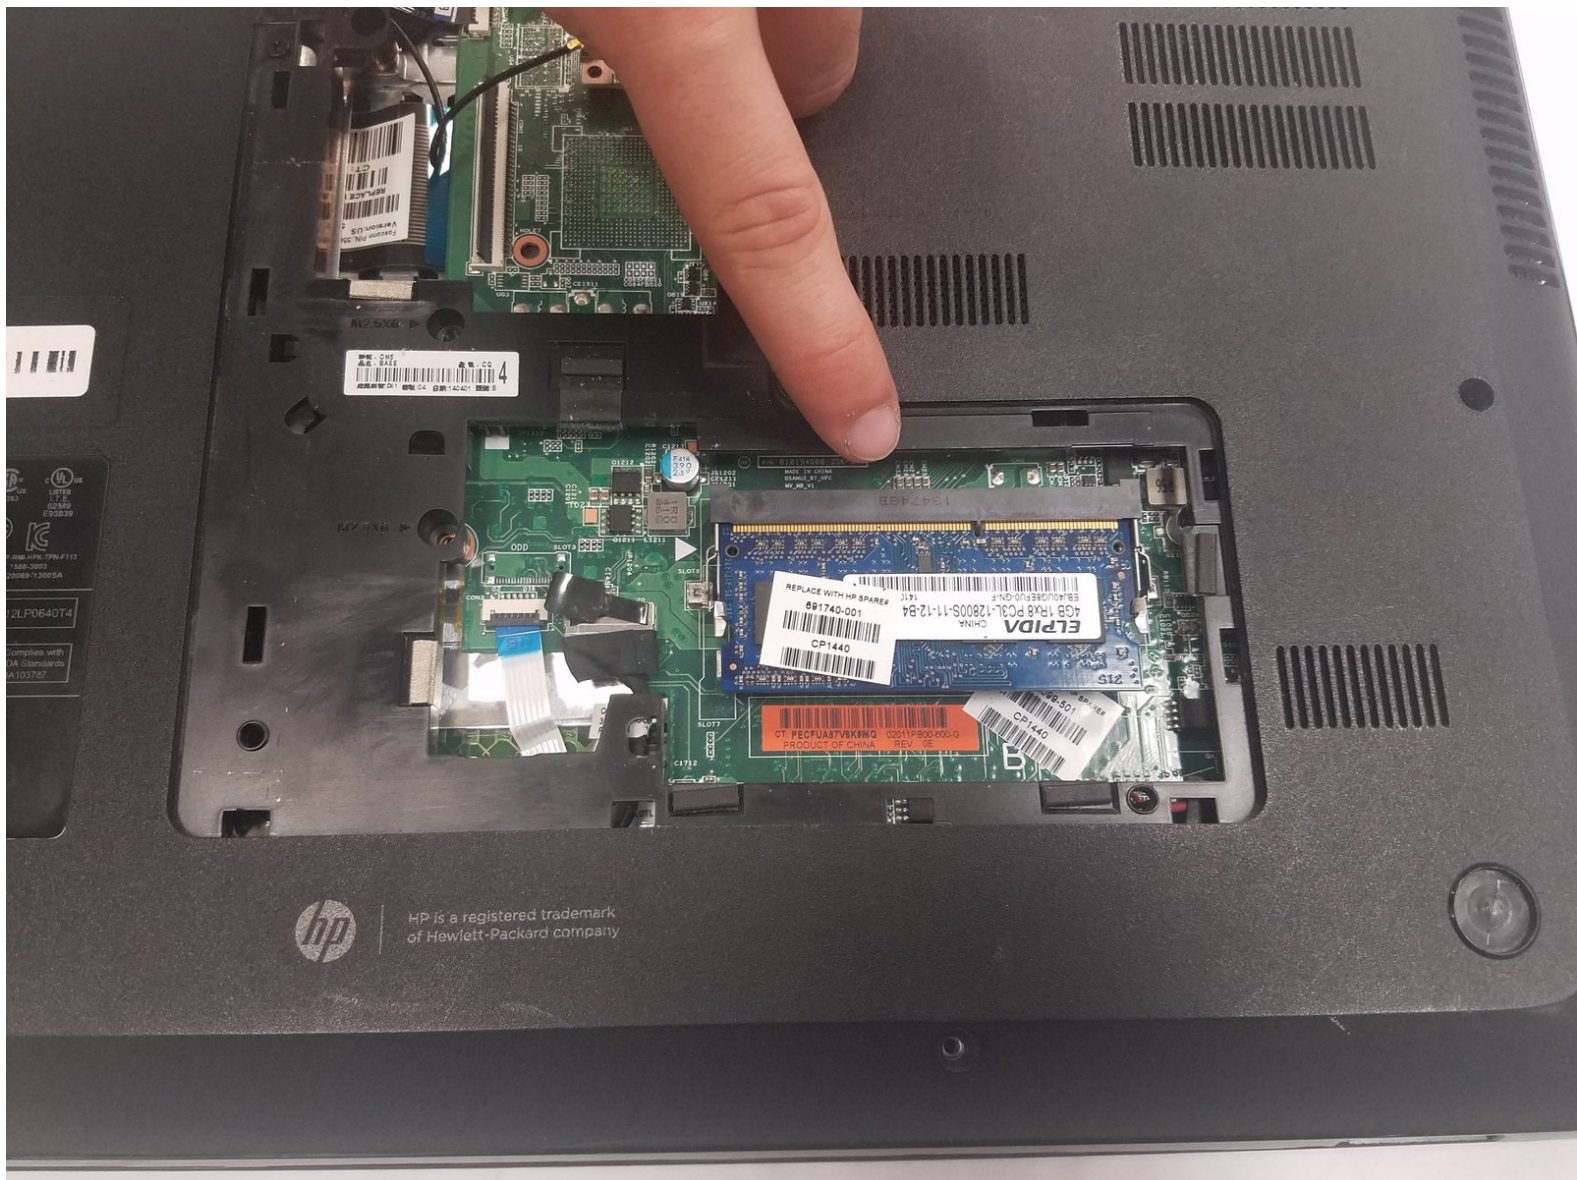

# INTRODUCTION

In this guide you will learn how to safely remove and replace the RAM in this laptop.



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



## PARTS:


- [RAM](#) (1)

## Step 1 — Battery



- Switch the first lock, with the padlock icon, to the open position.
- Then hold the second lock with the battery icon to the open position, while sliding out the battery pack.

## Step 2 — Back Panel

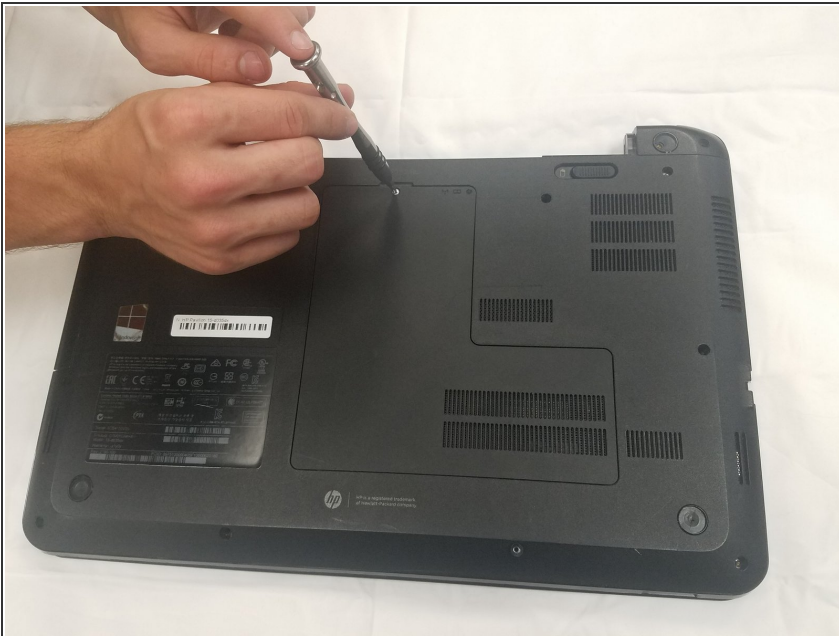


- Flip the laptop so that the back is facing upwards.
- Locate the small screw on the back that holds the "L" shaped panel.
- Using a 0 Phillip Screwdriver (4.0x4.7mm sized screw), unscrew the screw. It will not become detached from the panel but it will allow you to remove the back panel.



### Step 3



- Using a plastic opening tool, pry the back panel from the computer, going all the way around it.

 This will take a good amount of force and you will hear clicking noises as you snap each of the connections out of place.

### Step 4




- Once the back panel is completely removed you will have access to the RAM and many other connections in the computer.

## Step 5 — RAM



- Locate the RAM, it is about a 2 inch by 1 inch rectangle that is blue in color.

## Step 6

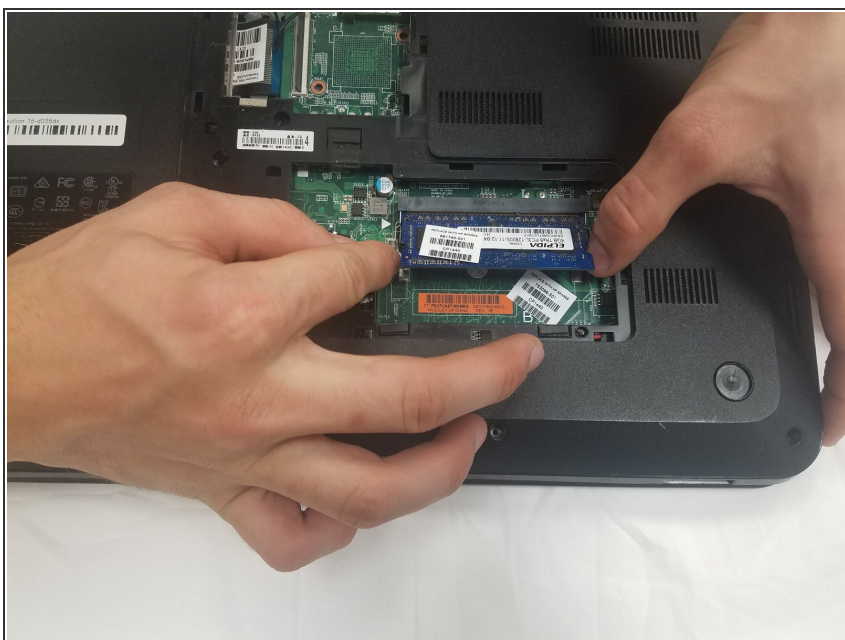

- Press down on the small silver latches on either side of the RAM, the RAM should pop up. While doing this you will hear a faint click.

## Step 7



- Finally remove the RAM by pulling it away from the black connection panel.
- Once the RAM is removed you can put in the replacement RAM.

To reassemble your device, follow these instructions in reverse order.