


HP Pavilion 14-v062us Keyboard Replacement

This guide will show you how to replace the...

Written By: Flora Peterson

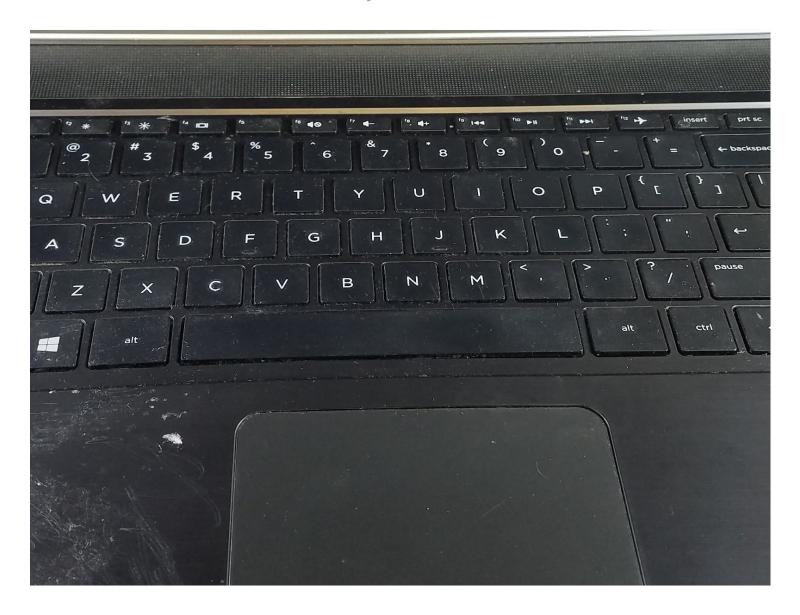


INTRODUCTION

This guide will show you how to replace the keyboard on your HP Pavilion 14-v062us.

TOOLS:

Phillips #1 Screwdriver (1) Metal Spudger (1) iFixit Opening Tool (1) Spudger (1)

Step 1 — Battery

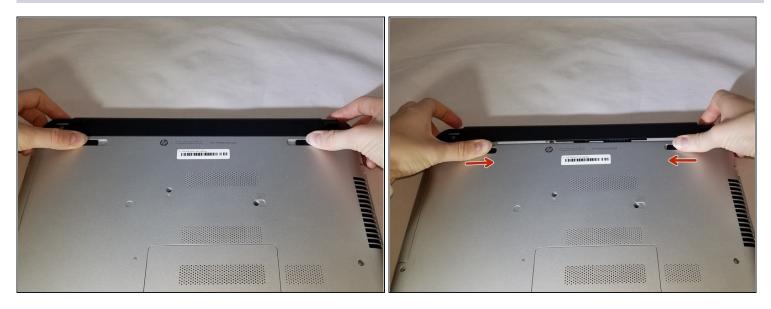

- (i) Power laptop off and make sure it is not plugged into charger
- Push inward towards the center of laptop (it may take a lot of pressure). Battery should release once buttons are completely pushed in






• Lift the battery upwards and out from the laptop

Step 3 — Keyboard



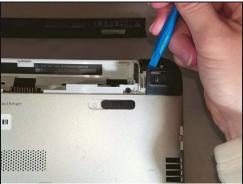



- Remove rectangular rubber tops with a spudger
- Remove the two 4.60 mm PH#1 screws located under rectangular rubber tops.
- Remove plastic edge covering with the blue plastic opening tool.
- Remove two 4.63 mm PH#1 screws located under plastic edge covering.



- Use Phillips screwdriver #1
- Remove all nine 7.09 mm PH#1 screw black screws including small rectangular cover.
- Remove the three 7.14 mm PH#1 screws.
- Remove the one 7.09 mm PH#1 screw that will be underneath the small rectangular cover





- Remove disc tray
- Locate screw within computer that is inside of where the disc tray was
- Using a Phillips #1 screwdriver, unscrew the screw
- Set laptop down and open laptop so the keyboard is facing you

Step 6







- Using a spudger or plastic opening tool, pry along siding of keyboard, where it connects to the rest of the laptop
- Pry until you are able to lift entire face and keyboard
- Only cables should be connecting it underneath








- Disconnect/ unplug cables using plastic opening tool.
- Separate the keyboard panel from the laptop with your hands.
- Turn around the laptop and lay it flat.

Step 8

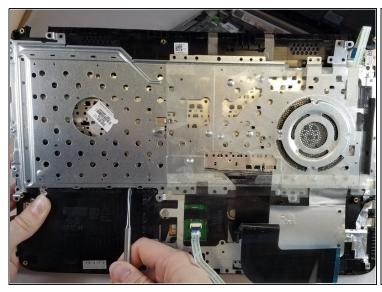



- Use a spudger to pry around the first layer of the silver panel until you are able to remove it
- i Only use a metal spudger as a last resort



- Using a spudger tool, start prying around the second layer of the silver panel until you are able to remove it
- *(i)* Only use a metal spudger as a last resort

To reassemble your device, follow these instructions in reverse order.